



Essential Home HC-409 Teardown

The guide will provide a detailed teardown guide from beginning to end.

Written By: Garland Poon



INTRODUCTION


The guide will provide a detailed teardown guide from beginning to end.



TOOLS:

- [Flat-head Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Removed protective grill

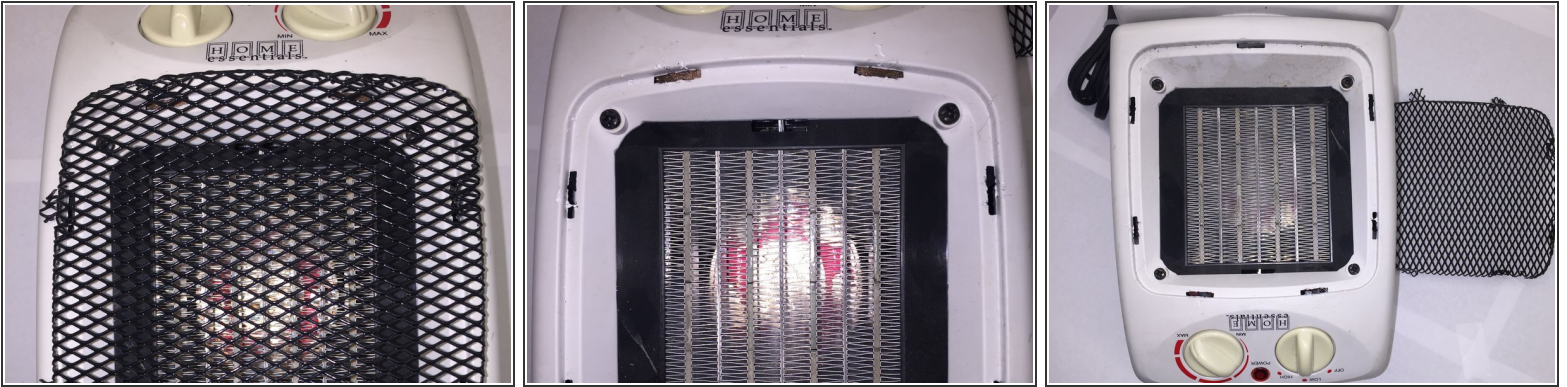

- Remove the grill from corner to corner.

Step 2 — Unscrewed the four screws in the front of the heater



- Carefully remove the screws and place them aside.

Step 3 — Removed filter cover on the back of the heater



- As seen in the pictures, set the screwdriver on the edge of the cover and pry it out.

Step 4 — Remove safety sticker



- Remove sticker in order to open the plastic casing of the heater.

Step 5 — Pry the product in half






- Slowly and carefully pry the plastic casing.

Step 6 — Remove the switch



- Apply pressure onto the sides of the switch while pushing it outwards.

Step 7 — Remove fan

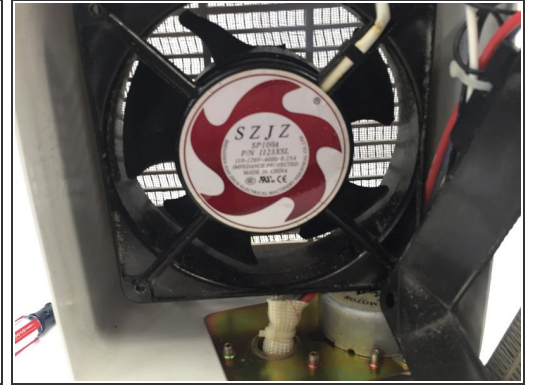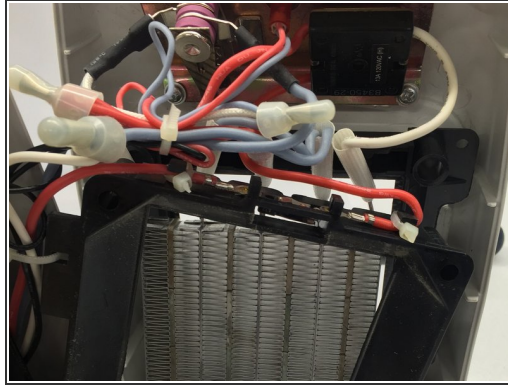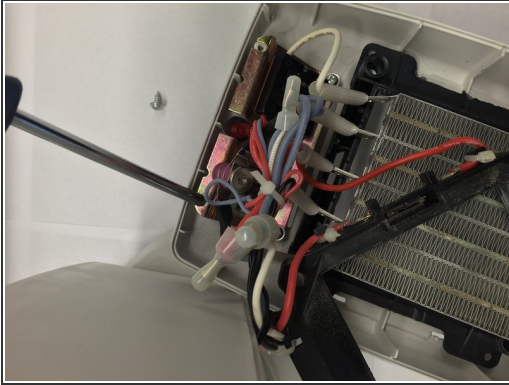

- Unscrew the four screws located in the rear of the device. Remove the fan.