

Open all the windows simultaneously.

How to open all the vehicle windows simultaneously before getting into the car, even remotely.

Written By: David Spalding



INTRODUCTION

This is a documented but easily forgotten function of the car. It's handy if you want to let hot air out of the vehicle as you walk up to it.

Warning: unlocking the car and opening windows from a distance makes it vulnerable to thieves, even carjackers. Practice situational awareness and enforce personal safety at all times.

Sections

- 1. Open all the windows with the door lock
- 2. Open all the windows with the remote transmitter
- 3. Close all the windows with the door lock

Step 1 — Open all the windows with the door lock








- Insert the ignition key in the driver's door lock.
- Turn the key clockwise to unlock.
- Hold the key in this position for 5 seconds.
- (i) All the windows begin rolling down. Releasing the key to the neutral position stops the windows.

Step 2 — Open all the windows with the remote transmitter (key fob)

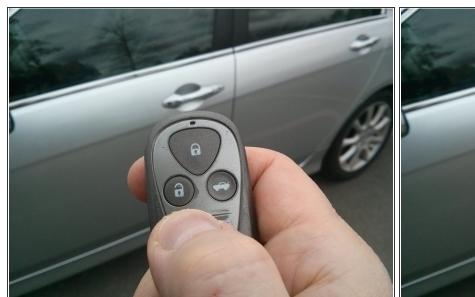



- Press the door unlock button on the remote transmitter.
- Press and hold the door unlock button on the remote transmitter a second time.
- All the windows roll down simultaneously. Releasing the button stops the windows where they are.
- If you press and hold the unlock button again within 10 seconds, the windows continue rolling down further.
- Hold the button down for only a moment to crack the windows a few inches.

Step 3 — Close all the windows using the door lock.





- To close all the windows at once, insert the ignition key in the driver's door lock.
- Nisually verify that no one, particularly children, have hands or other body parts in the windows when closing!
- Turn the key counterclockwise once to lock the vehicle.
- Release the key to the neutral position.
- Turn and hold the key counterclockwise again.
- The windows begin closing in 5 seconds.
- (i) It's not possible to close all the windows with the remote transmitter.