




Grace Digital Mondo Front Panel Replacement

This is a pre-requisite tear down guide for the front panel.

Written By: Zachary Nelson

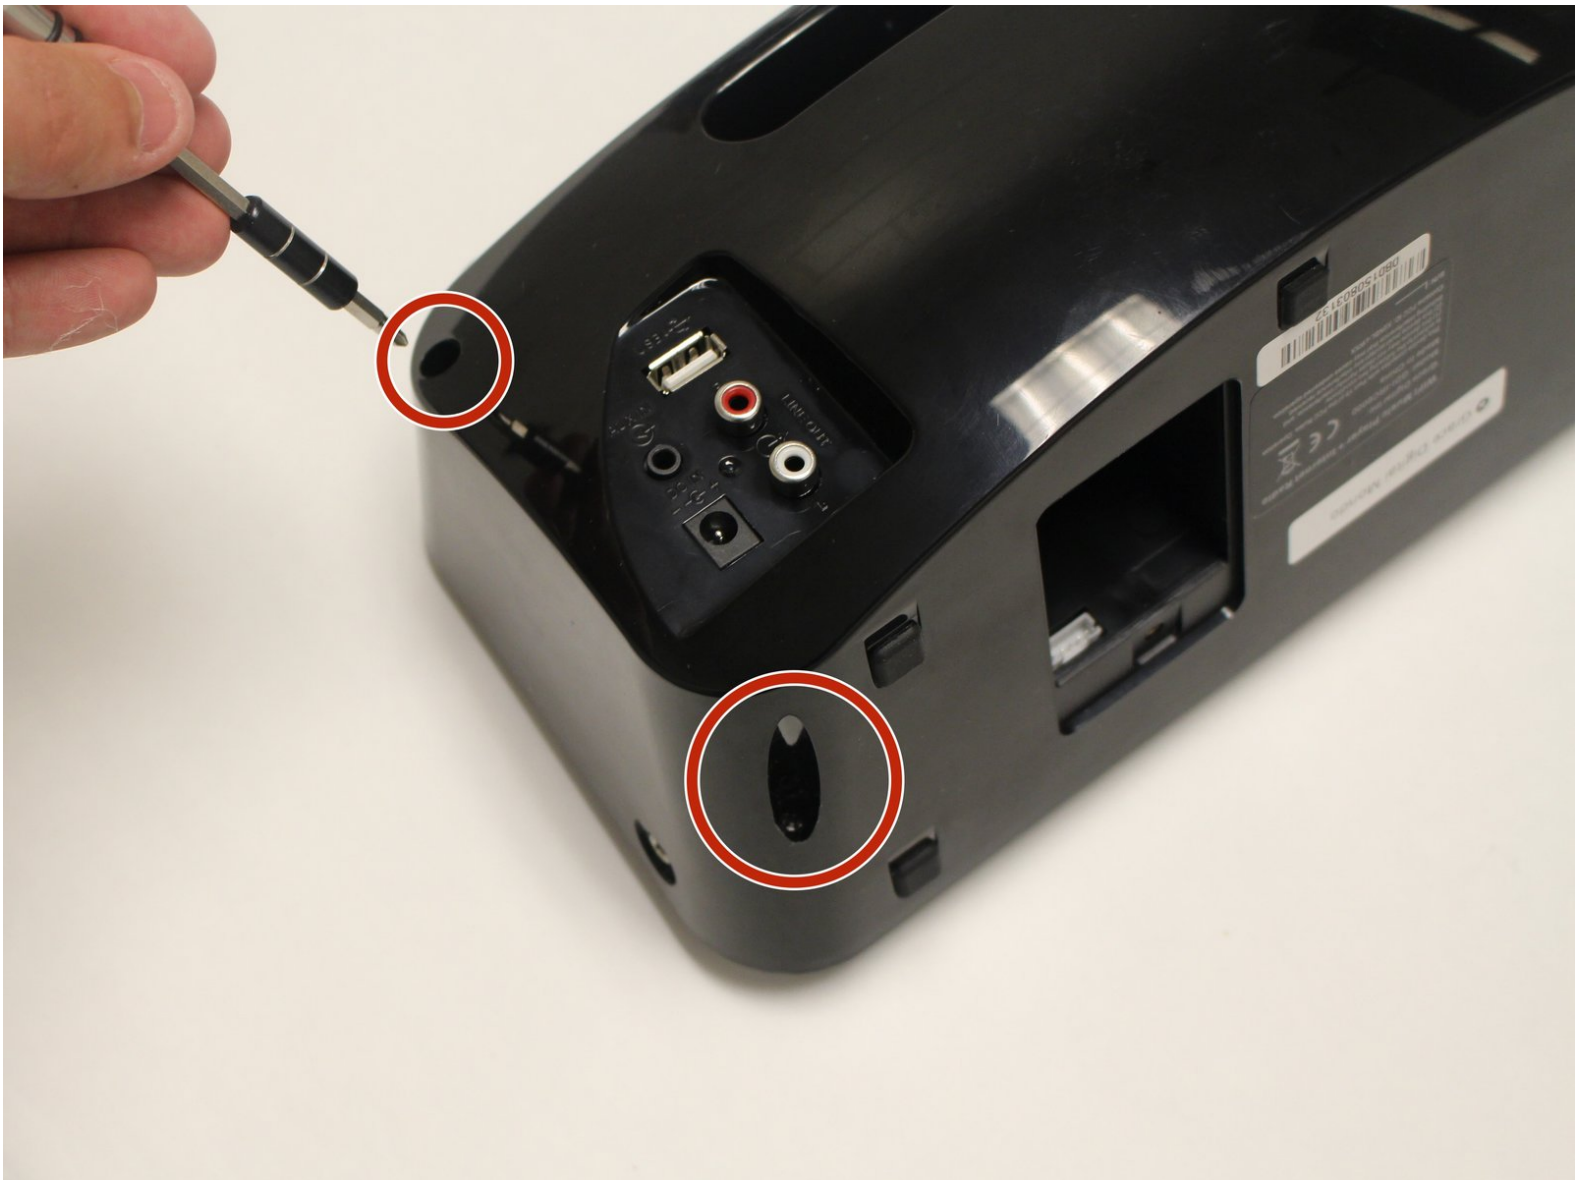

INTRODUCTION

The replacement front panel guide is primarily a first step guide to delve into the other components of the device. In the case you have a front panel from another Grace Digital MONDO, this is the guide for you.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Front Panel




- Remove (2) screws (14 mm) with a PH1 screwdriver on the device.
- There is one screw on the back left, and another just below it on the bottom of the device.

Step 2



- Use a plastic spudger to remove the front preset selection buttons.
 - ❗ We recommend you remove all of them for easier access.
- Gently reach underneath and pull off the mesh speaker cover. It only clips in so don't worry about breaking anything.


Step 3

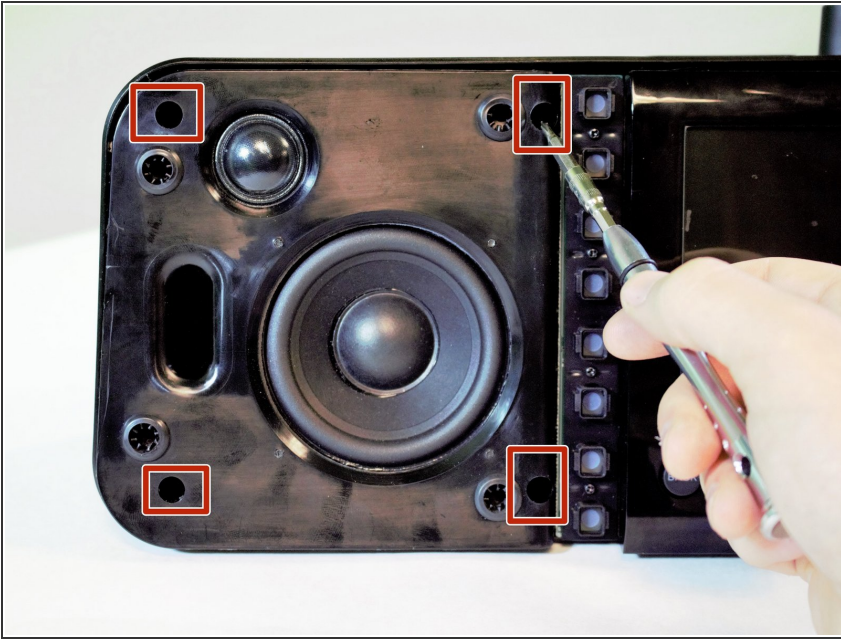

- Remove (4) screws (14 mm) with a PH1 screwdriver on the front panel by the speaker.


⚠ Be careful with these screws, as they can be stripped easily.

Step 4

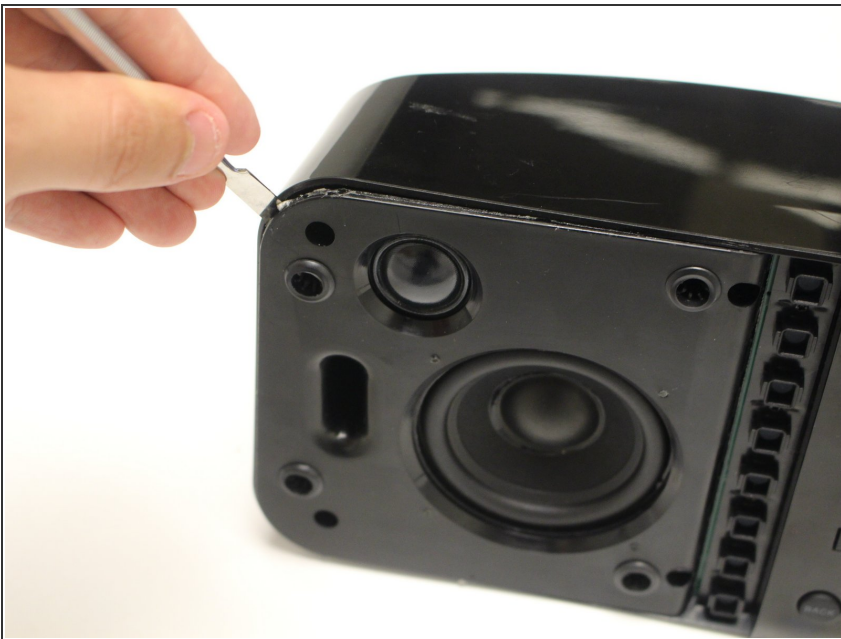

- Move the metal spudger around the front panel to remove any adhesive attaching the front panel to the device.
- Pull apart the front panel from the device with help from the metal spudger.

Step 5

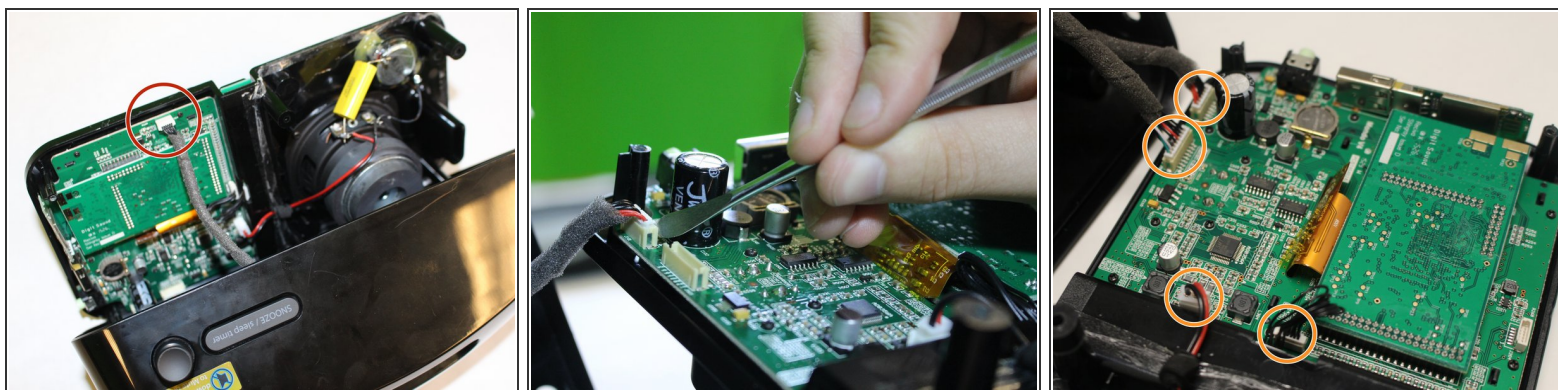

- Detach a pin connector at the top of the device using a metal spudger to open up the inner components.
- Detach (4) pin connectors inside using a metal spudger to separate the front panel from the rest of the device.

To reassemble your device, follow these instructions in reverse order.