



SVP 5800 Battery Replacement

This guide shows how to replace dead or damaged batteries.

Written By: Joseph DoctorPinkney



INTRODUCTION

This guide gives steps to locate where the batteries are and how to properly remove them for replacement.

Step 1 — Battery



- To open the battery compartment, slide the main bottom button to the right and up.

Step 2



- Remove the dead or damaged batteries from the compartment.

To reassemble your device, follow these instructions in reverse order.