

HP Photosmart c3180 Control Panel Circuitry Replacement

Written By: Jim



🖌 TOOLS:

Spudger (1) TR10 Torx Security Screwdriver (1)

Step 1 — Top Panel of HP Photosmart c3180 printer



- Before disassembling your printer, be sure that the printer has been unplugged to avoid any risk of injury.
- Rotate the printer 90 degrees counter clockwise so that the side panel next to control panel is facing you.
- Remove the two T10 12mm Torx screws from the left side panel.



- Firmly pull the the back of the side panel until it separates from the body of the printer.
- Rotate the side panel upwards while pulling it towards yourself to remove the panel.

Step 3



- Rotate the printer 90 degrees clockwise.
- Grasp the paper tray and rotate it down.
- Insert your fingers into the slot in the printer door and pull to rotate the gate down.



- Rotate the printer 90 degrees clockwise.
- Remove the two T10 12 mm Torx screws.
- Grasp both sides of the side panel and pull it forward to remove the panel.




Step 5

- Rotate the printer 90 degrees counter clockwise.
- Lift the scanner lid to expose the scanner glass.




- Remove the two T10 12 mm Torx screws.
- ⚠ Do not attempt to lift the top panel off the printer yet because it is still connected to the printer body by a cable.

Step 7

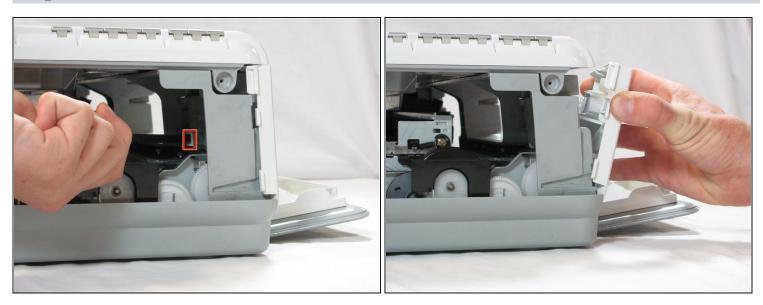

- Rotate the printer 90 degrees counter clockwise.
- Inside the printer is a small white tab. Press it inward with a spudger until a pop is heard.
- Remove the front panel by grasping its front and pulling away from the printer.

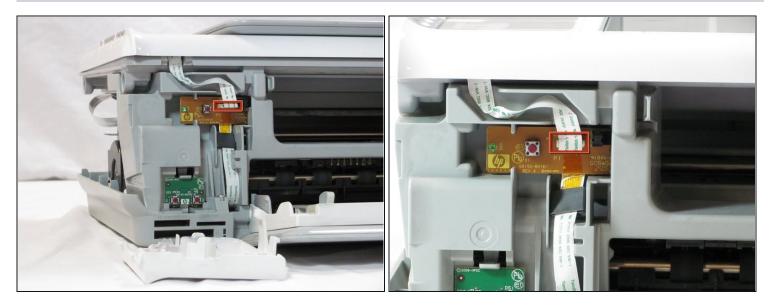

- Rotate the printer 90 degrees clockwise.
- Remove the cable connecting the top panel of the printer to the power button assembly.



Step 9


• Carefully lift the top panel of the printer away from the printer body.

Step 10 — Control Panel Circuitry



- Set aside the printer body.
- Remove the three T10 12 mm Torx screws from the back of control panel circuit board.

Step 11

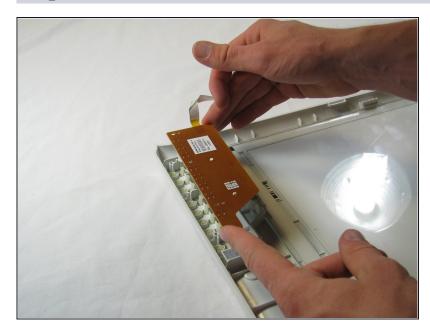

• Using both hands, carefully lift the control panel circuit board from the top panel of the printer.

To reassemble your device, follow these instructions in reverse order.