




# Canon PowerShot SD1200 IS Function Button Board Replacement

Removing the function button circuit board from your Canon PowerShot SD1200 IS.

Written By: Jeff Casper

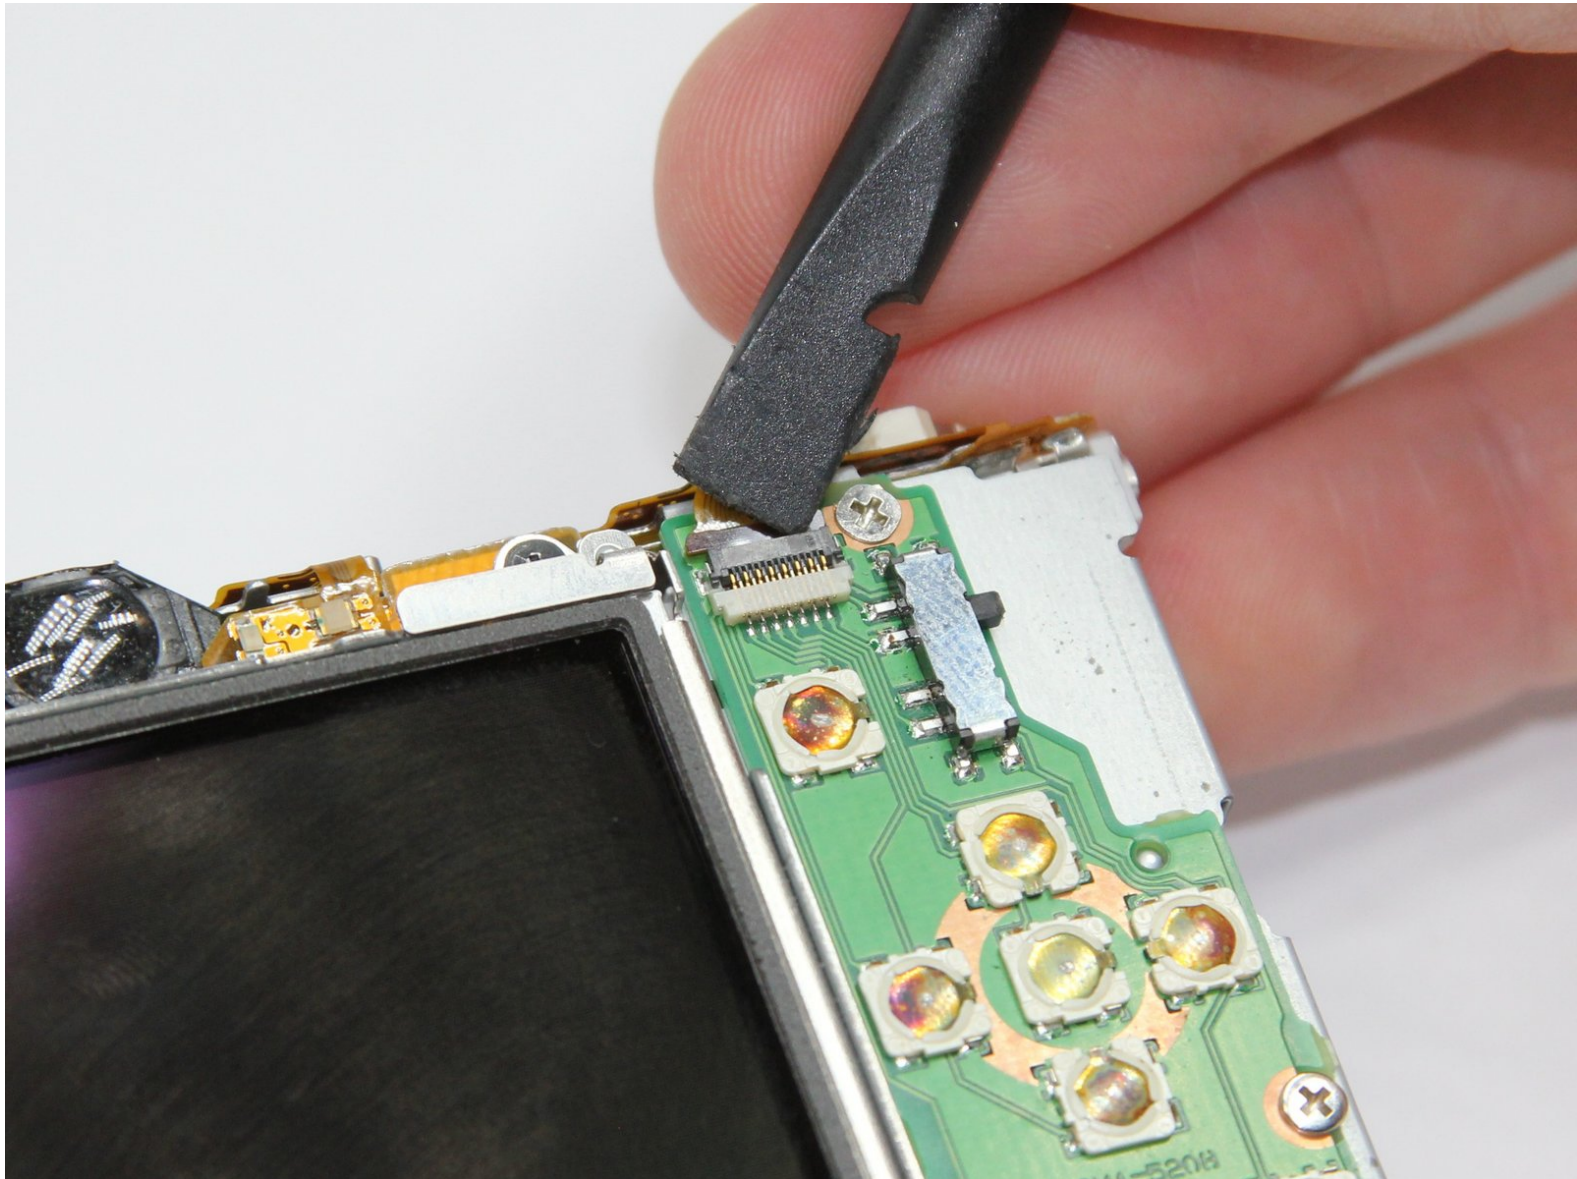

---

## INTRODUCTION

Use this guide to replace the function buttons on the back of the camera.


---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Heavy-Duty Spudger](#) (1)
-

## Step 1 — Front and Rear Covers

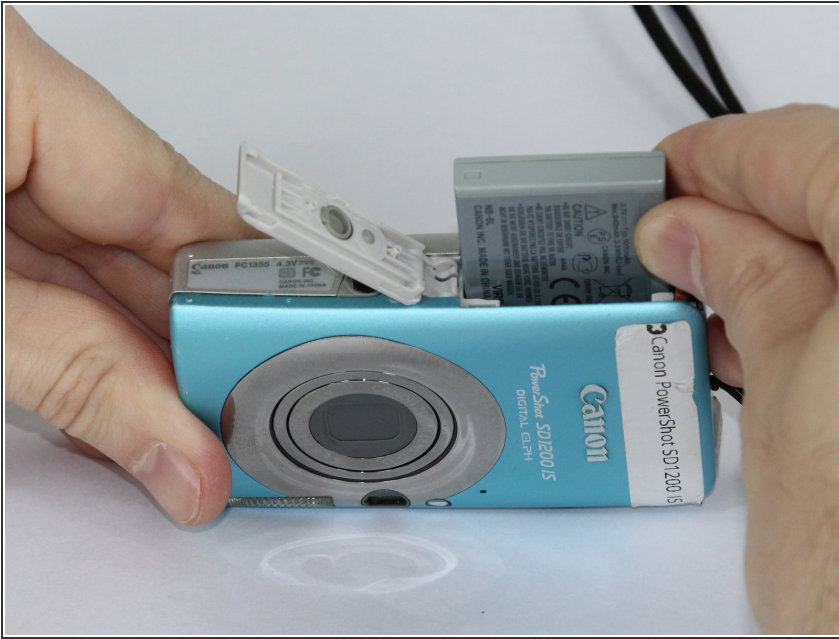


- Remove the battery.

## Step 2

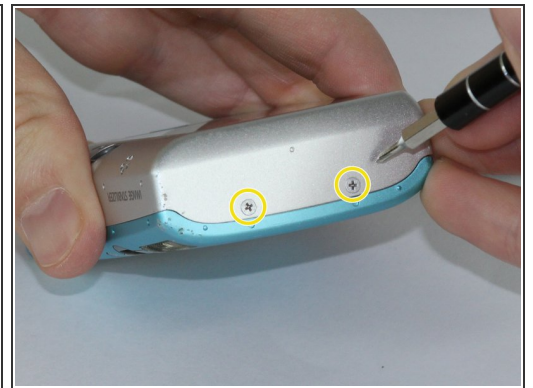


- Remove the two screws from the side of the camera casing with the strap. (4mm Phillips 00)
- Remove the two screws from the bottom of the camera. (4mm Phillips 00)
- Remove the two screws from the right side of the camera opposite the strap. (2mm Phillips 00)

### Step 3

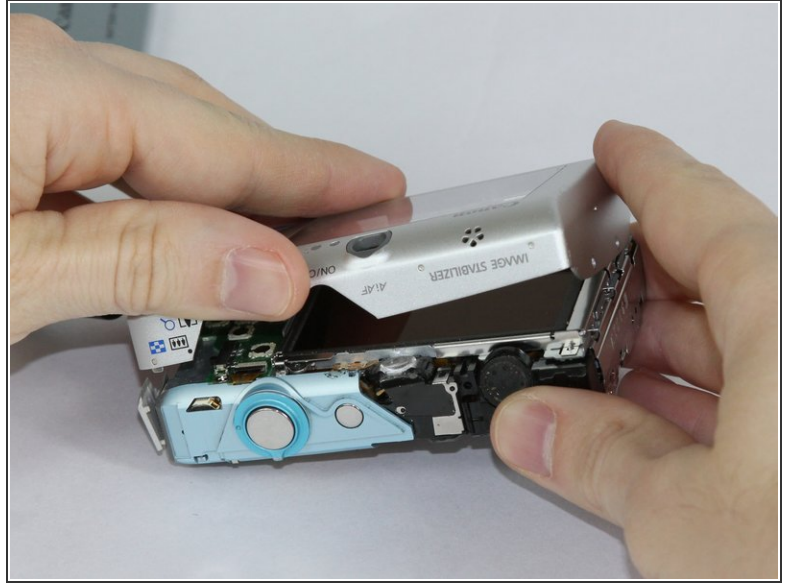


- Pull off the front cover.
- ⓘ If the top of the cover sticks, use gentle downward pressure on the retention clips above the lens to release.
- Remove the back cover.

### Step 4 — Function Buttons

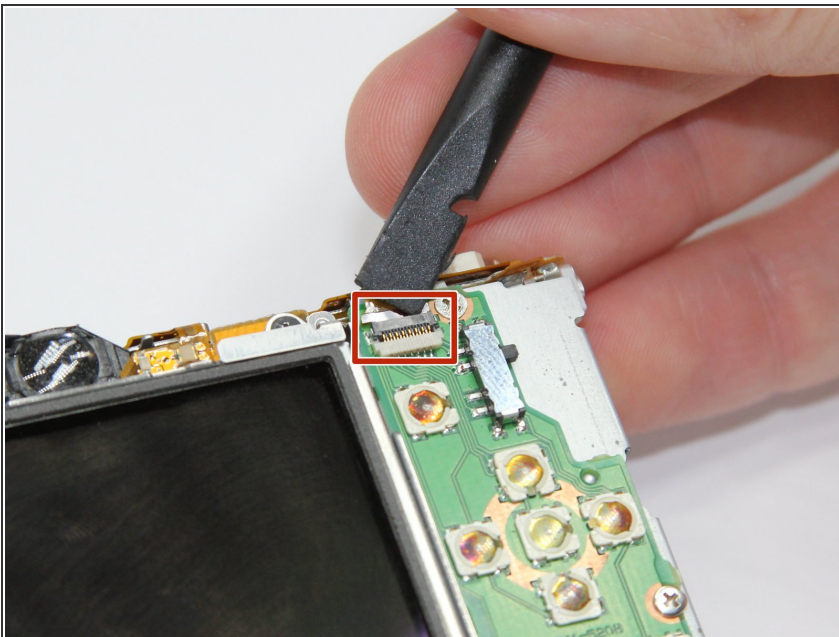


- Use the spudger to lift the tab on the **Zero Insertion Force (ZIF)** connector located at the top of the function button board.
- ⚠ Be sure you are prying up on the hinged retaining flap, not the connector itself.
- Slide out the ribbon cable from the connector.

## Step 5

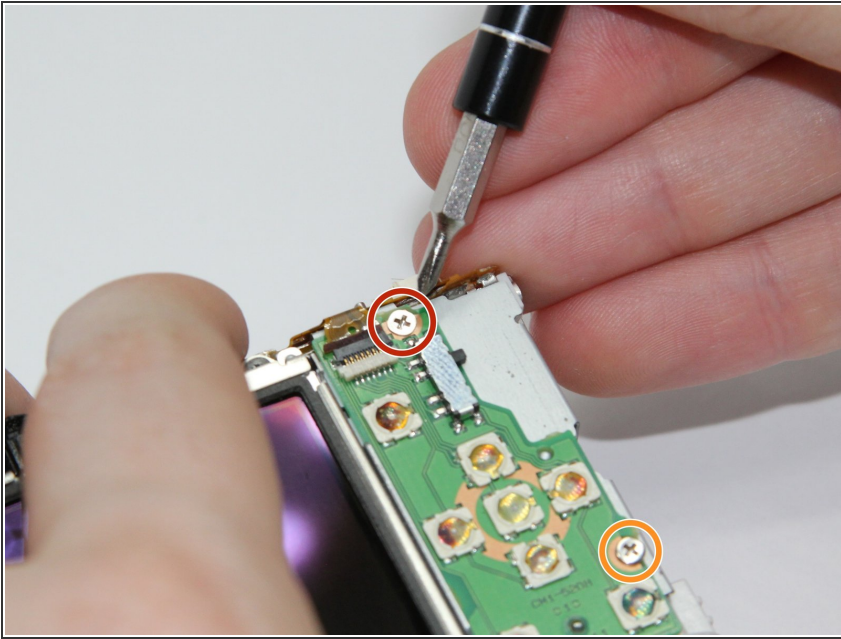

- Remove the top screw from the function button board. (3.5mm Phillips 00)
- Remove the bottom screw from the function button board. (2.5mm Phillips 00)

## Step 6

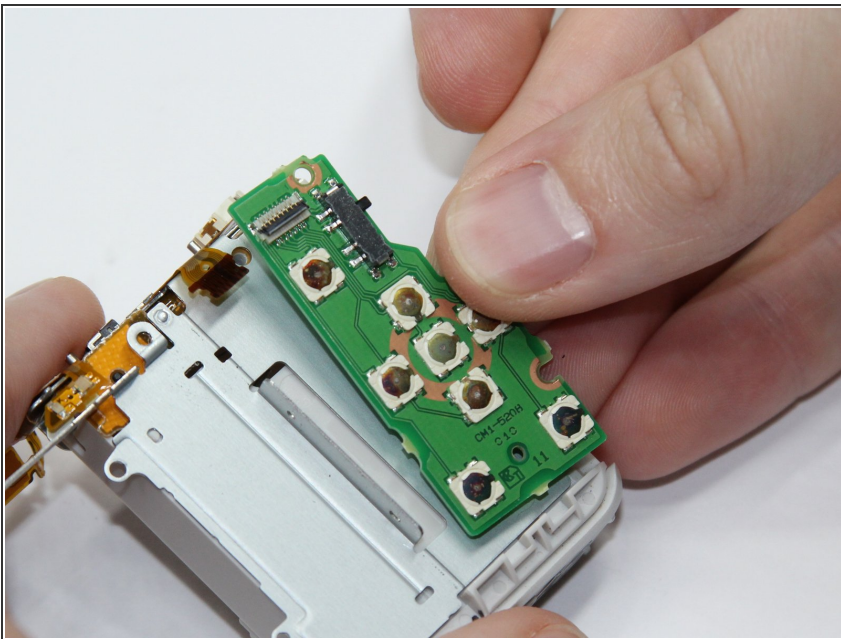

- Lift out the function button board.

To reassemble your device, follow these instructions in reverse order.