



Acer Aspire 5734z-4836 Screen Replacement

Replace a cracked screen or damaged screen.

Written By: Susan Cao



INTRODUCTION

The screen replacement is fairly simple, however it does require some unscrewing and prying.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery




- ⚠ Before removing the battery, power off your laptop and disconnect the AC adapter.
- Flip your laptop on its back so the battery is facing up and the hinges are facing away from you.

Step 2

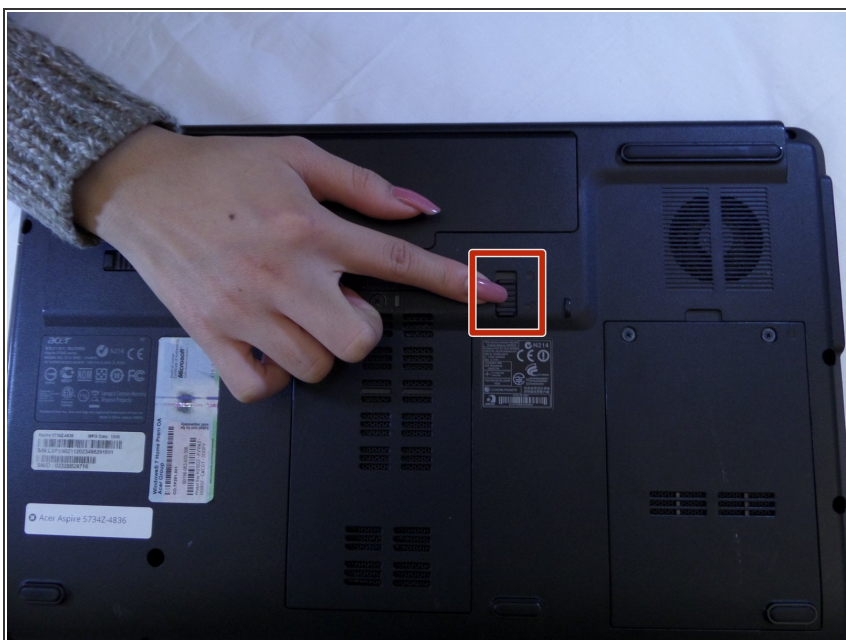


- Slide the right latch down to unlock the battery.

Step 3

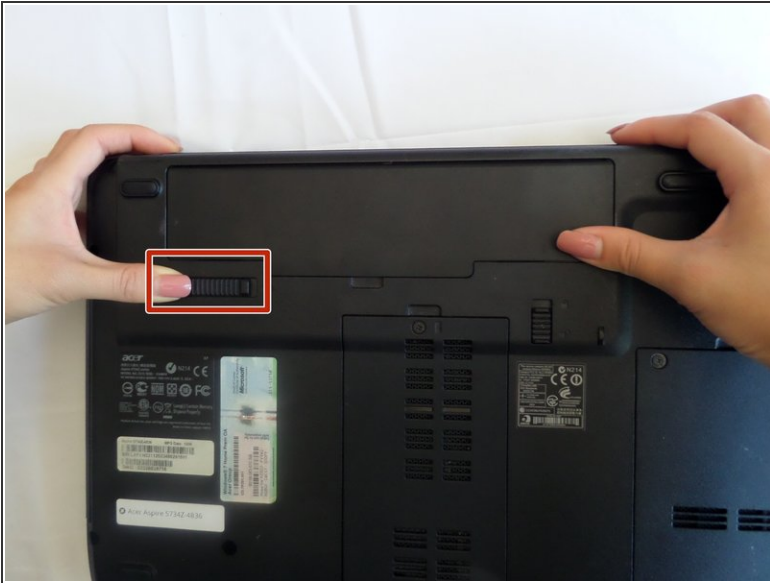

- Slide and hold the left latch below the battery.
- While holding this latch in place, pry the battery up from its bottom edge.
- Lift the old battery out of its compartment.

Step 4 — Screen

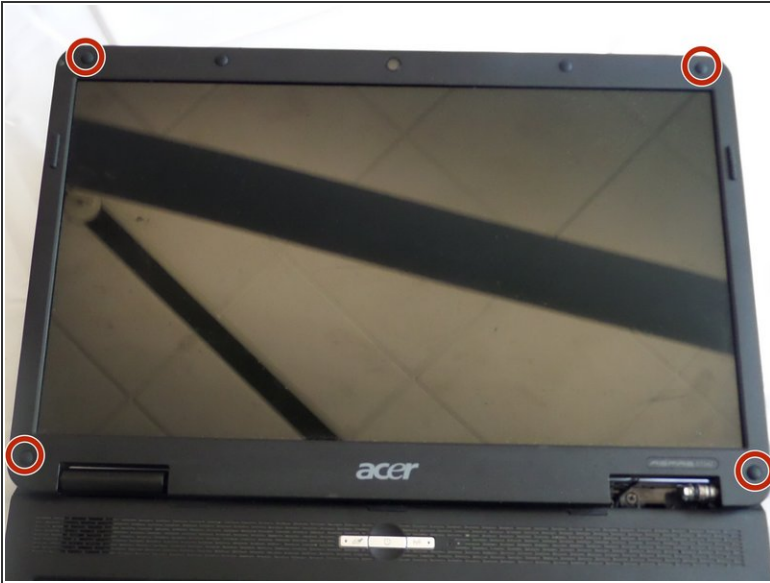


- Remove rubber bumpers from each four corners to expose the hidden screws that hold the screen bezel in place.

Step 5




- Extract the hidden screws from each of the bezel's four corners, using a #00 Phillips screwdriver.

Step 6

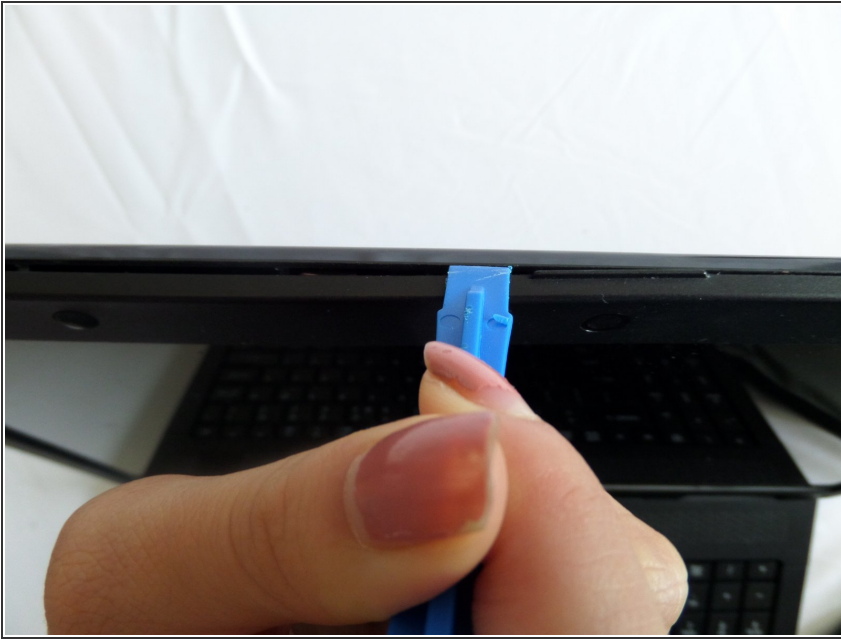


- Pop the bezel loose along the edges with a plastic opening tool.

Step 7

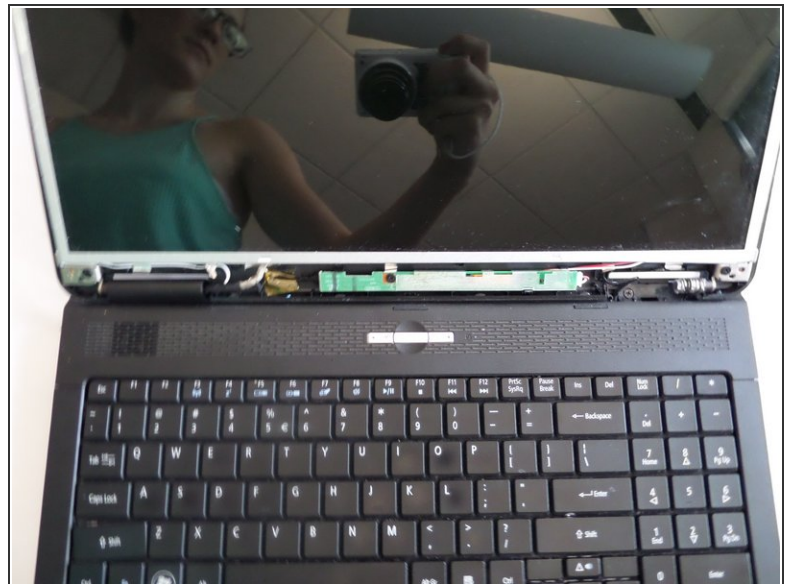



- Gently pry off the bezel by holding each edge of the bezel with a forefinger and applying pressure onto the screen with your thumbs.
- Lift the bezel away completely.

Step 8

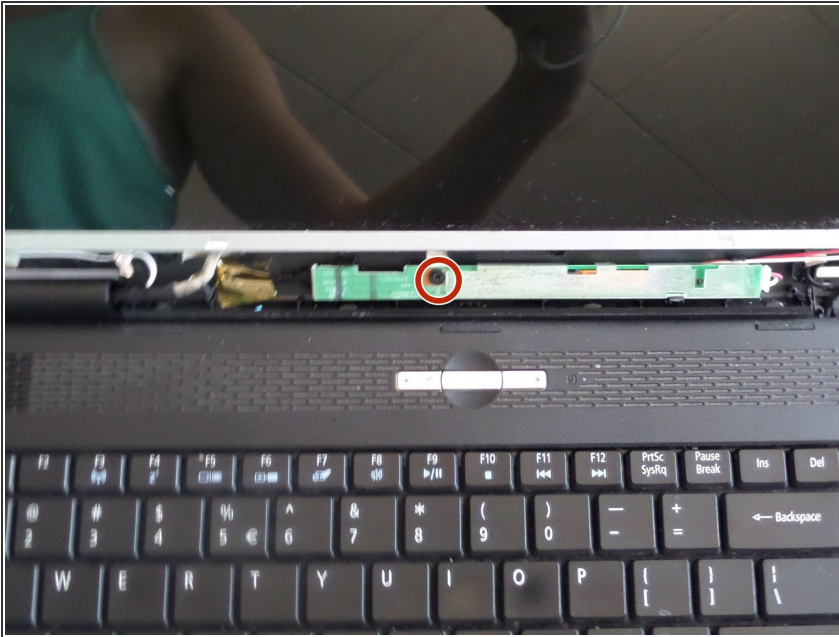

- Unscrew the middle screw on the green strip under the screen.

Step 9

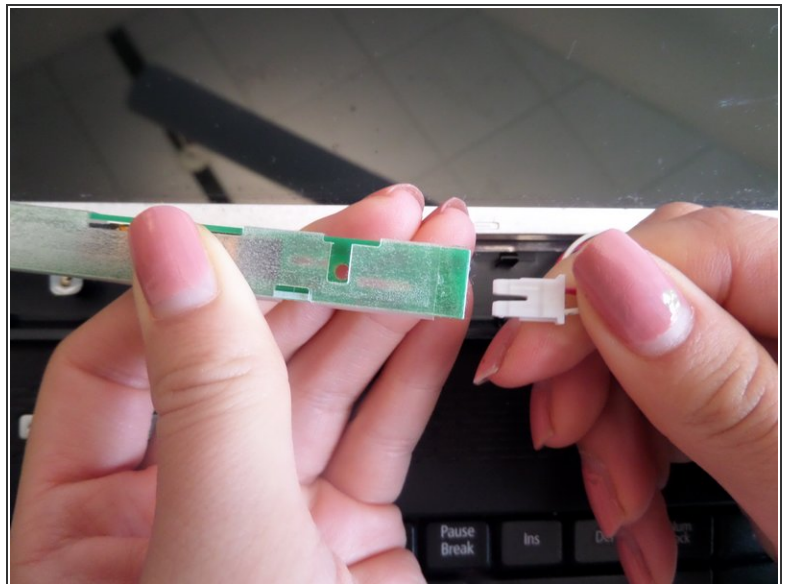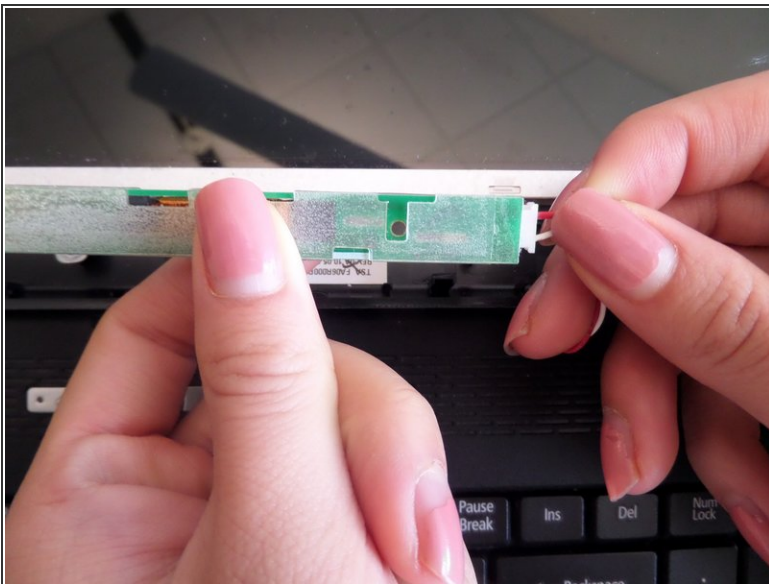


- Gently detach the red-and-white cable from the right end of the green strip under the screen.

Step 10




- Locate six small screws, three on each side of the screen.
- Remove all six screws with a #000 Phillips screwdriver.

Step 11

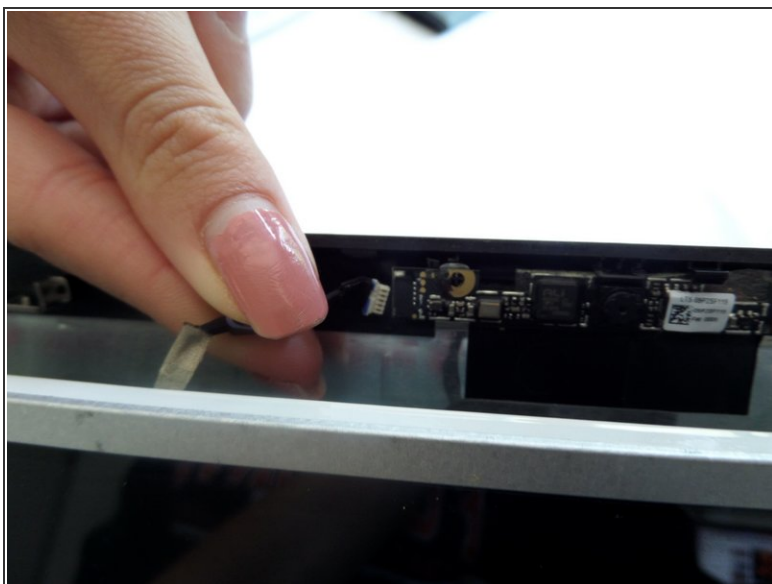

- Disconnect wires from the webcam located above the screen.

Step 12

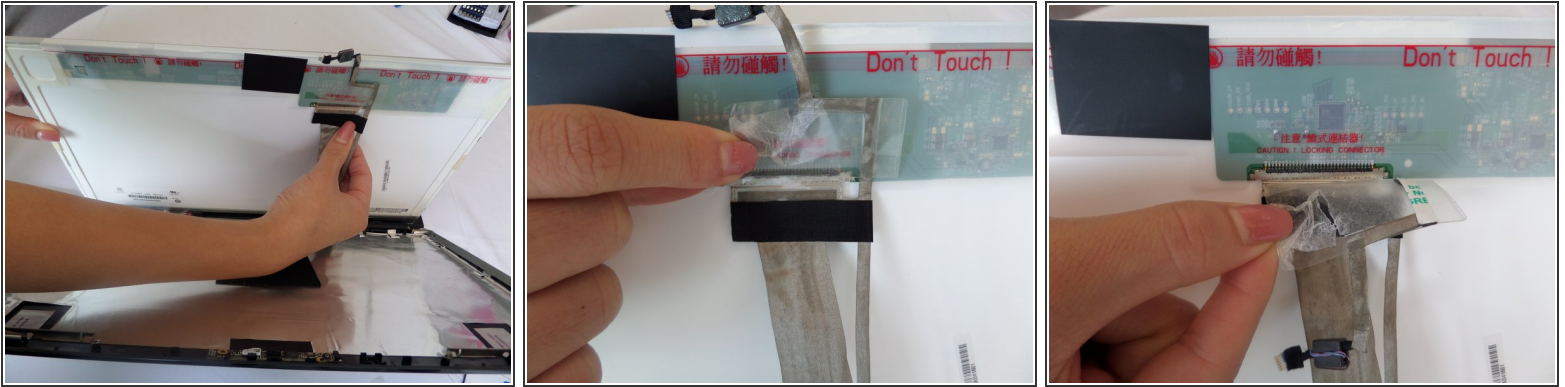

- Lift the screen up from the laptop and turn it around.
- Gently peel back the tape located behind the screen.

Step 13



- Pull the connector straight down to remove it.
- You can now safely lift the screen out of the laptop.

To reassemble your device, follow these instructions in reverse order.