



Furby "Feet" Cleaning Guide

Let your Furby move again by cleaning its "feet".

Written By: Miles Drazkowski



INTRODUCTION

This guide doesn't require you to remove the back panel. The parts in the base are relatively small so we suggest having a way to keep track of them. Cleaning is at your discretion although we recommend a mild detergent/dish soap.

TOOLS:

- [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Furby "Feet" Cleaning Guide




- Flip Furby upside down so his feet are pointed towards you.
- Unscrew the right and left screws on the base.

Step 2




- Remove the base from your Furby.
- Flip over the base so the screws are on the right and left.
- Unscrew the 2 right and 2 left inside screws.

Step 3

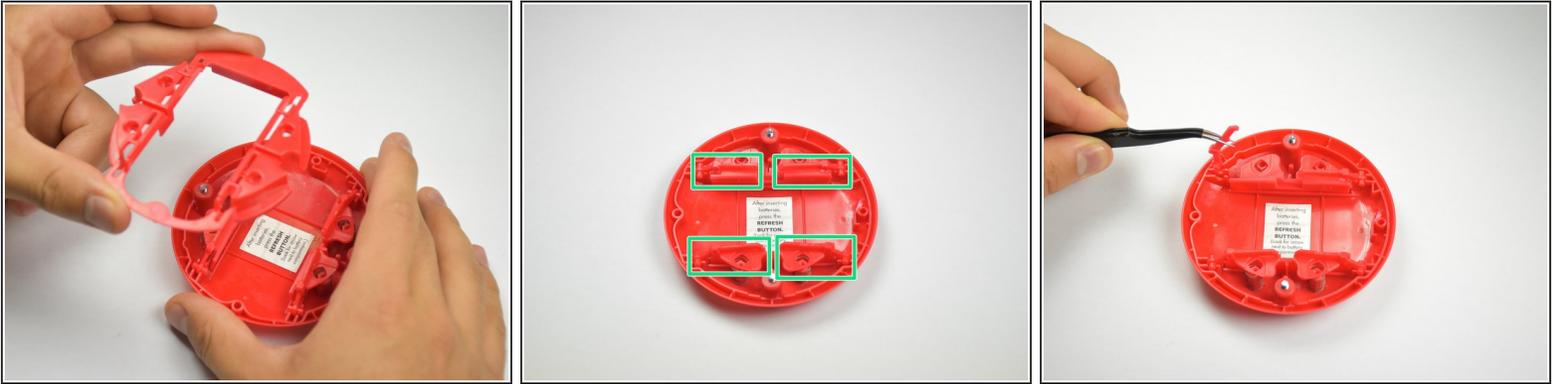

- Lift the housing for the foot components.
- Rotate the base 90 degrees.
- Locate all four of the foot activation levers. Remove them one by one from the base.

Step 4

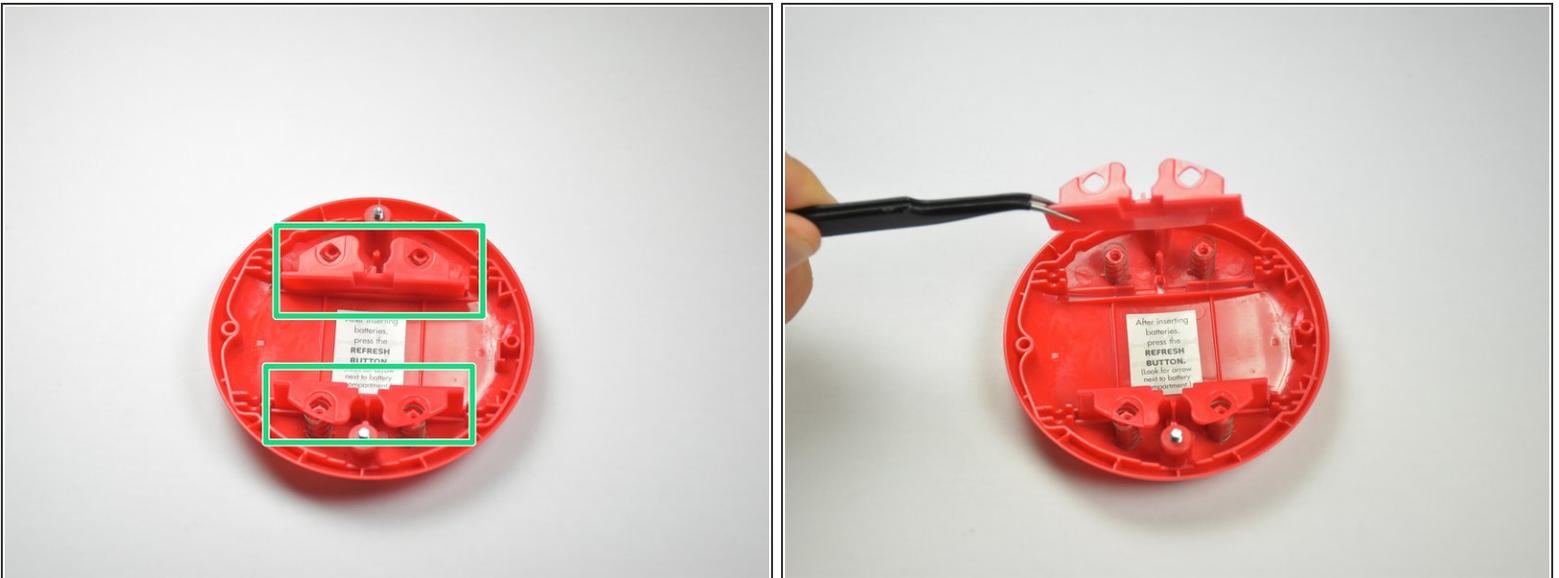

- Locate the foot pieces and remove them.

Step 5



- Locate and gently lift out the four small springs using tweezers.
- Now that you have all parts are removed, they can be cleaned and reassembled into Furby's "feet".

To reassemble your device, follow these instructions in reverse order.