



Black and Decker PS1800 Case Replacement

This guide will illustrate how to open the outer case of the Black and Decker PS1800.

Written By: Christian Aldrich



INTRODUCTION

This guide will illustrate how to open the outer case of the Black and Decker PS1800.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Open the Outer Drill Case



- Lay the drill on its side, assuring that the screw holes are facing upwards.
- Remove seven 12 mm screws using a Phillips #00 screwdriver.

Step 2



- Separate the outer drill case to expose the components and switch.

To reassemble your device, follow these instructions in reverse order.