


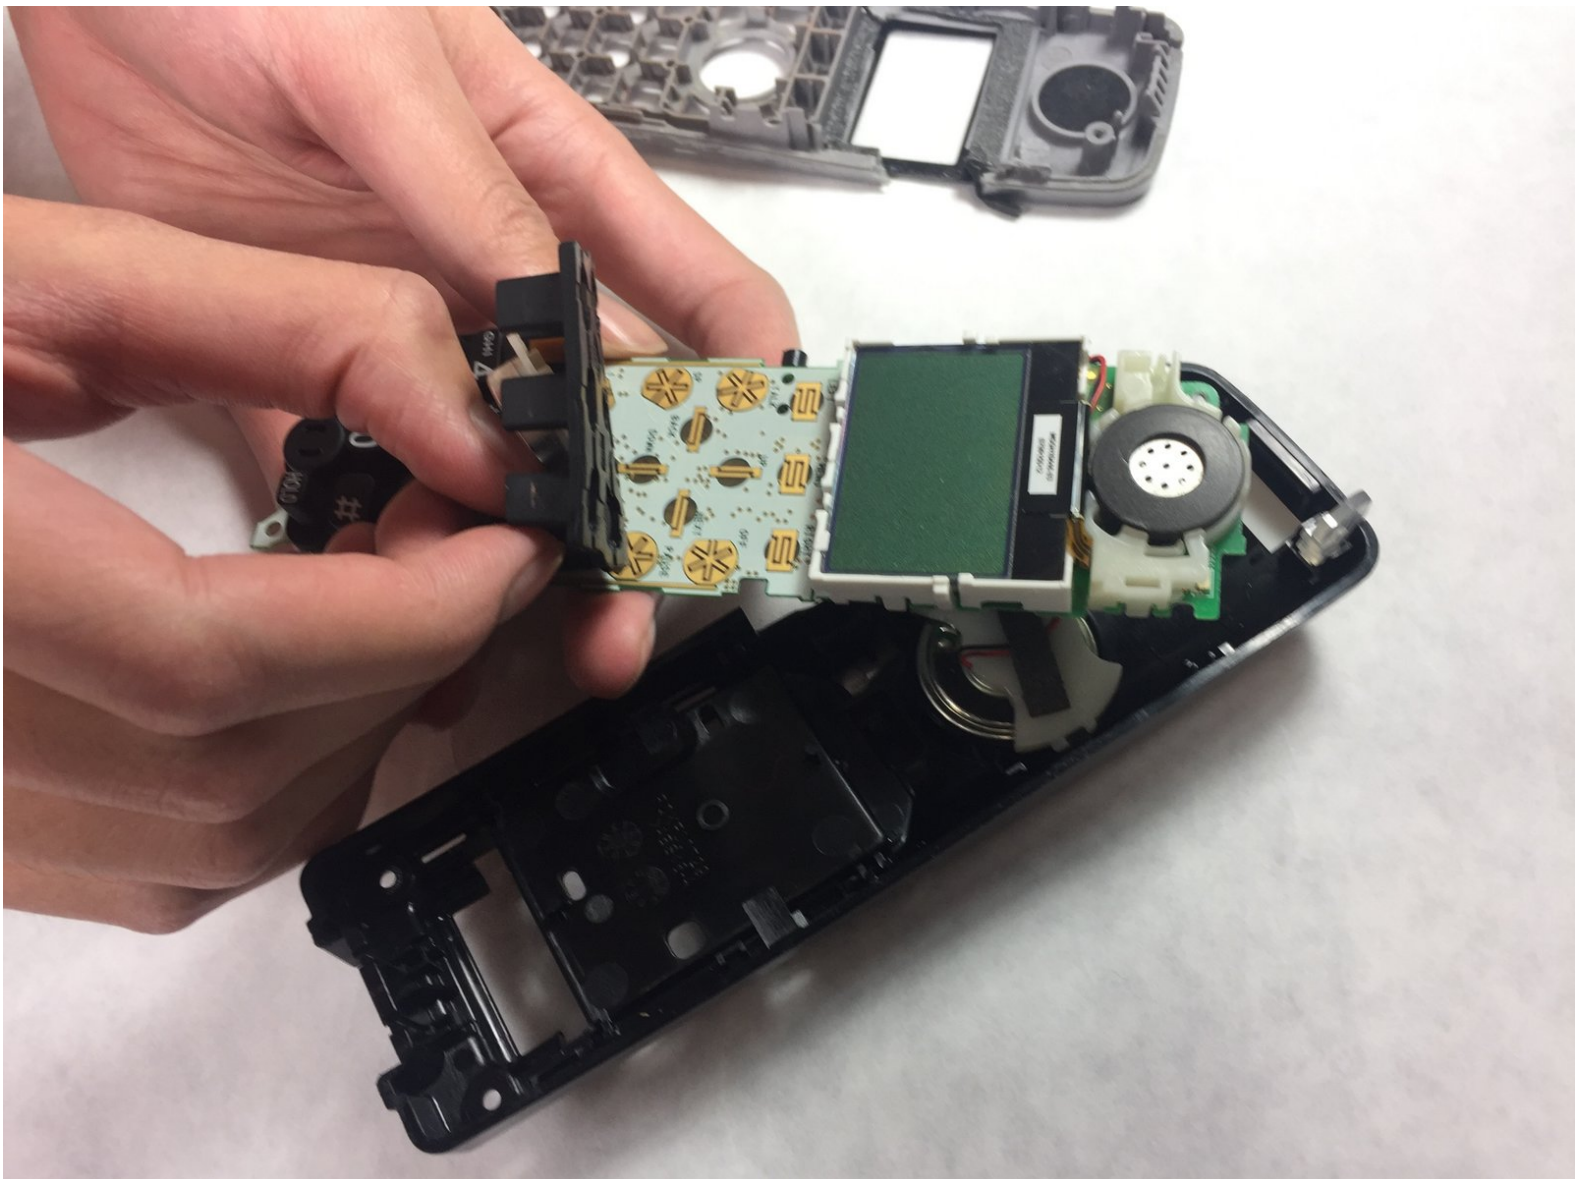

Panasonic KX-TG6021M Button Pad Replacement

This guide will show you how to replace the...

Written By: Leah Meador



INTRODUCTION

This guide will show you how to replace the button pad on the Panasonic KX-TG6021M.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Picks \(Set of 6\)](#) (1)
-

Step 1 — Battery



- Slide the back cover down towards the bottom of the phone to remove.

Step 2



- Pull the top of the battery towards you to remove it from the phone.

Step 3 — Front Panel




- Unscrew the two screws located at the bottom of the phone.
- ❗ Use a PH00 Phillips head to remove the 9 mm screws.

Step 4




- Separate the back cover from the front cover by using a wedge.
- Remove the back cover from the front cover by pulling them apart.

Step 5

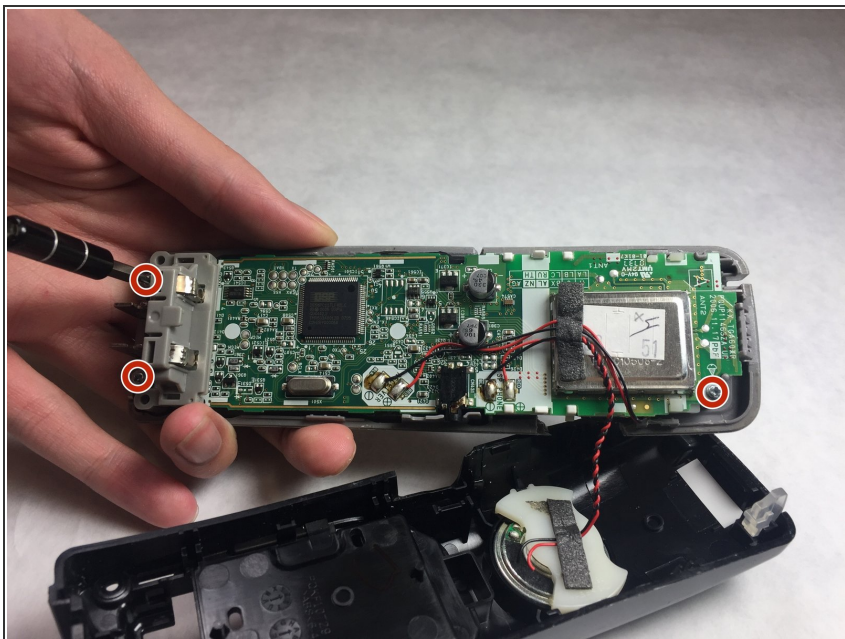

- Remove three screws on the motherboard.
- Pull the phone face off of the motherboard.

Step 6 — Button Pad

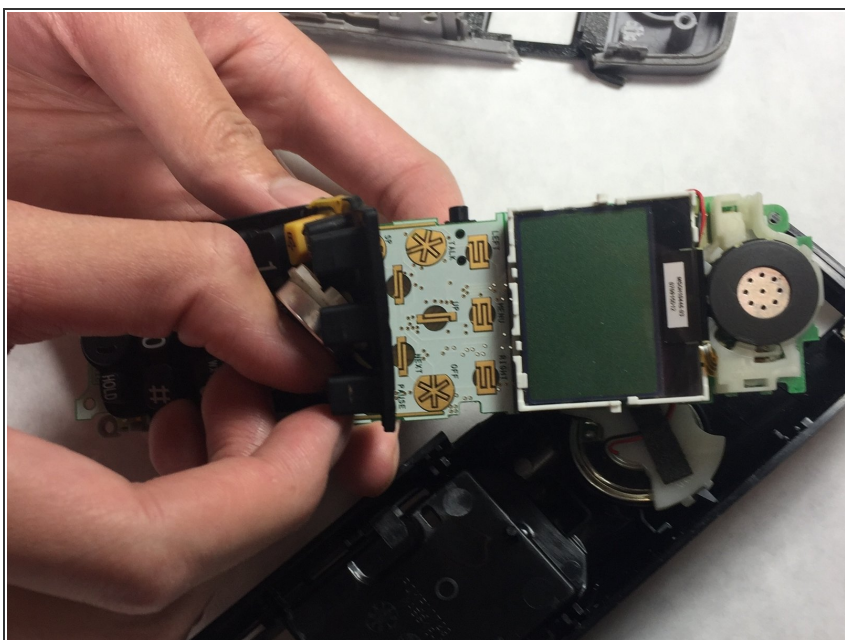

- Remove the button pad.

To reassemble your device, follow these instructions in reverse order.