



Bionaire BAP 600 Air Filter Replacement

This guide will show the user how to access the air filter in the Bionaire BAP 600.

Written By: Nick Miller



INTRODUCTION

This guide will show the user how to access the air filter for inspection and/or removal. This guide is a prerequisite for removing the outer shell, and requires the removal of the base of the Bionaire BAP 600.

Step 1 — Base/Intake




- Rotate base counterclockwise, supporting top with opposite hand.

Step 2



- Pull base away from housing exposing air filter.

Step 3 — Air Filter

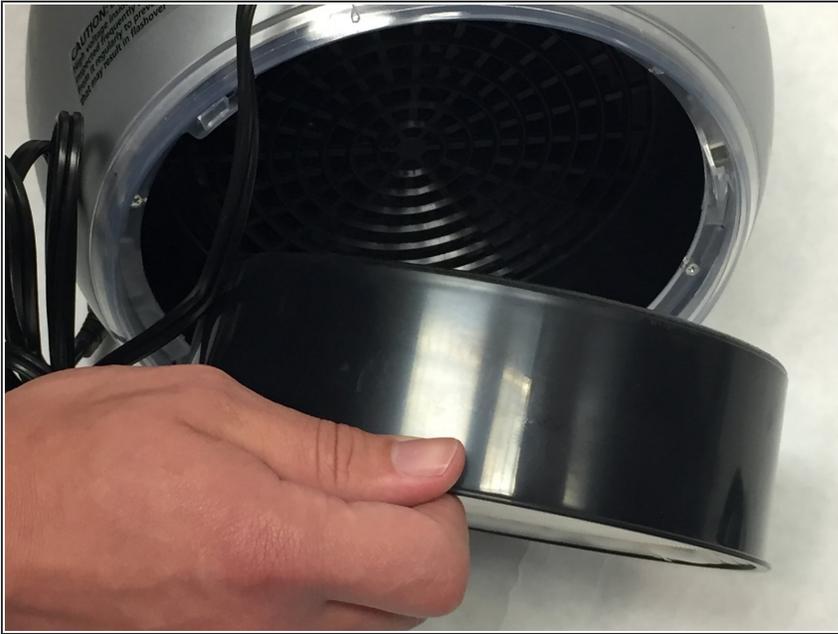

- Grab the edge of the filter housing and pull the filter away from the rest of the device.

Step 4



- Gently pull apart each fold of the filter to check for abrasions or other anomalies. Clean with a dust rag if necessary.

To reassemble your device, follow these instructions in reverse order.