



# Acer Aspire One D250-1151 Hard drive Replacement

This guide will show you how to remove the hard drive from the computer.

Written By: Donny McKay





## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Hard drive



- Place the computer face down on a flat surface.

## Step 2



- Unscrew the Largest panel using a Philips PH1 screwdriver in a counterclockwise motion.

## Step 3



- Lift the panel with your finger to reveal the hard drive.

## Step 4



- Slide the hard drive towards the battery until it is no longer connected.



## Step 5



- Lift the hard drive out of the compartment.

To reassemble your device, follow these instructions in reverse order.