

Acer Aspire One D250-1151 3G Card Replacement

This guide will show you how to remove the 3G Card

Written By: Donny McKay



F TOOLS:

- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — 3G Card



 Place the computer face down on a flat surface.

Step 2



 Unscrew the smallest panel using a Philips PH1 screwdriver in a counterclockwise motion.

Step 3



 Open the panel by lifting up in the small groove using a finger, Plastic Opening Tool or similar device.

Step 4



• Slide the 3G card forward until it is not connected.

Step 5



• Remove the 3G Card from the compartment.

To reassemble your device, follow these instructions in reverse order.