




Toshiba Satellite P55t-A5116 Battery Replacement

Use this guide to remove the Toshiba Satellite P55t-A5116 battery.

Written By: Brittany Castillo

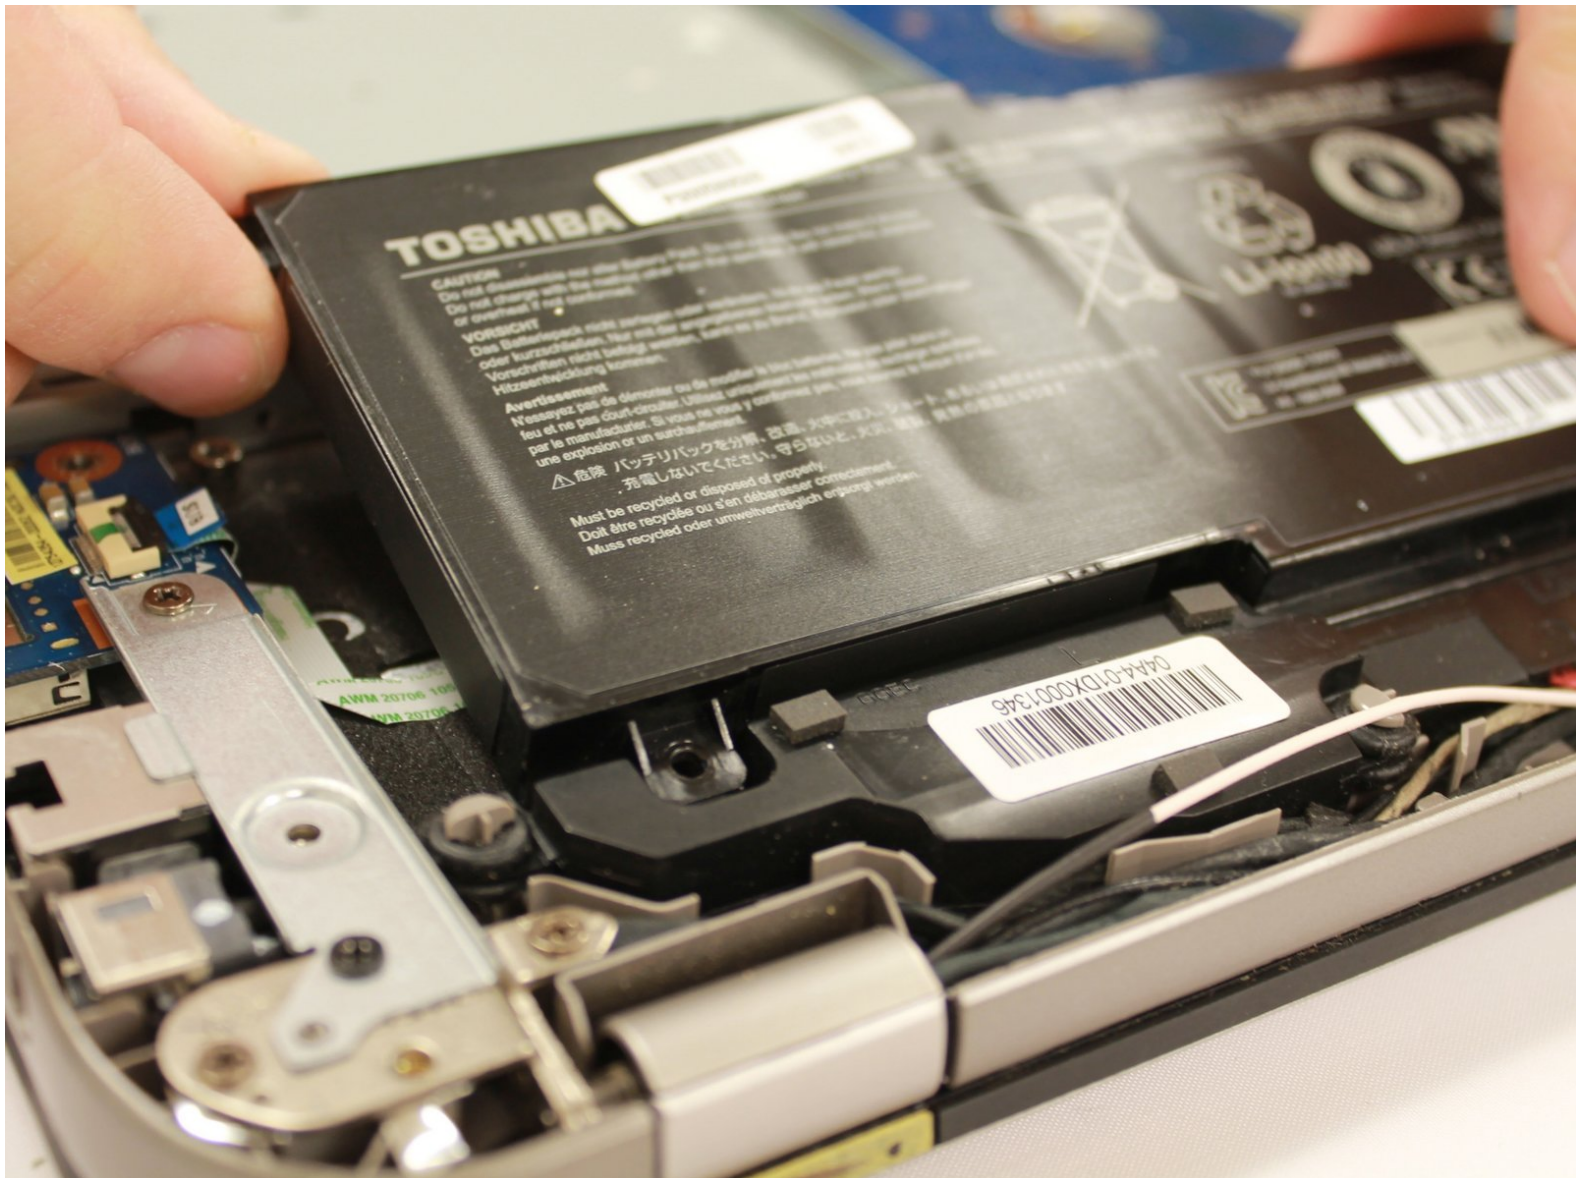

INTRODUCTION

Use this guide to remove the Toshiba Satellite P55t-A5116 battery.



TOOLS:



- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:



- [Battery](#) (1)
- Computer Part

Step 1 — Back Casing

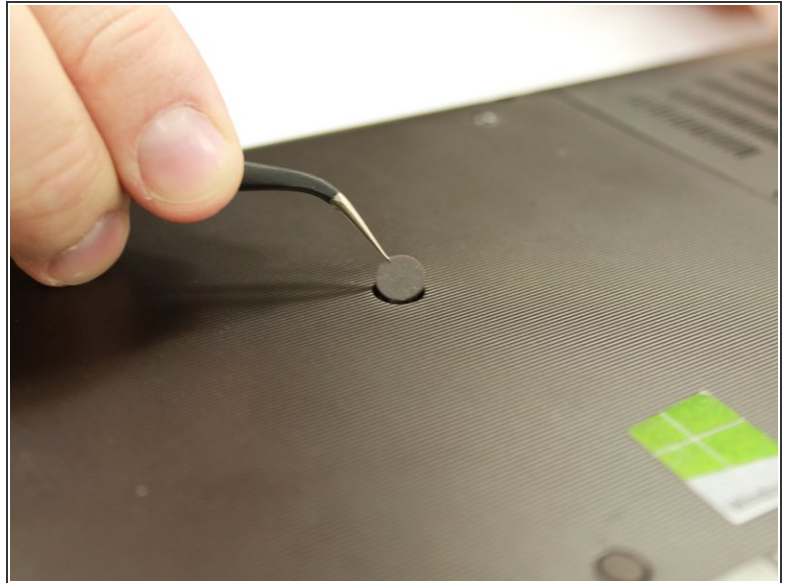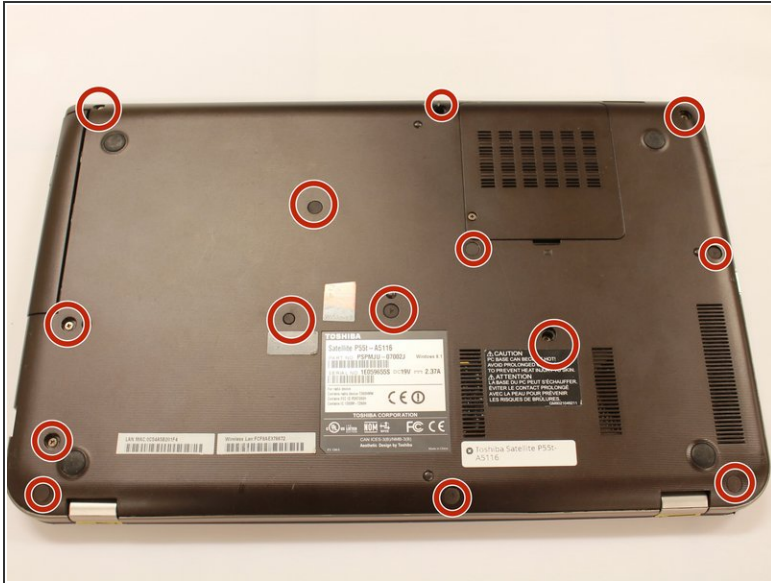

- Close laptop and turn it upside down
- Remove the 14 circular rubber covers with tweezers along with one smaller more cylindrical rubber cover.

Step 2

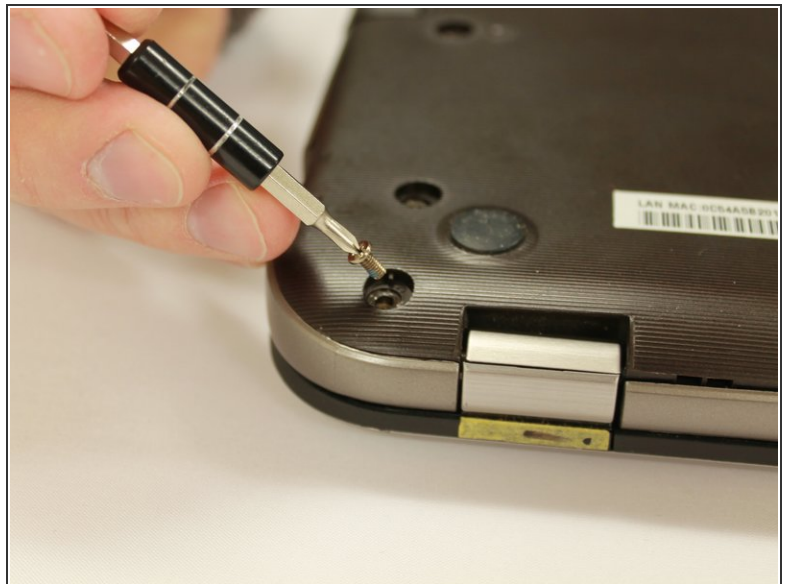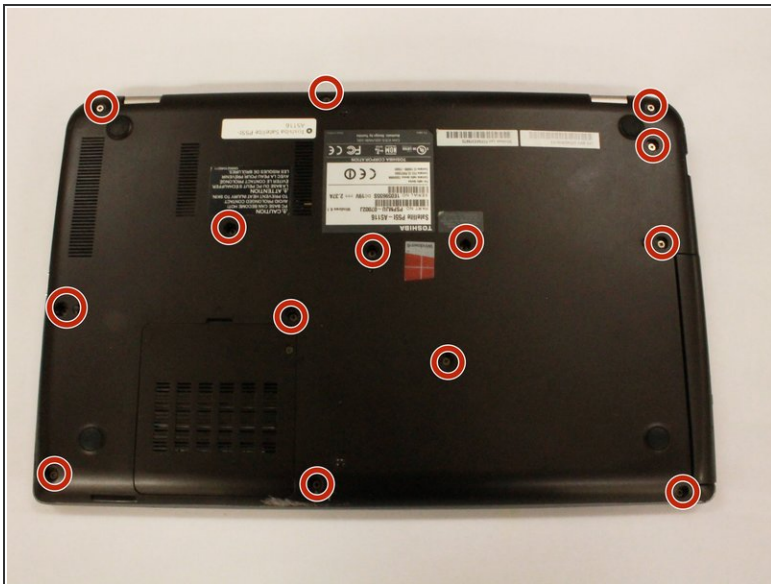


- Using the #PH0 screw head, remove 14 (5.7 mm) screws from the back casing.

Step 3




- Gently pry off the bottom case with the plastic opening tools.
- Find the seam between the back case and the rest of the laptop casing.

Step 4 — Battery

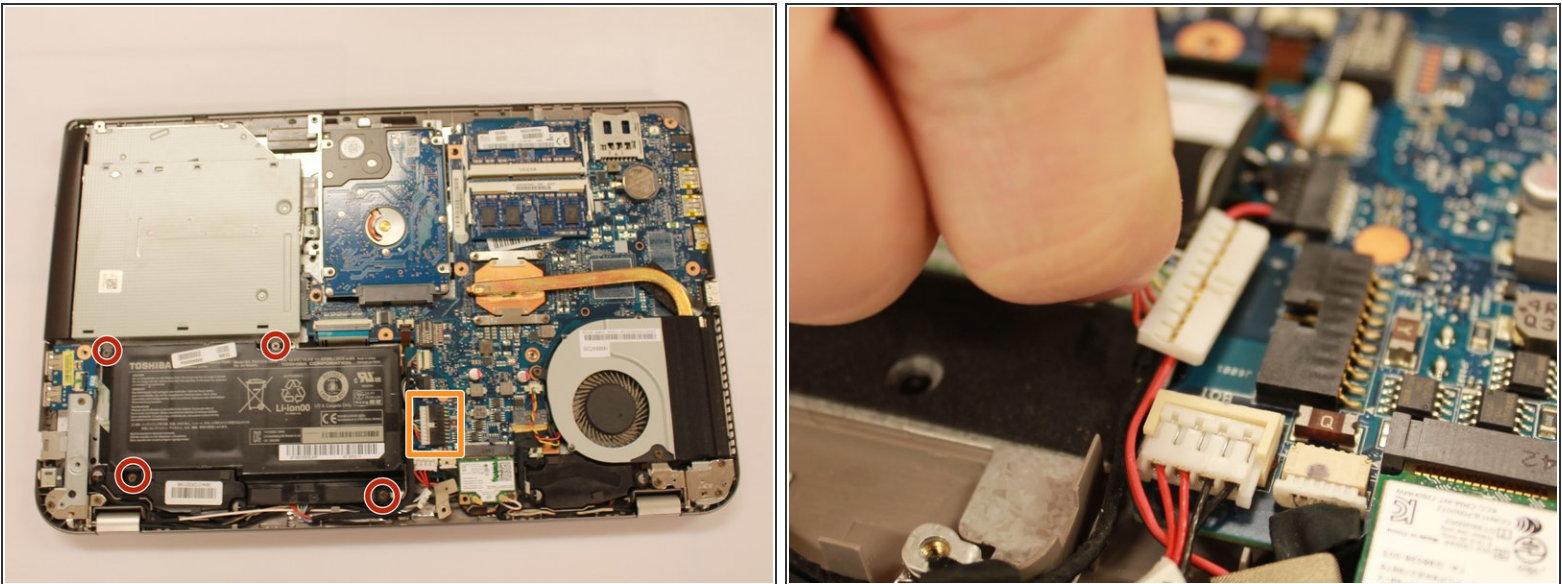

- Use the #PH0 screw head, remove 4 (5.7mm) screws.
- Unplug the battery's 10 pin connector and gently lift the battery out of the laptop.

Step 5

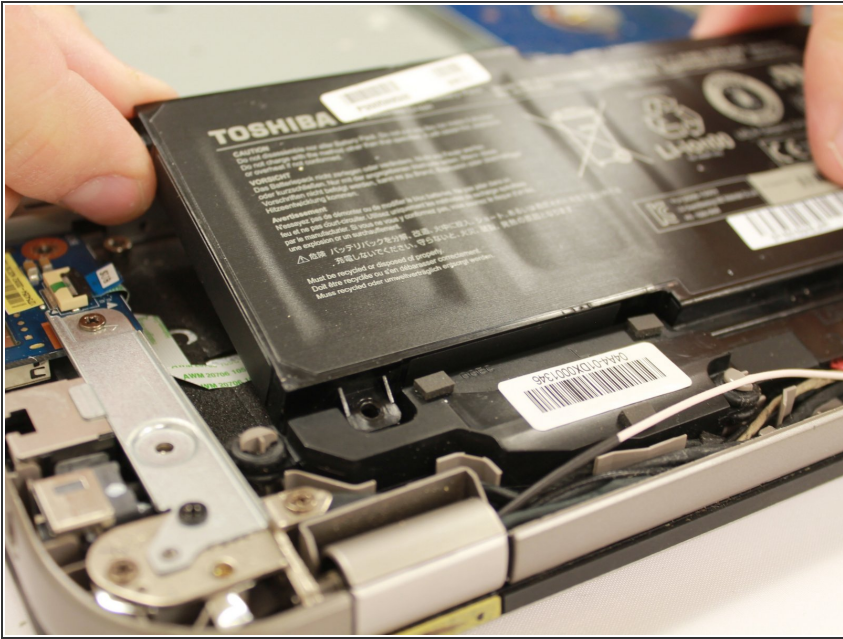

- Gently remove battery from the laptop.

To reassemble your device, follow these instructions in reverse order.