



Acer Aspire One 532h-2806 Screen Replacement

This guide, will walk through the necessary steps to remove the screen from the Acer Aspire One 532h-2806.

Written By: Julie Paula



INTRODUCTION


This guide will teach one how to fully remove the screen from the Acer Aspire One 532h-2806. A Phillips #0 Screwdriver and an opener tool is required to complete this guide. This guide may be needed if the screen is cracked and needs to be replaced.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — Screen

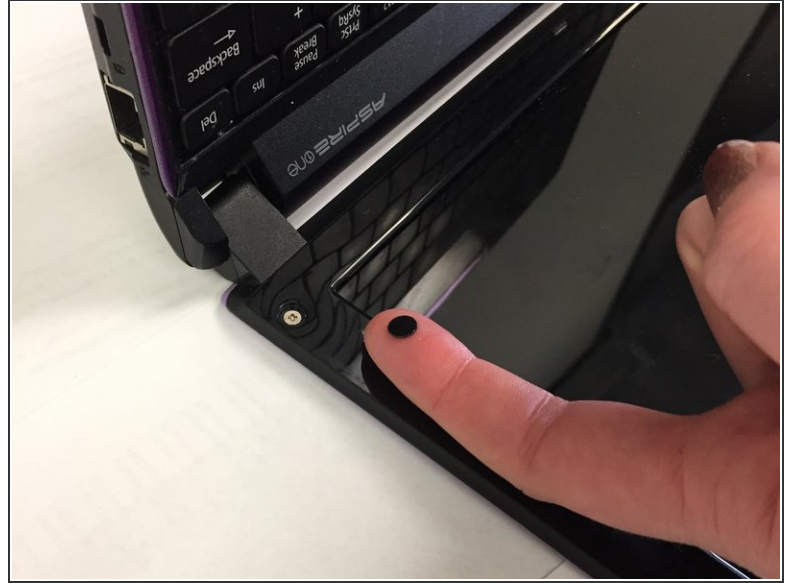

Turn the device off before beginning any replacements.



- Locate the two circular black stickers at the bottom corners of the laptop screen.
- Remove the stickers.
- ⓘ Two 6mm Phillips Screws should now be visible.

Step 2

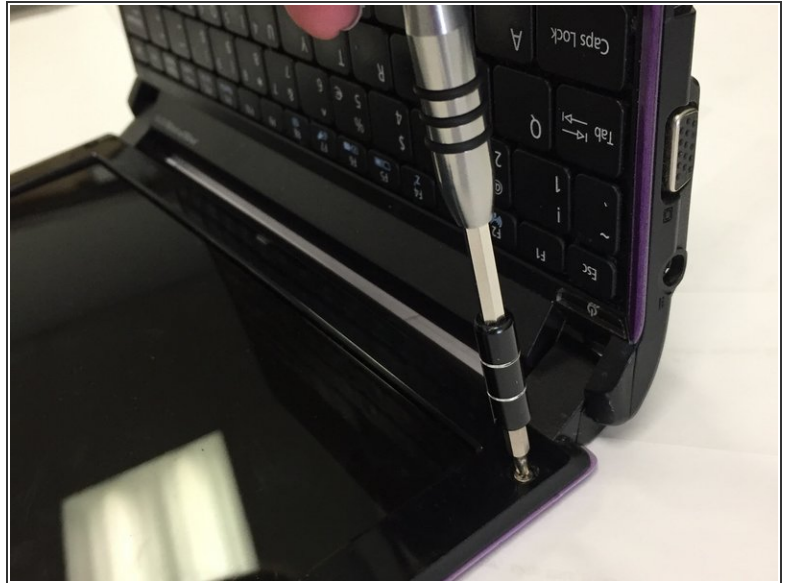

- Use a Phillips #0 Screwdriver to remove the two 6mm screws from the screen.




Step 3

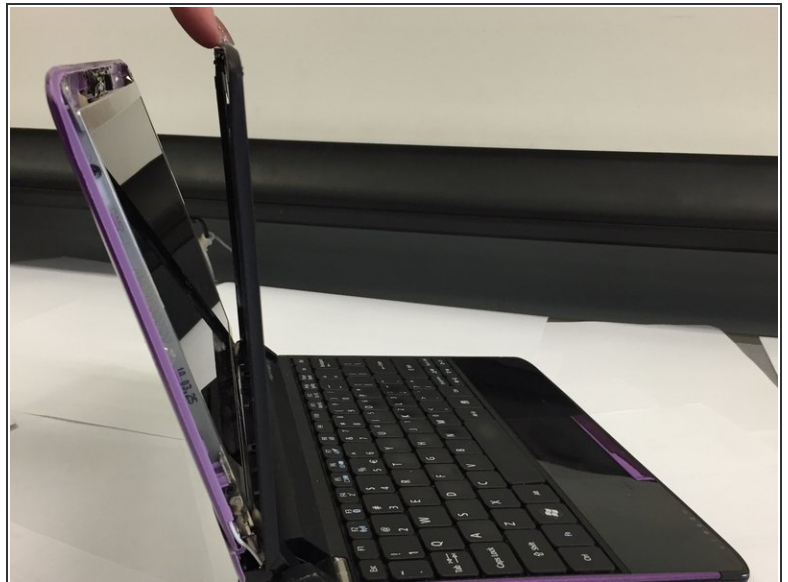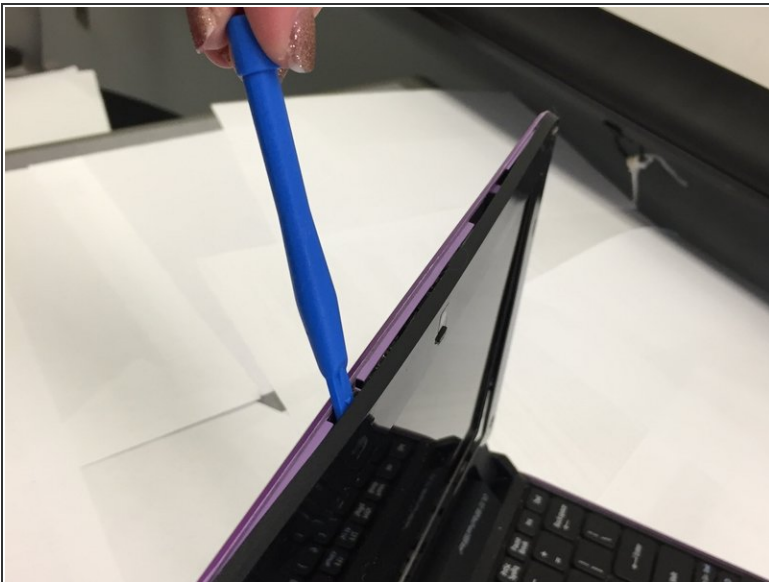

- Using the opener tool, remove the plastic cover, surrounding the screen.


i It is normal to hear clicking sounds as the plastic cover is removed.

Step 4

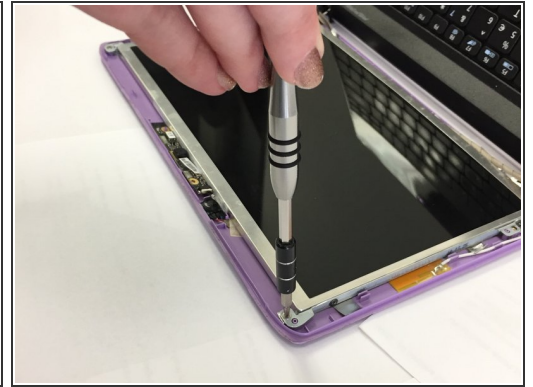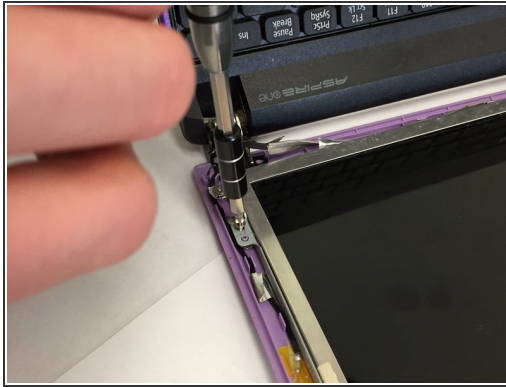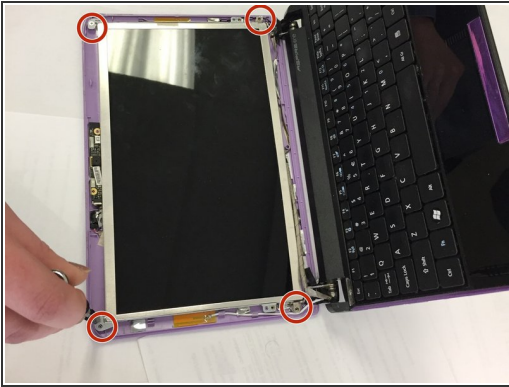


- Remove the four 6mm Phillips screws surrounding the screen.
- i** These are holding the screen in place. After the screws are removed, the screen should remove itself from the plastic outer cover.

Step 5

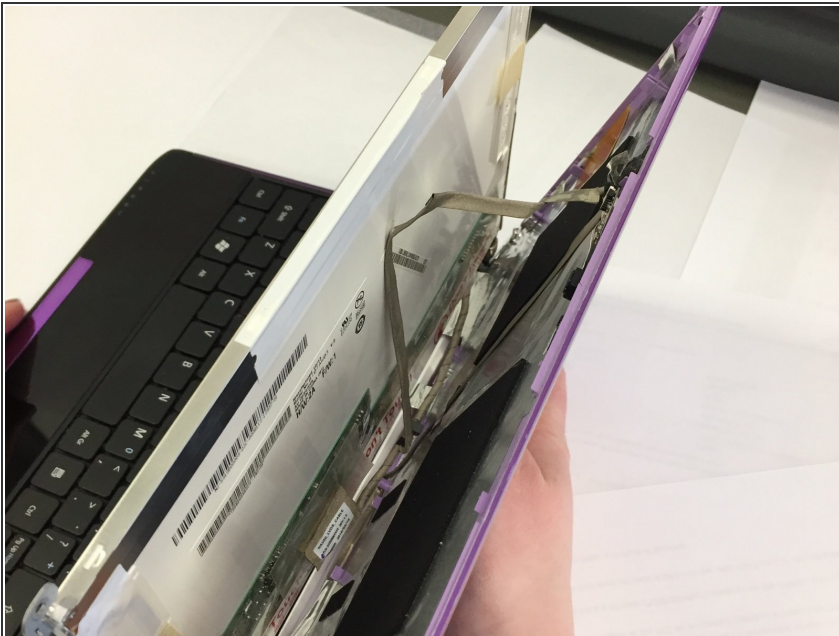



- Peel back the flex cable from the outer laptop plastic cover.
- !** Be careful, not to yank or rip the cable, it should gently peel back.

Step 6

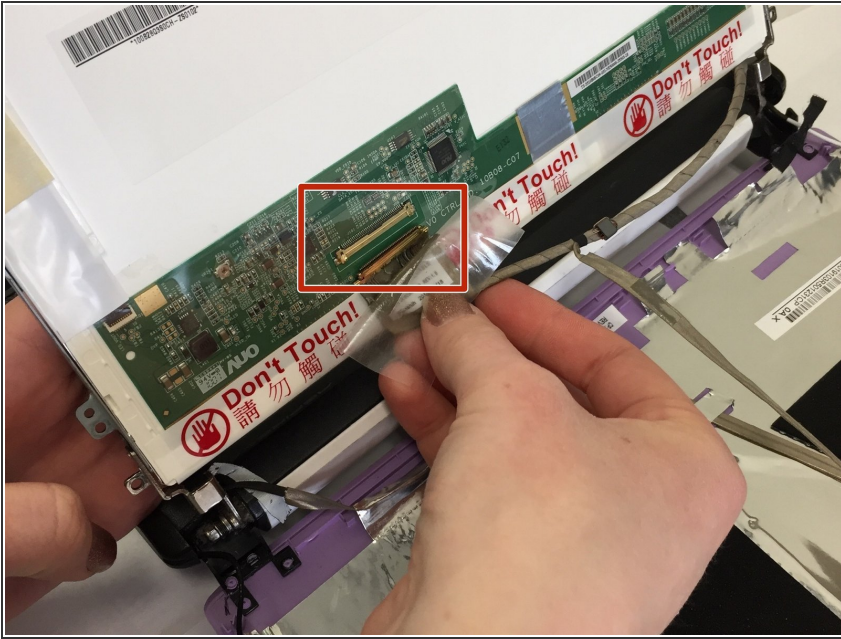



- Locate the ZIF (zero insertion force) Cable.
- ⓘ Peel back any tape if necessary
- Carefully unplug it.
- ⚠ Do not pull hard, it should remove itself easily.

Step 7

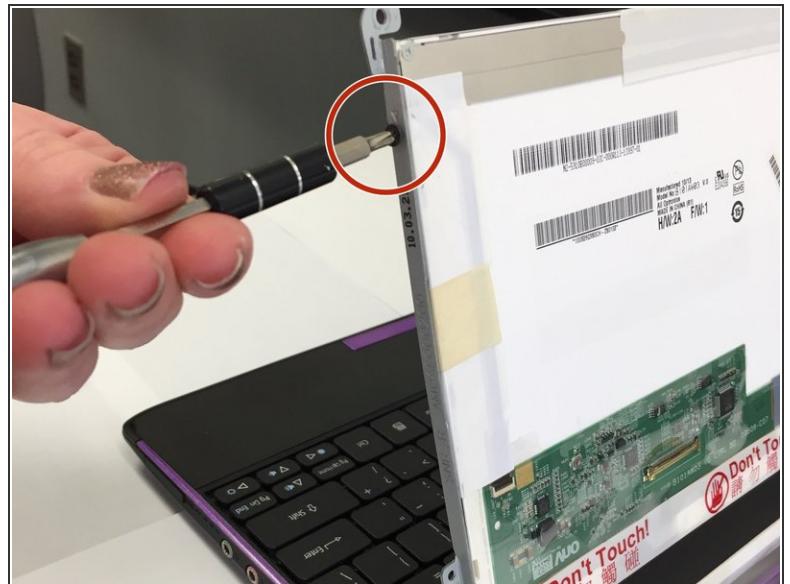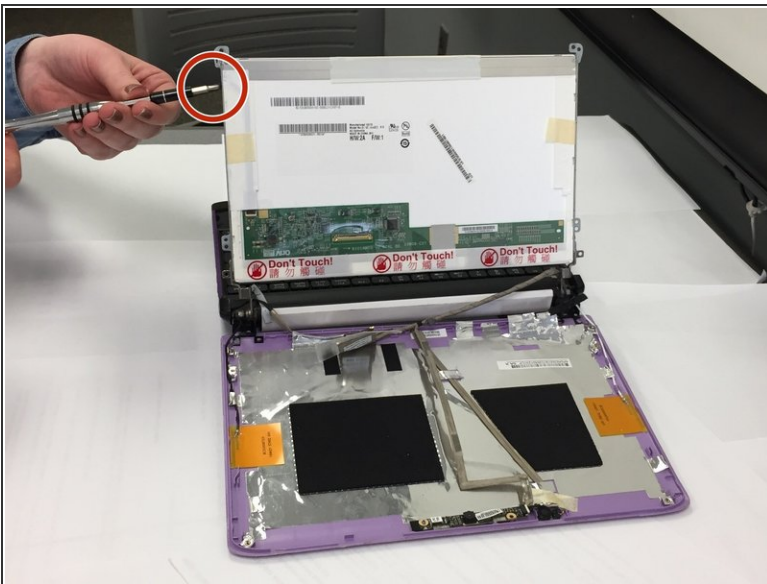

- Remove the two 6mm screws on each side of the screen with a Phillips #0 screwdriver.

Step 8

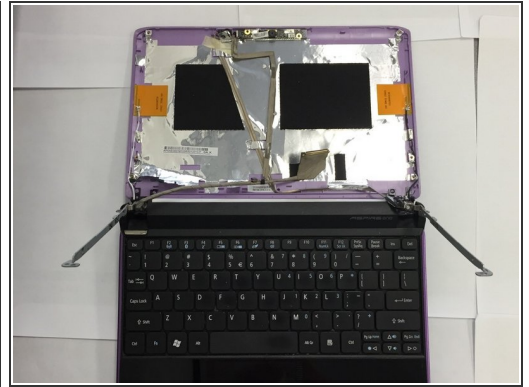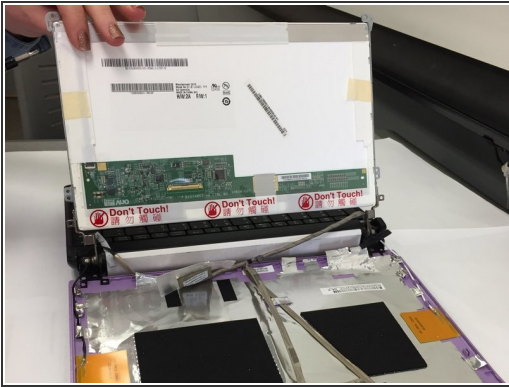

- Remove the screen.

To reassemble your device, follow these instructions in reverse order.