



Acer Aspire One 532h-2806 Keyboard Replacement

This guide will teach one how to replace the keyboard on the Acer Aspire One 532h-2806.

Written By: Julie Paula



INTRODUCTION


In order to remove the keyboard from the Acer Aspire One 532h-2806, one will need a metal spudger tool. This guide may be needed if one needs to access the fan, headphones or USB jacks.




TOOLS:

- [Metal Spudger](#) (1)
-

Step 1 — Keyboard

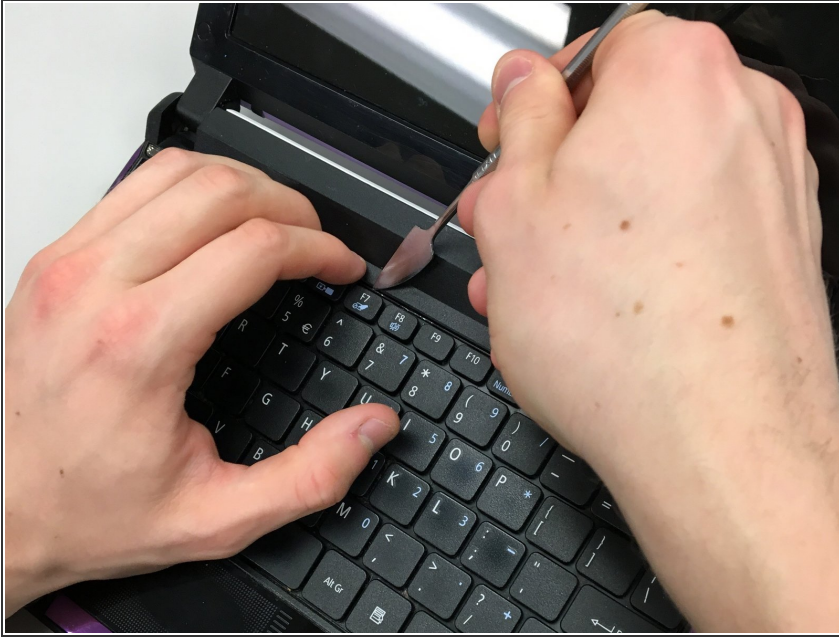


 Make sure the laptop is turned off and the battery is removed.

- Above the top row of the keys, locate three plastic latches.

Step 2



- Use the metal spudger to press each tab. The keyboard should release.

 Slide the spudger, so that the tabs do not reset after pressing each one.


Step 3



- Gently lift the keyboard up.

⚠ The keyboard ribbon cable is still attached to the motherboard.

Step 4

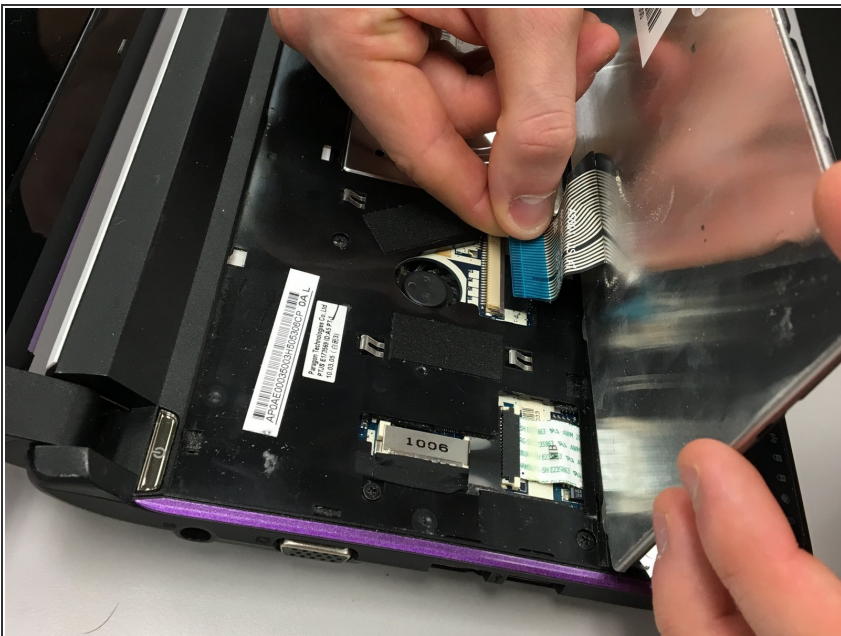

- Carefully unplug the connector sticker on the back of the keyboard.

⚠ Be gentle, do not force it out.

Step 5



- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.