




Canon PowerShot A75 Speaker Replacement

This guide shows you how to remove and replace the speaker.

Written By: Austin Fox

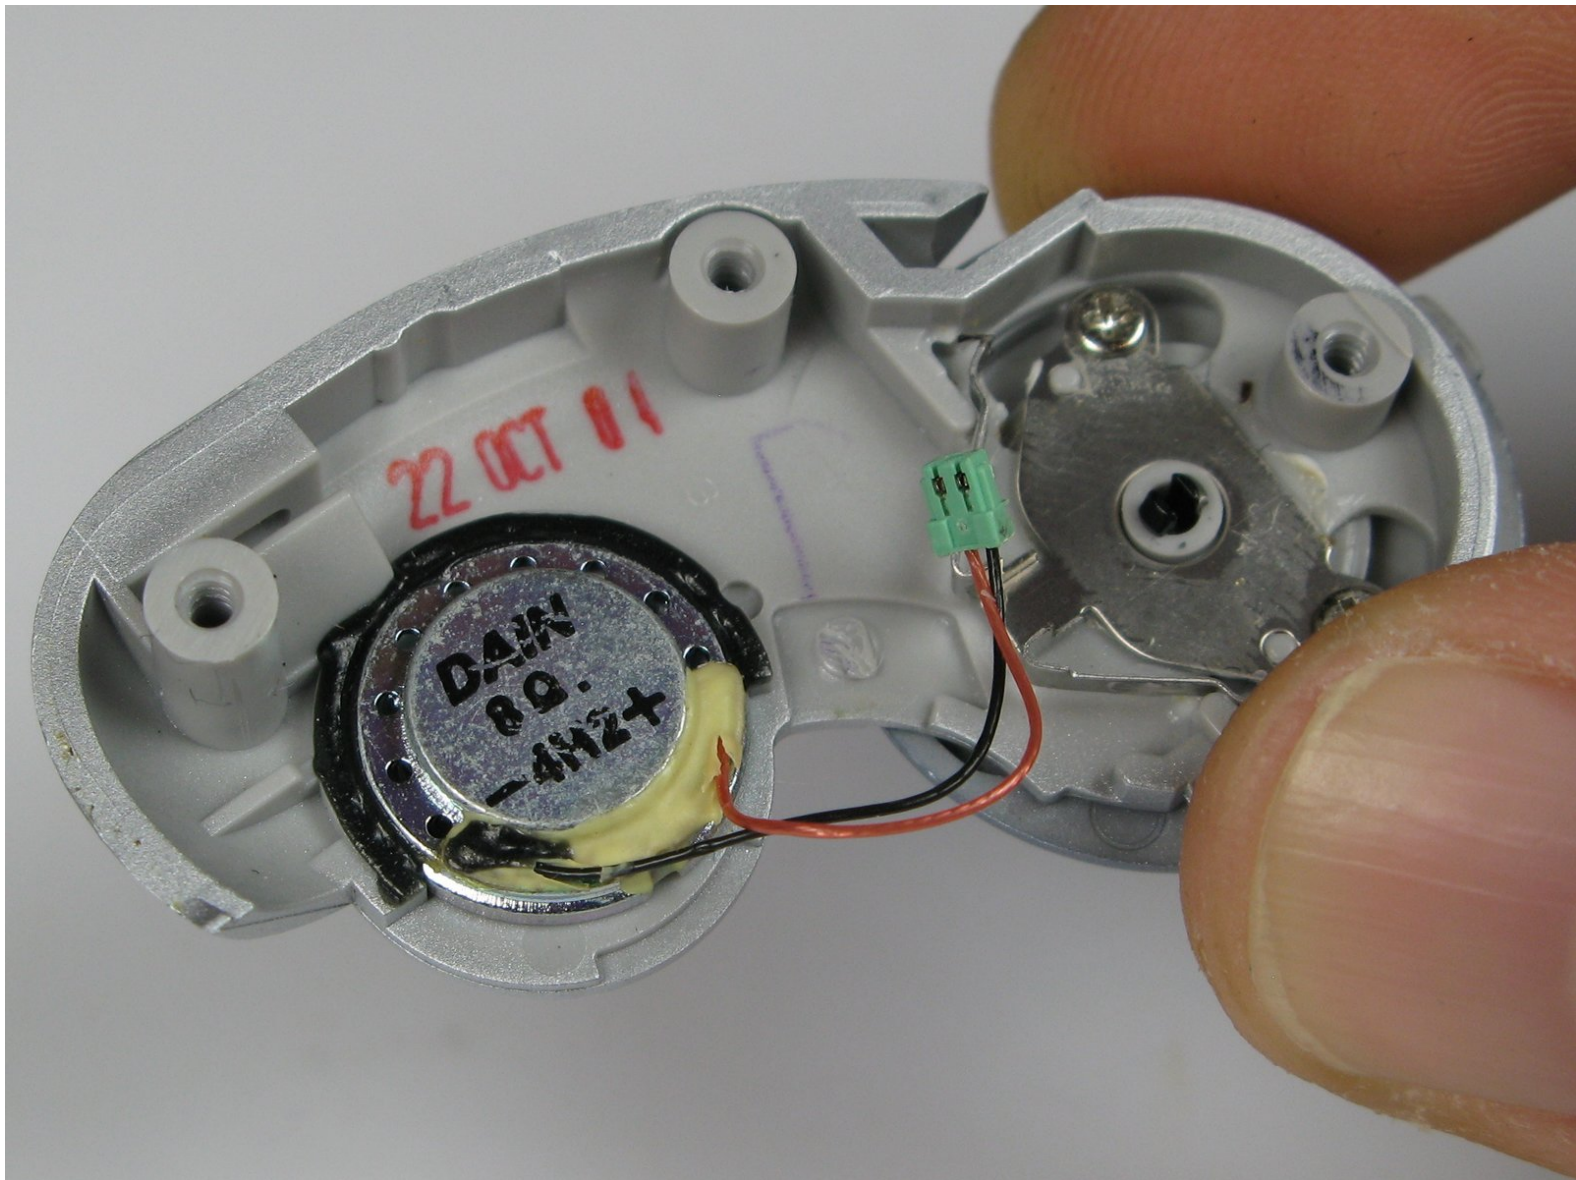

INTRODUCTION

Use this guide to replace the Canon Powershot A75's speaker unit.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Batteries





- Turn the camera over and locate the "BATT OPEN" sliding switch.

Step 2



- Slide the switch to the right.
 - ⓘ The battery cover should slide down and spring open.

Step 3

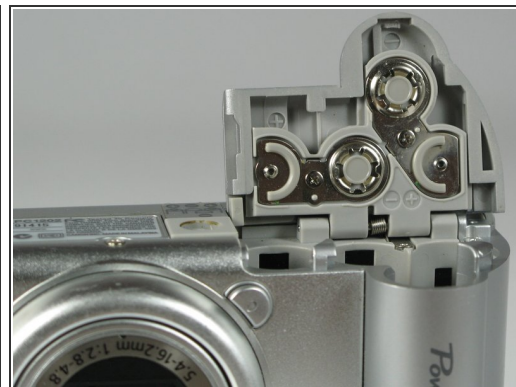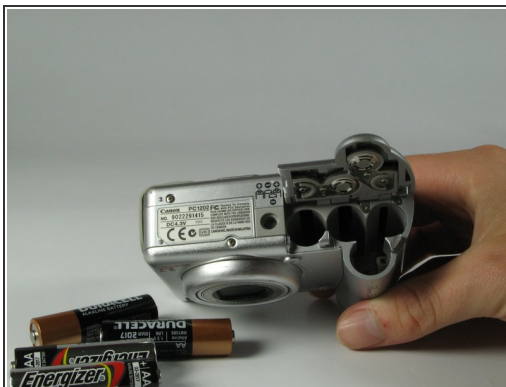


- Remove the 4 AA batteries.
 - ⓘ Watch for the orientation of the batteries as they slide out.
 - ☑ The battery orientation is shown under the battery flap itself and on a sticker next to the battery flap.

Step 4 — Speaker



- Open the memory card slot by sliding it laterally until you hear a click
- Remove the 5.9mm screw in the upper corner of the memory card slot

Step 5

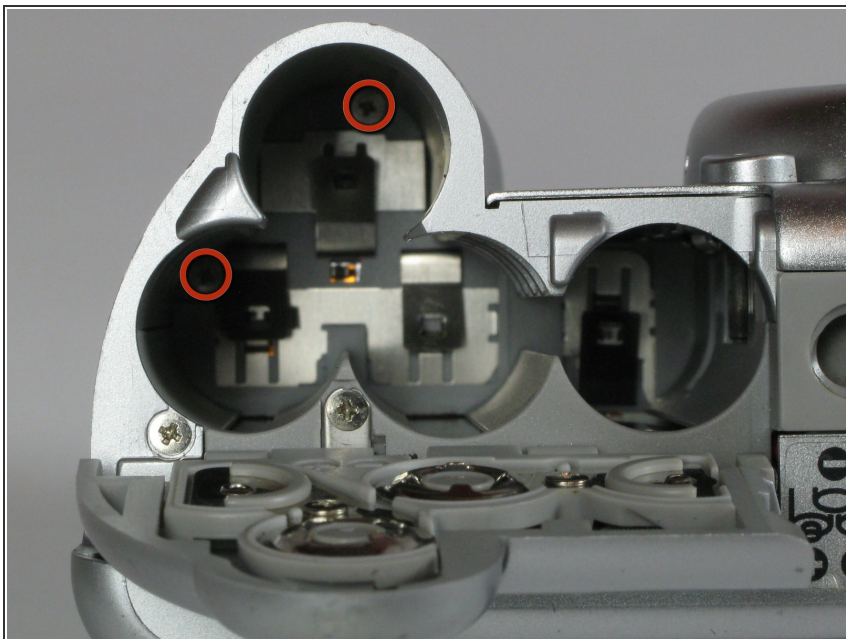


- Remove the two 4.1mm screws at the bottom of the battery flap.

Step 6




- Lift the shutter button and speaker part from the top of the camera.
⚠ Do not pull the part too hard because there is a plug connecting the speaker to the camera.

Step 7

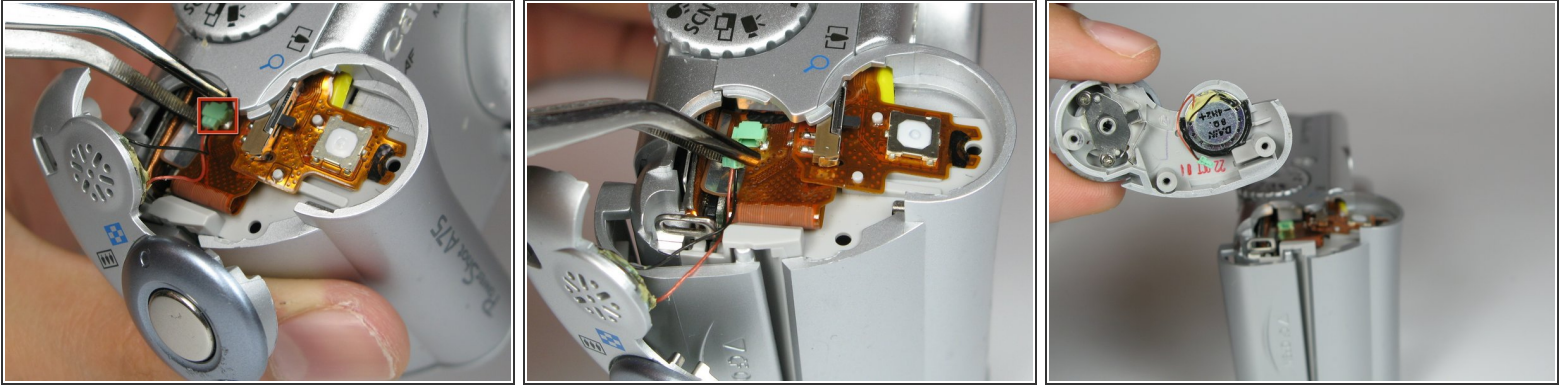

- Using a pair of tweezers, grab the plug that connects the speaker to the camera and gently pull it out.

Step 8

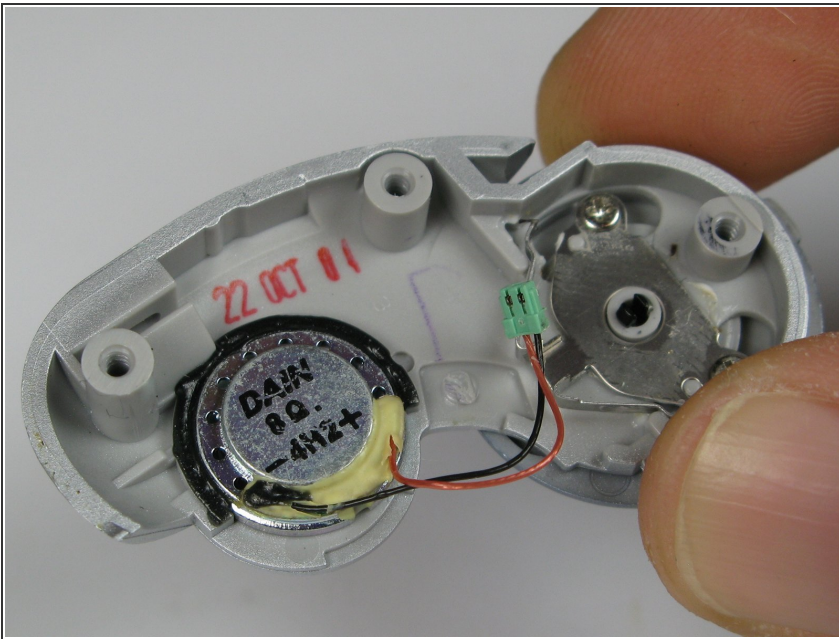

- ⚠ Do not proceed to the next step unless you have previous soldering experience because you can damage the flash unit if you are not careful.
- Remove the glue and unsolder the speaker from the outer casing. Replace or repair the speaker as necessary.

To reassemble your device, follow these instructions in reverse order.