


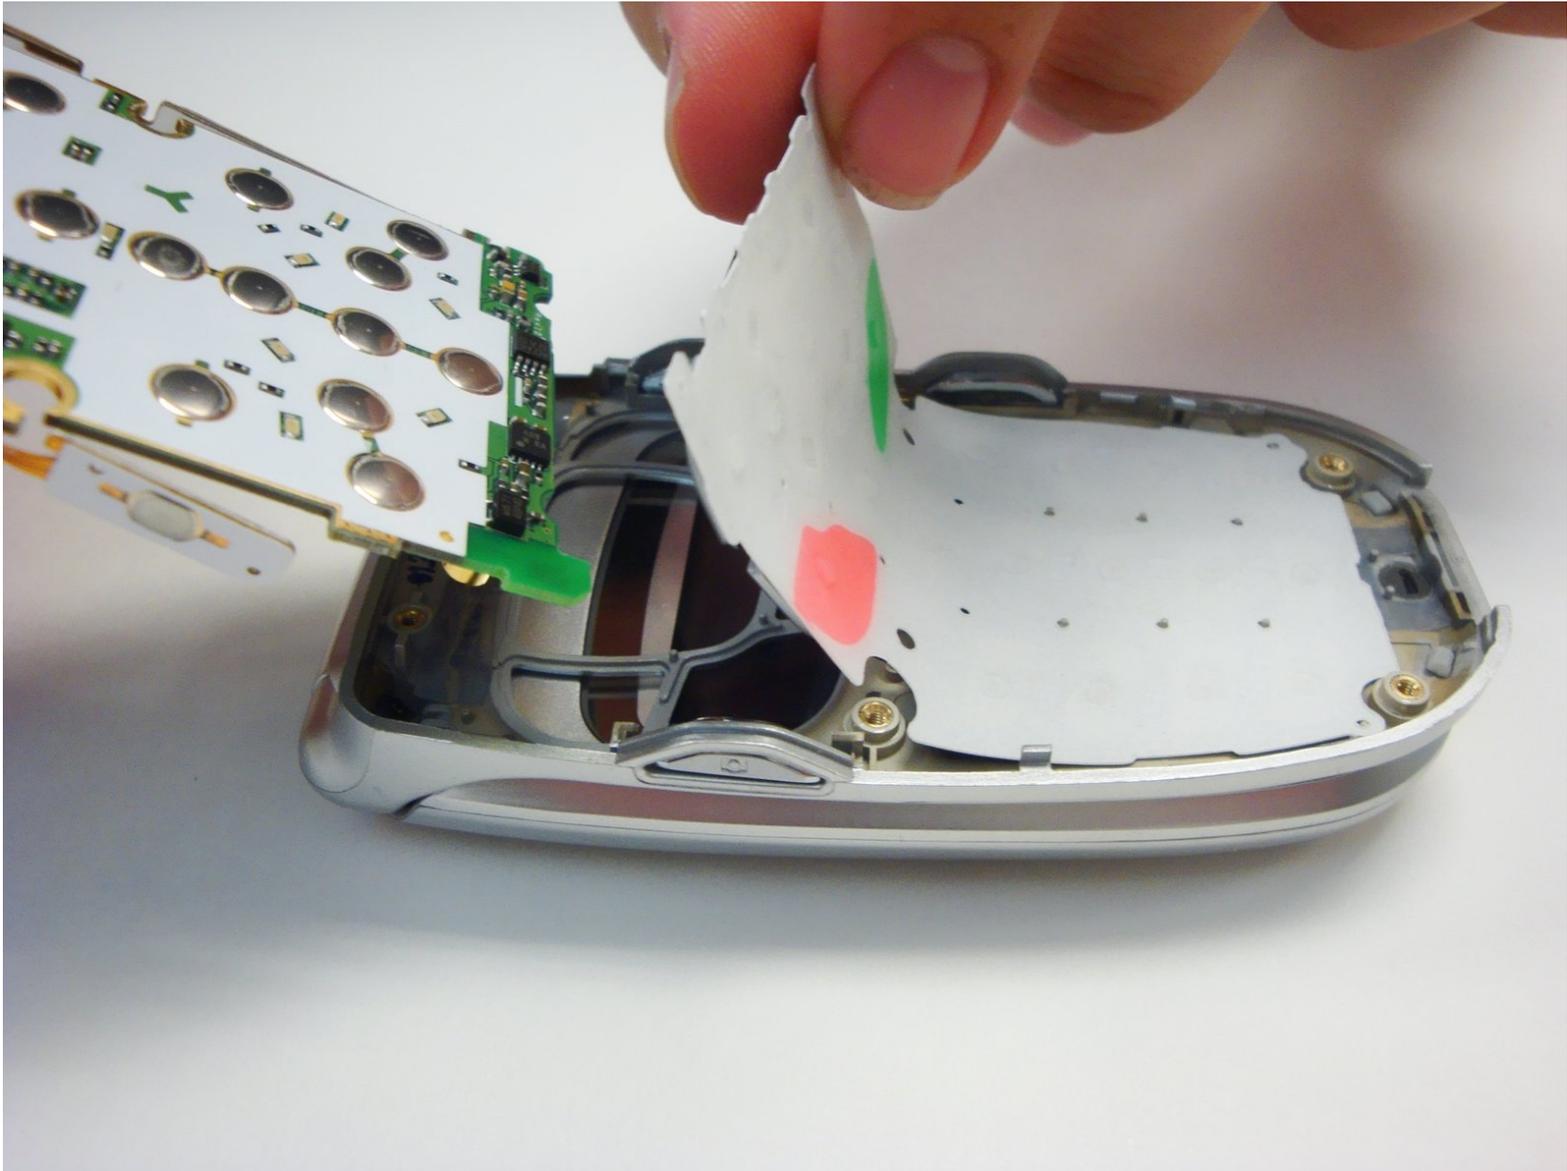

LG VX6100 Keypad Replacement

This guide will explain how to remove and replace the keypad.

Written By: Teal



INTRODUCTION

This guide will explain how to remove and replace the keypad on an LG VX6100.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover



- Push down on the gray "PUSH" button on the back side of the phone.
- Slide the back case downward. Then, lift and remove the case.

Step 2



- Lift up on the battery to remove it from the case.

Step 3




- Use a push-pin or tweezers to pry both of the tear-shaped screw covers out of the top of the phone.

Step 4




- Use a Phillips #00 screwdriver to unscrew the six case screws from the back of the phone.

Step 5

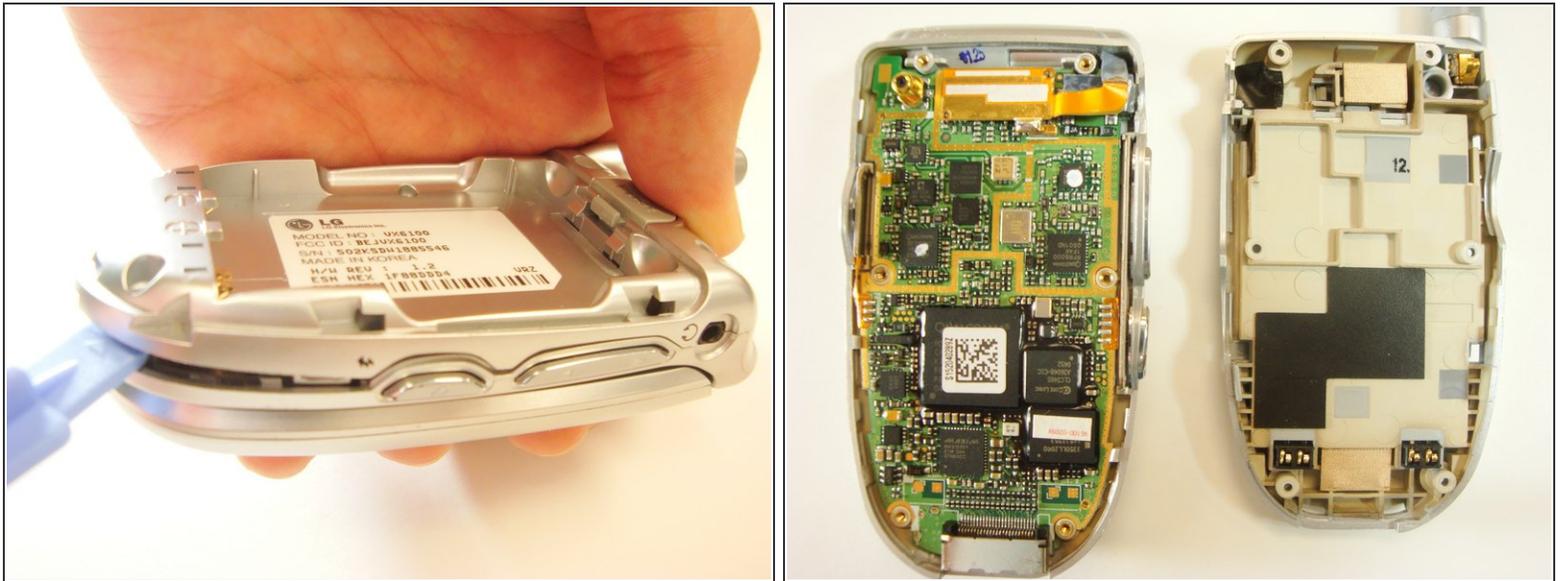


- Insert a plastic opener tool through the seam between the back case and the rest of the phone.
- Slowly slide the tool along the seam. Lift up on the back case while you do this until the back case comes apart.

Step 6 — Keypad

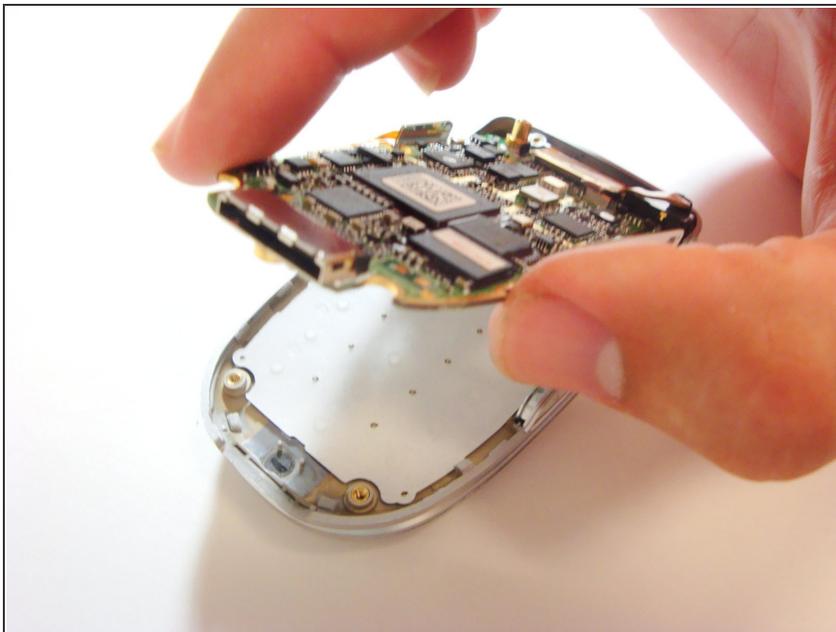

- Lift the bottom of the logic board out of the case.
- ⚠ Make sure not to lift the top of the logic board, since it is still connected to the backcase of the phone.

Step 7

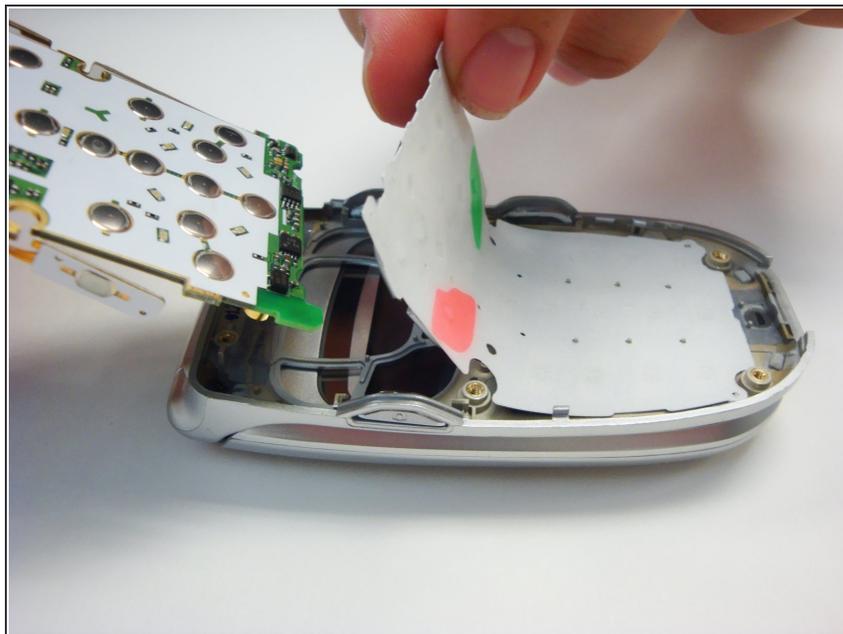

- Gently lift up on any edge of the white keypad to remove it from the phone case.

To reassemble your device, follow these instructions in reverse order.