



P775DM3 LCD Screen Replacement

Written By: Felice Suglia





TOOLS:

Phillips #0 Screwdriver (1)

Tweezers (1)





PARTS:

Pièces pour why! P775DM3 CH (1)



Pièces pour why! P775DM3 EU (1)

Step 1 — Battery

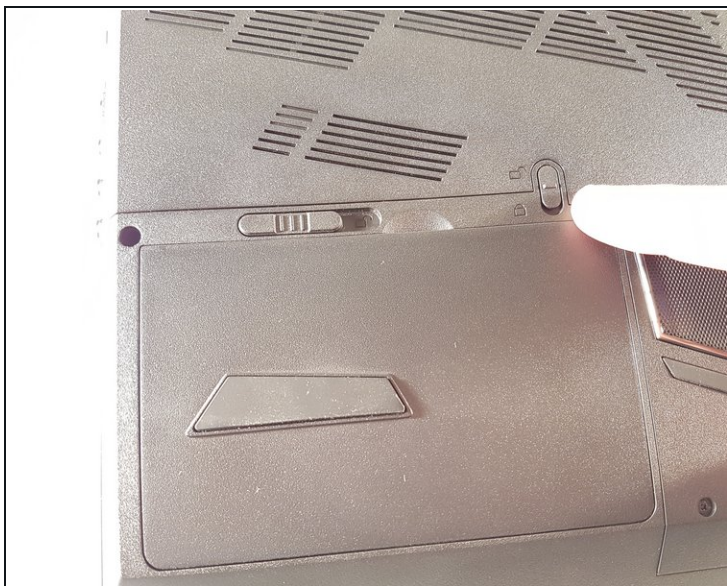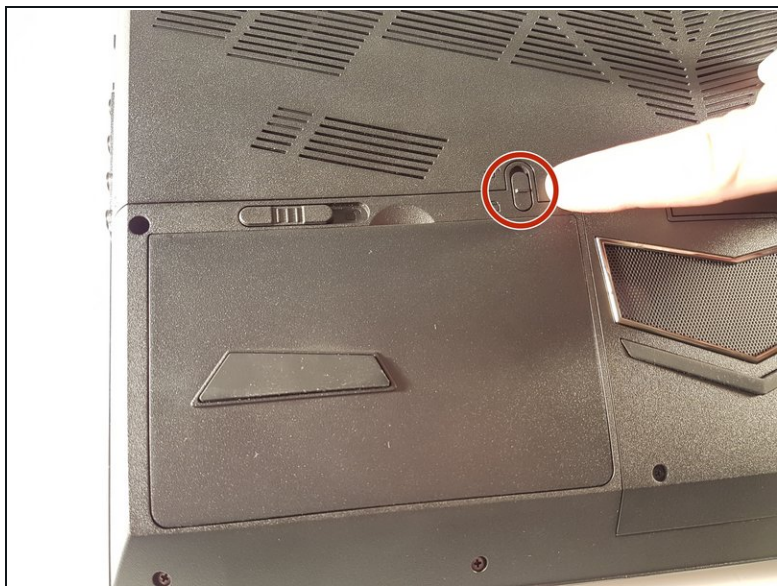

- Unlock the lock circled in red.

Step 2

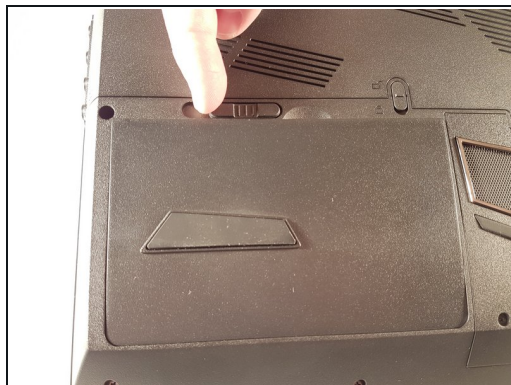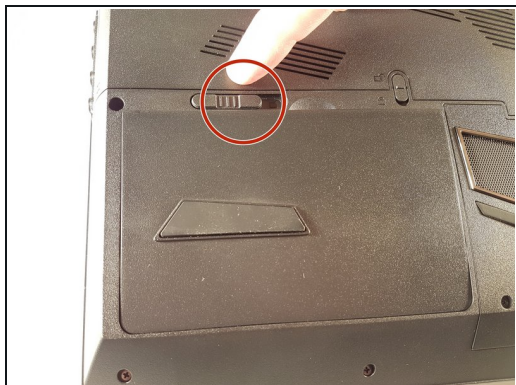



- Lift the battery while unlocking the lock circled in red.

Step 3 — LCD screen





- Remove the two stickers circled in red.
- Unscrew the two screws under the two stickers.

Step 4

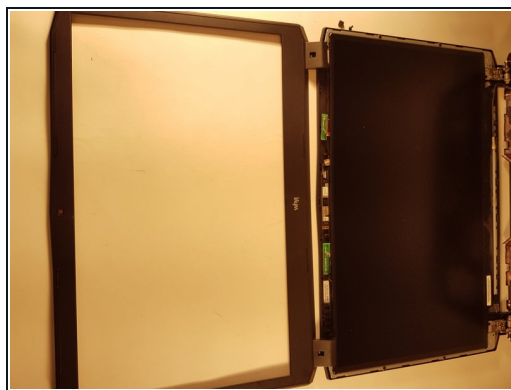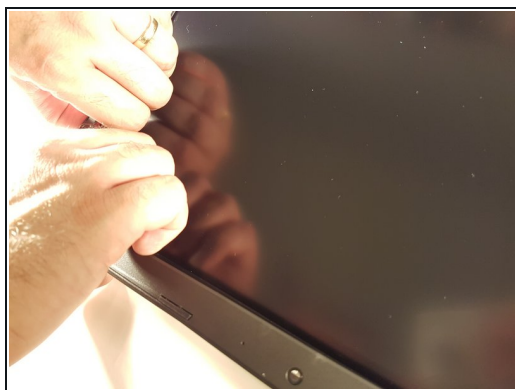

- Remove the screen bezel.
- Unscrew the four screws circled in red.

Step 5

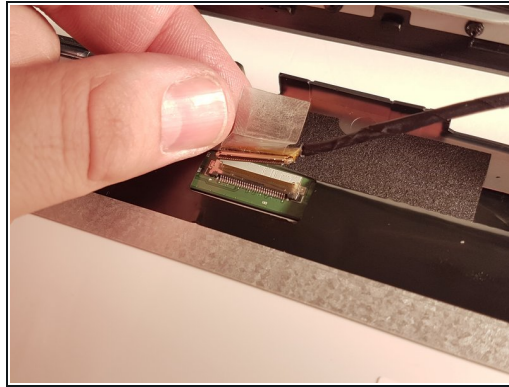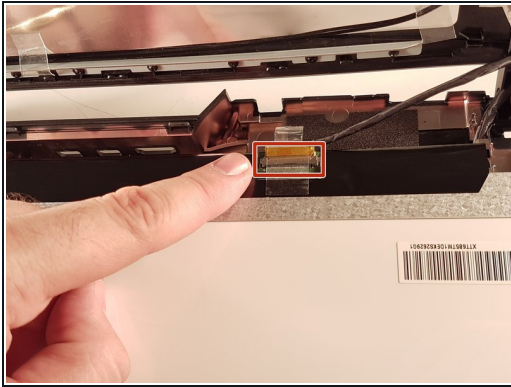

- Lift the tape that holds the connector (shown with red).
- Disconnect the ribbon connector, shown with red.
- Gently remove the screen.

To reassemble your device, follow the instructions in reverse order.