



# HP Chromebook 14-x013dx Screen Replacement

This guide is designed to assist you with the replacement of the HP Chromebook 14-x013dx Screen.

Written By: NHerbert



## INTRODUCTION

This guide will assist you in successfully replacing the HP Chromebook 14-x013dx Screen. This requires the removal of the bezel around the screen, as well as 4 screws and the connection to the motherboard. Some of the removed parts have adhesive on them which may need to be reapplied.



**Note:** The replacement of the screen does not require any prior disassembly of the laptop.



### TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Screen

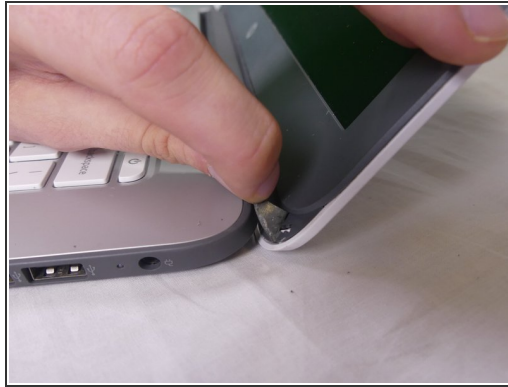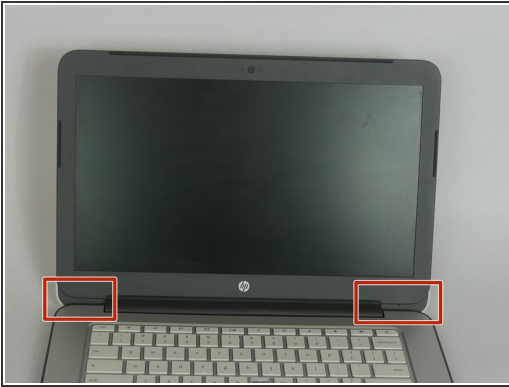



- Remove lower left and right nylon flaps on the screen to remove the screws located underneath them.
- ⓘ The nylon strips on the side may be difficult to remove, as they are held on with adhesive. A spudger can be used to help remove these strips before removing with fingers.
- Remove the two 2mm screws holding the bezel to the laptop case.

## Step 2



- Gently pry around the edges of the display using a spudger to remove the bezel that borders the screen.

### Step 3

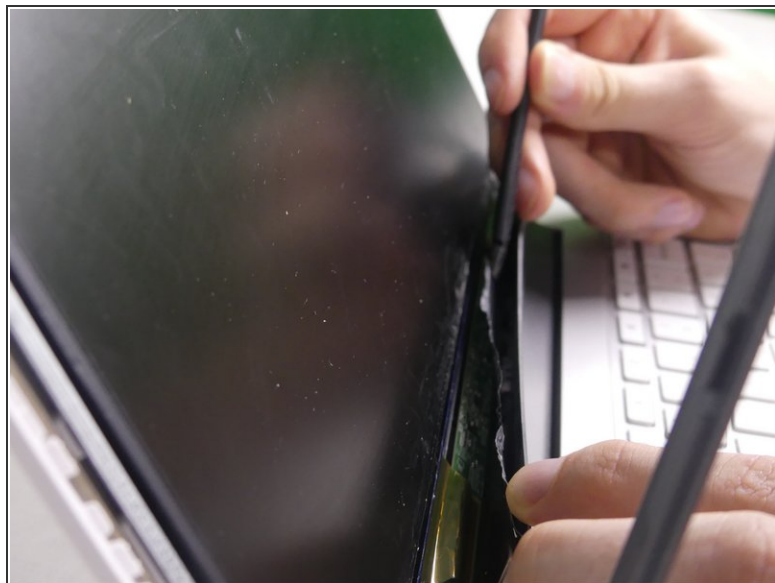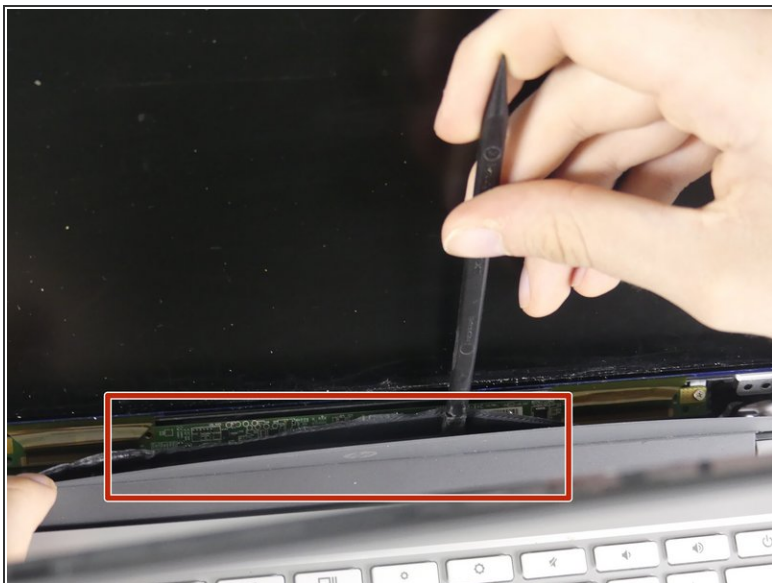

- Remove glued plastic at the bottom of the cover.


### Step 4



- Once glue is separated, pop out the front cover by pulling upwards on the hinge.






## Step 5

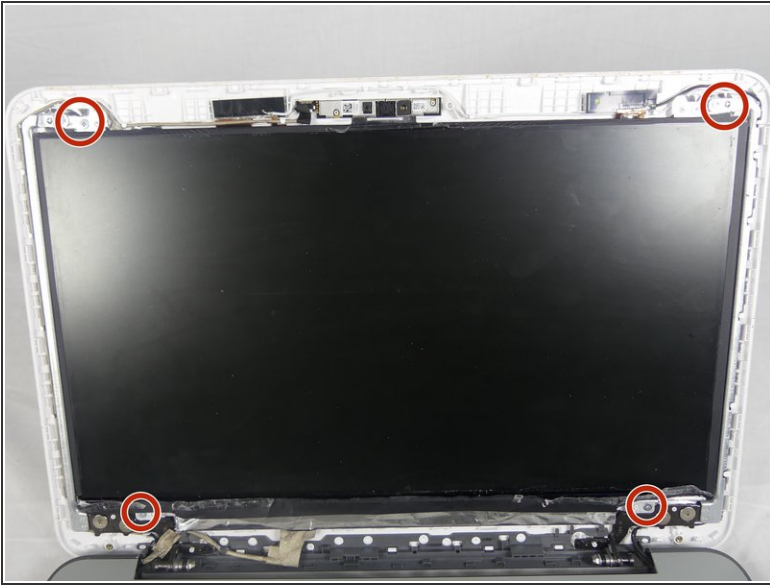

- Once the bezel has been removed, remove the four 5mm screws at the corners of the screen using a PH00 screwdriver.

## Step 6

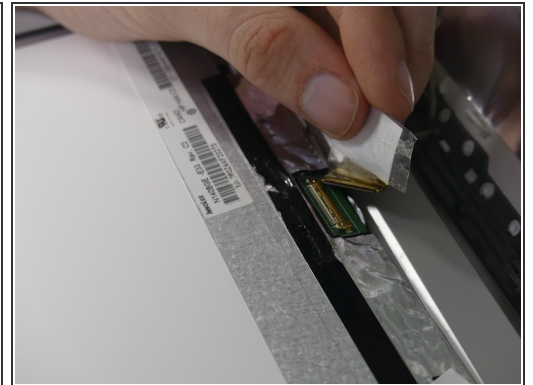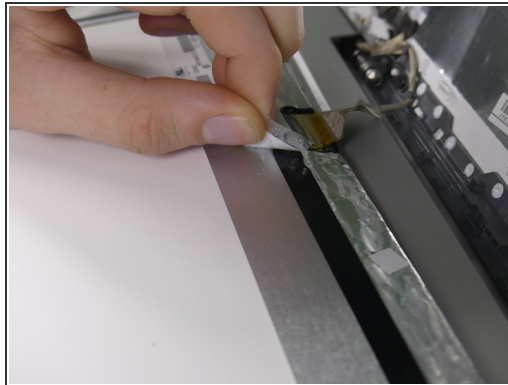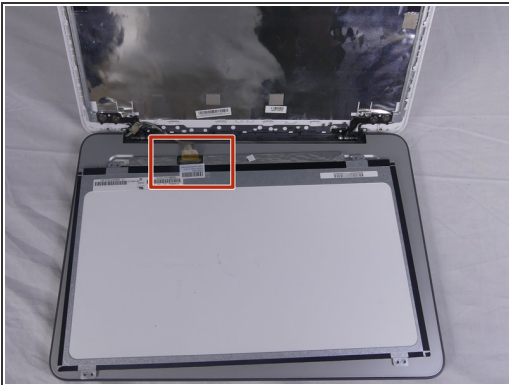

- Before completely removing the screen, detach the connected located at the bottom of the screen.  
 ⓘ The connection to be removed should have a barcode marking.

To reassemble your device, follow these instructions in reverse order.