


Asus X202E-UH31T Speaker Replacement

This guide will help you complete the replacement of a speaker in your Asus X202E Laptop. There are 2 speakers that this guide will show how to replace.

Written By: Brandon Bloomfield

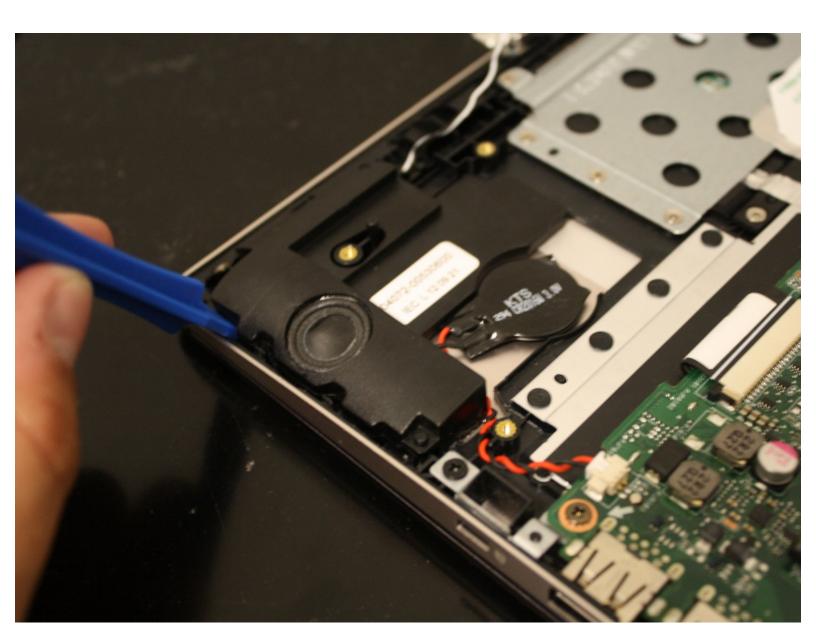

INTRODUCTION

This guide will show you how to replace the two speakers in your device.



TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Speaker



- Remove the 9 1.2mm phillips head screws off the back of the computer by using a small phillips head screw driver.
- Start by disconnecting the battery cable/ribbon.

Step 2




 Use a plastic opening tool to open the components of the laptop. In order to do this, insert the plastic opening tool in between the two covers then pry open.

Step 3




- Once the back is off the device, locate the speakers. Remove the 7
 1.2mm phillips head screws holding battery in place. Use a small phillips head screw driver.
- Disconnect the battery ribbon and remove the battery.

Step 4

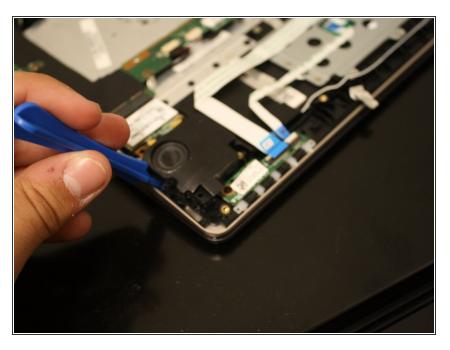

 Use a long plastic pry tool to remove the speaker from the computer.
Note: There is strong adhesive holding the speaker down.

Step 5

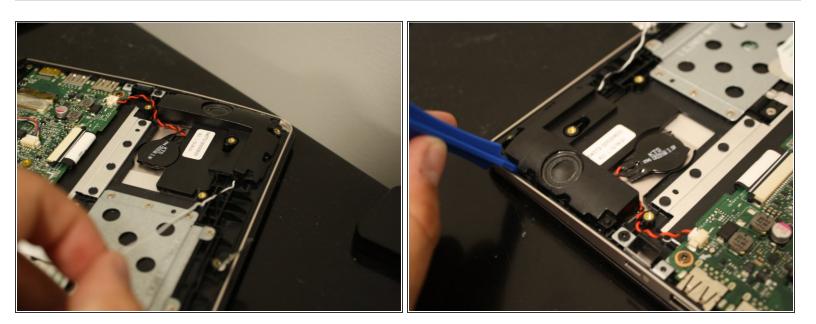

- Lift current speaker up and follow the wire to the remaining speaker.
- Repeat previous step to remove second speaker from adhesive.

To reassemble your device, follow these instructions in reverse order.