



Sky Thunder HD 8500WH Lockstich Replacement

This guide will show you how to replace the lockstich on the Sky Thunder HD 8500WH.


Written By: Nicholas Jones



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Rotor Blade

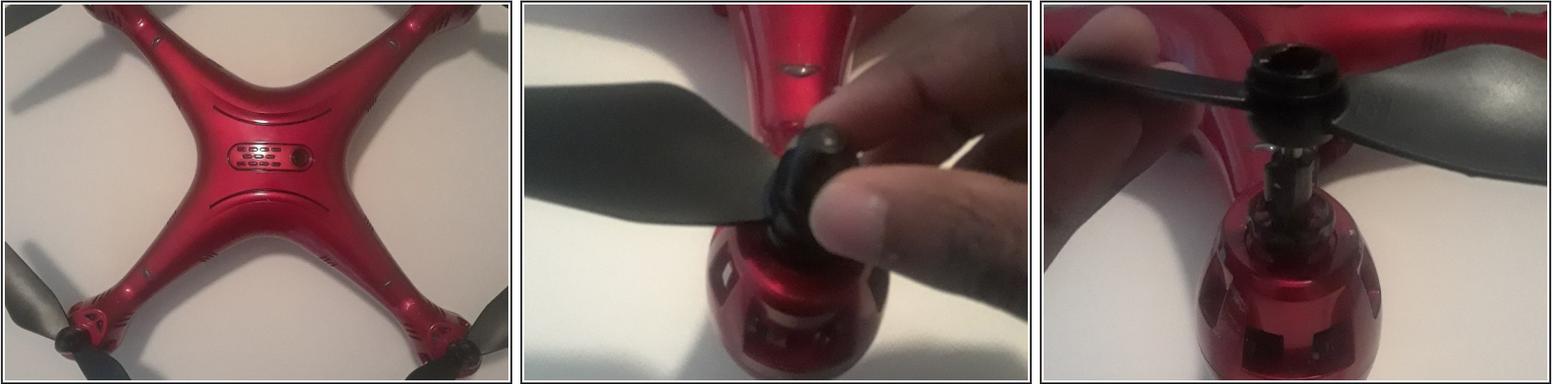

- Place the drone with the top side facing up.
- Remove the blade cover.
- Remove the rotor blade.

Step 2 — Lockstich



- Unscrew the 1cm screw holding in the blade lockstich with the Phillips 0 Screwdriver.
- Remove the blade lockstich.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:11:56 AM (MST).

