



Dyson V8 Absolute Battery Replacement

Replacing the Dyson V8 Absolute Battery.

Written By: Jasvir Dosanjh



INTRODUCTION

In case the device is not turning on and the battery has been completely charged for 5 hours, the battery may need to be replaced. The battery can be easily removed and replaced.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)



PARTS:


- [Dyson V8 Vacuum Battery](#) (1)

Step 1 — Battery

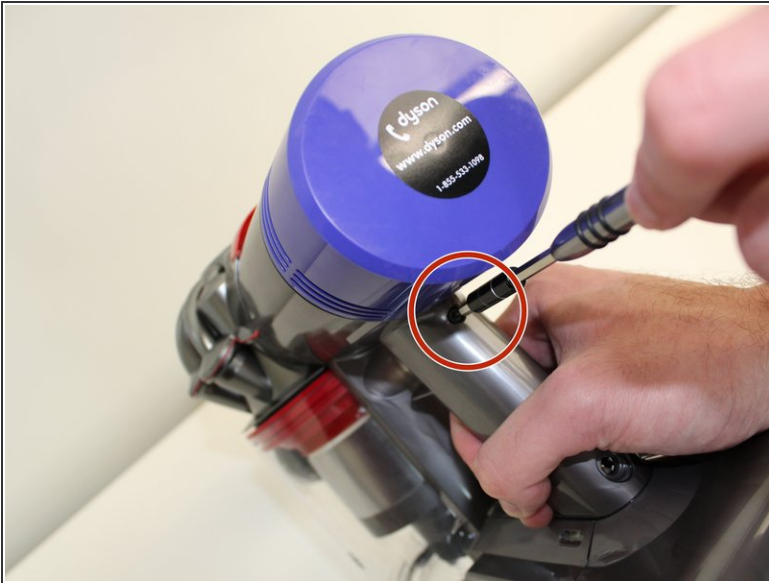

- ✦ Detach wand from device.
- Use a Phillips #2 screwdriver to unscrew the screw from the device handle.
- ⓘ Screw Head Type: Phillips #2
- ⓘ Screw Length: 170mm

Step 2

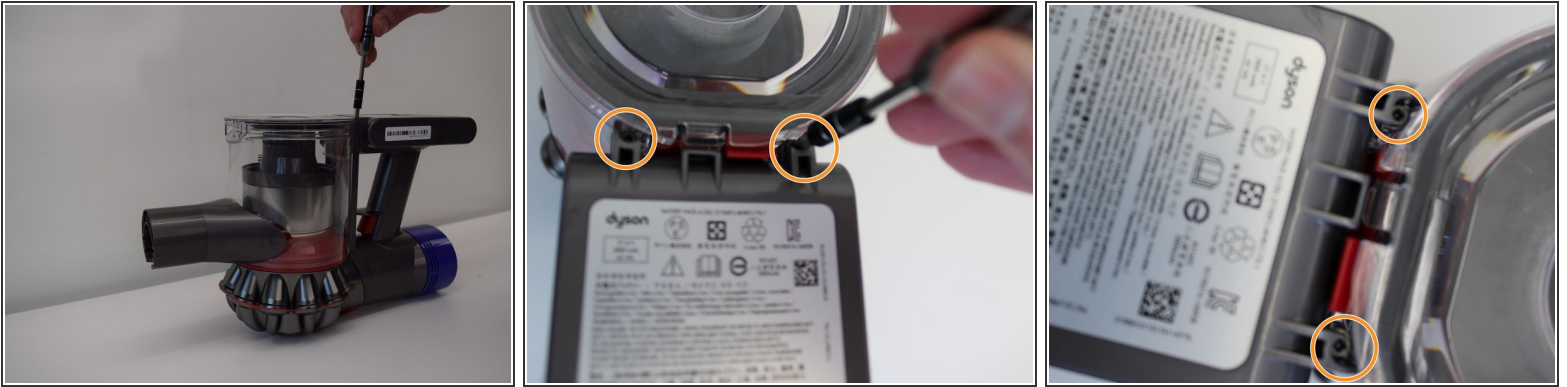

- Turn device completely over to view battery pack.
- Below the bin, use a Phillips #2 screwdriver to remove both screws from the battery pack.
- ⓘ Screw Head Type: Phillips #2
- ⓘ Screw Length: 170mm

Step 3



- Pull the battery pack down and away from the device.

⚠ Battery pack may fall out.

To reassemble your device, follow these instructions in reverse order.