



Dell Inspiron 15-5558 Screen Replacement

This guide will show how to remove and replace the screen of a Dell Inspiron 15-5558

Written By: Adam Lourenco



INTRODUCTION

If your device screen breaks, you might need to replace it. The screen is the part of the device when images are displayed. This guide shows you how to replace a broken or faulty screen



TOOLS:


- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery




- **i** Make sure you turn off the device before starting.
- Flip the device over and so the white bar code is on the right.

Step 2

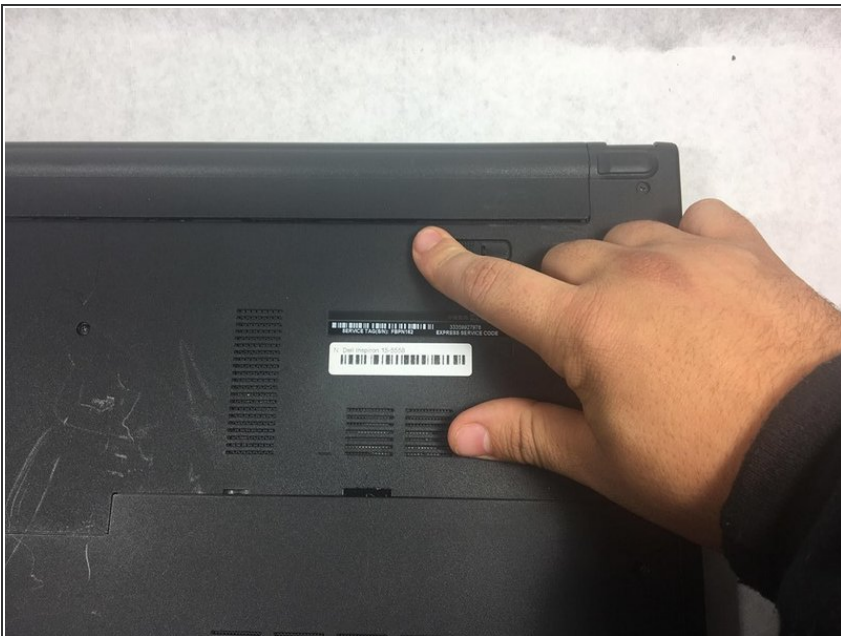

- Slide the battery latch all the way to the left until you hear the click and see the battery prop up.

Step 3

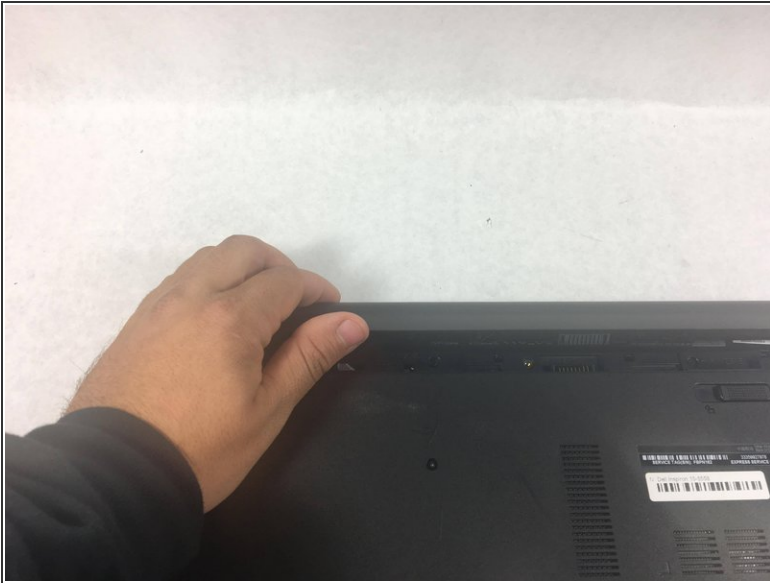

- Rotate the battery up and remove it.

Step 4 — Screen



- Open device so it is at least opened at a 90 degree angle.
- Wedge a spudger between the screen and the plastic frame.
- Push in the spudger and push down to pop the frame from the pins.
- Repeat around the whole frame.

Step 5



- Once all the pins are off, remove the frame by pulling it away from the screen.
- Using a Phillips #0 screwdriver, unscrew the four 3mm screws holding the screen in place.
- Push the spudger behind the screen and push down to remove the screen.

Step 6



- Pull the tape connecting the screen up with your fingers and pull the securing bar up with it.
- Disconnect the securing bar to remove the screen.

To reassemble your device, follow these instructions in reverse order.