




Asus Z54C-JS31 Hard Drive Replacement

This guide shows how to replace the hard drive disk in an Asus Z54C-JS31 laptop.

Written By: Mark DeSimone

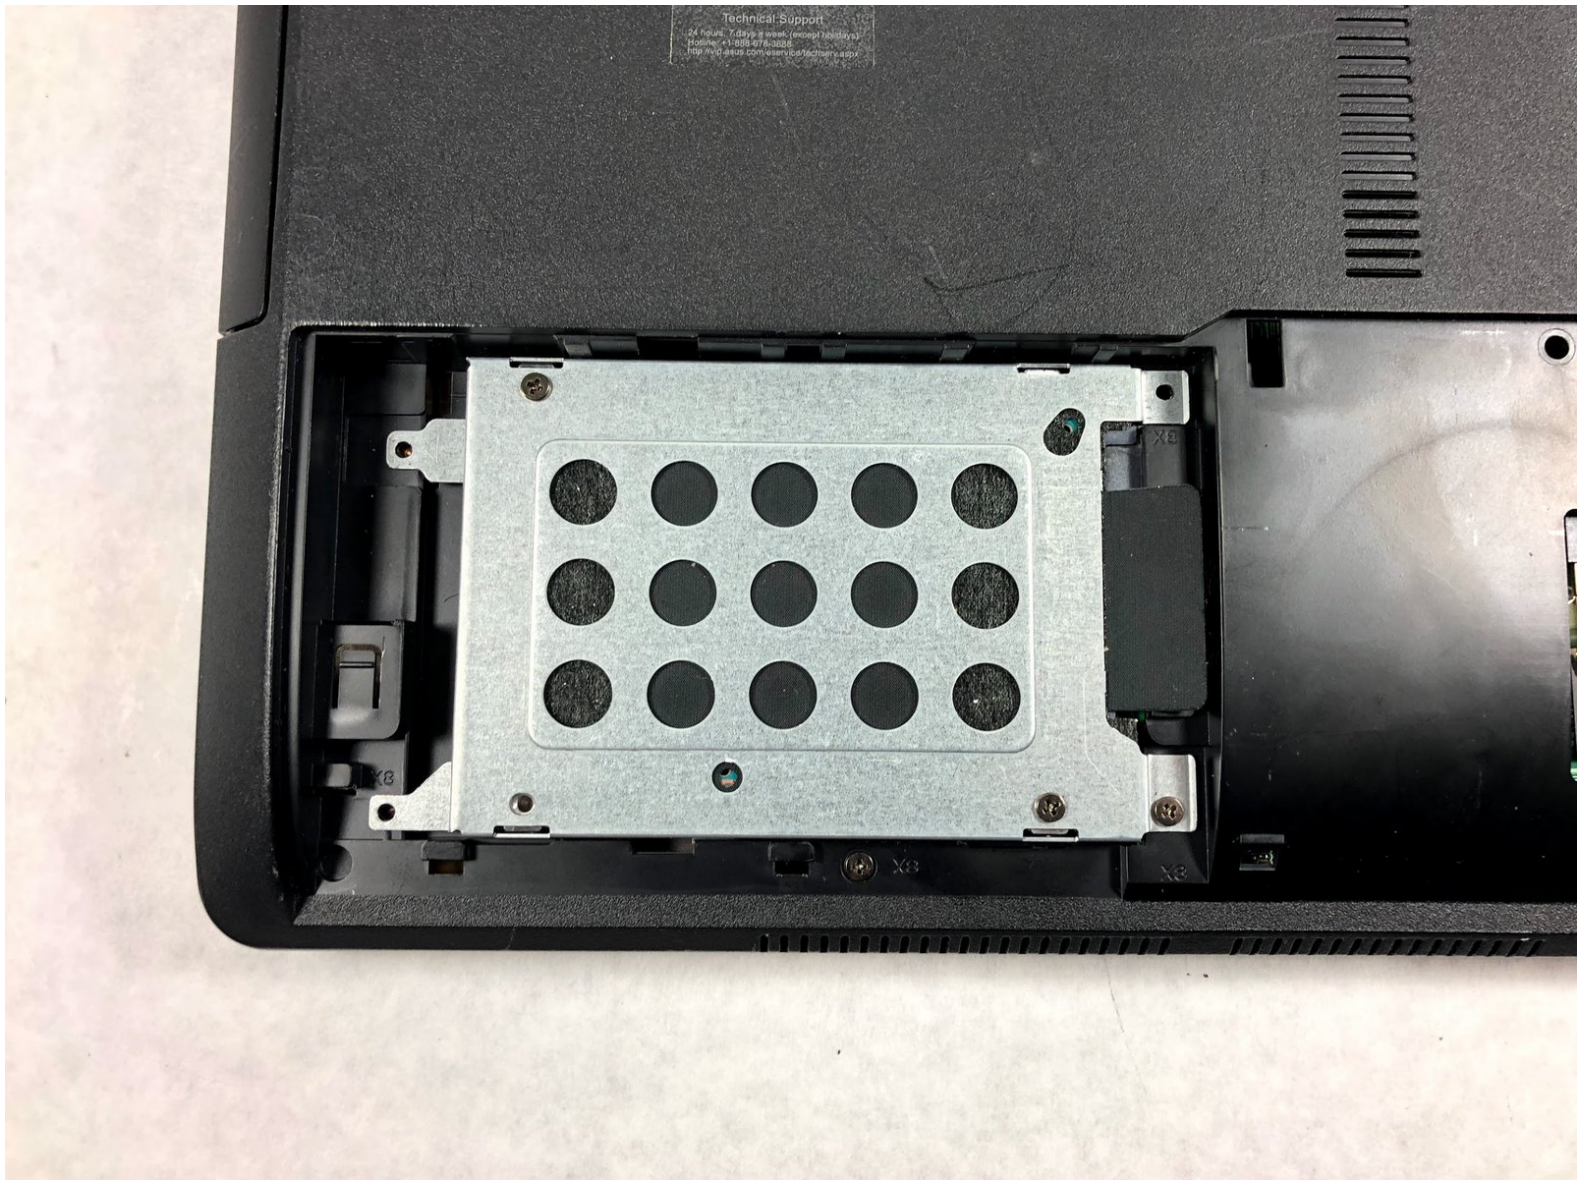

INTRODUCTION

The hard drive is important for storing the computer's data and may need to be replaced or upgraded to increase the amount of storage space.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery




- Turn the laptop upside down so that the underside is facing up and locate the two switches that are on each side of the battery.
- Slide the switch on the top right corner to the right.
- Slide and hold the switch on the top left corner to the left and carefully remove the battery.

Step 2 — HDD/RAM Cover Panel



- Use a Phillips #000 screwdriver to remove the two 9mm screws from the HDD/RAM cover panel.

Step 3

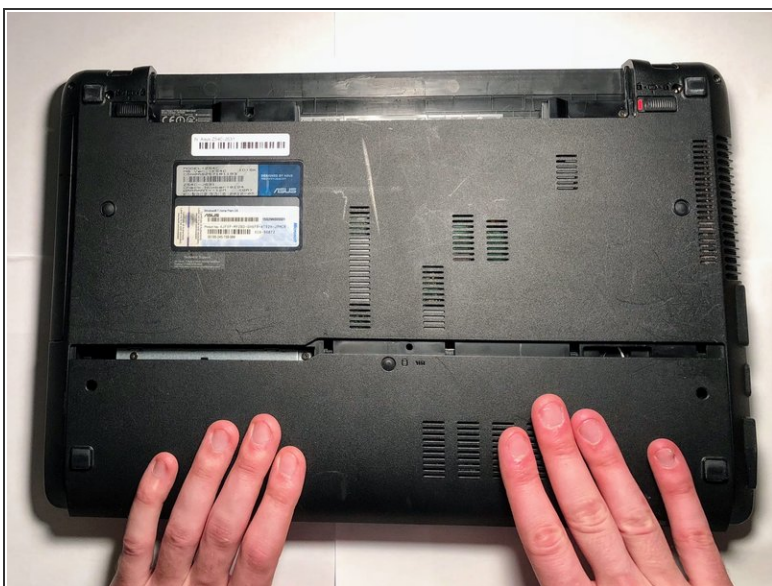


- Slide the back panel off by placing a hand on each corner and pulling the panel towards you.

Step 4 — Hard Drive



- Remove the four 9mm screws holding the hard drive in place.

Step 5

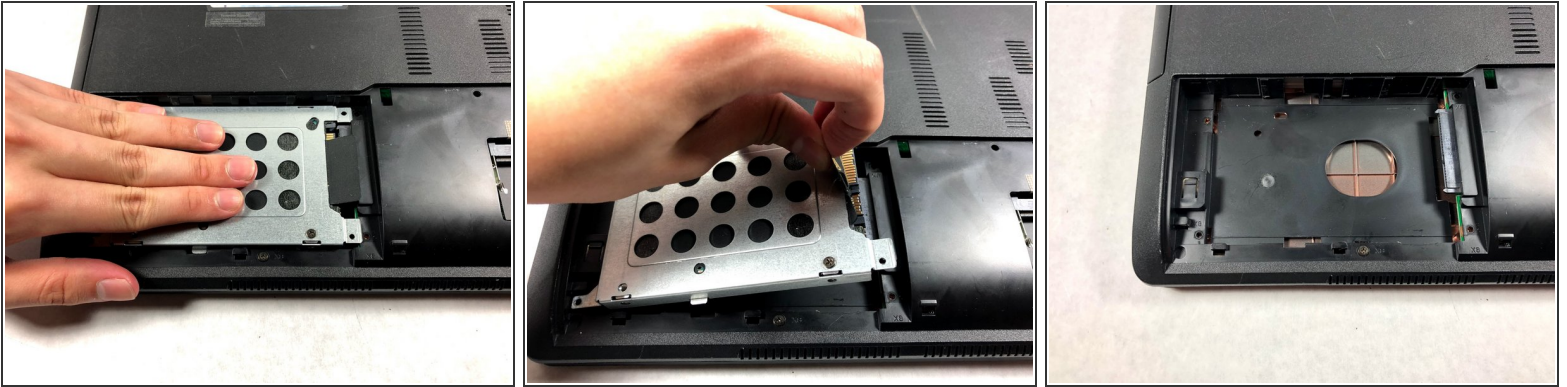

- Slide the hard drive to the left to disconnect it.
- Then pull on the black tab to lift the hard drive out of the laptop.

To reassemble your device, follow these instructions in reverse order.