


# **Dell Latitude E6510 WWAN Card Replacement**

If your laptop cannot connect to the cellular...

Written By: Kolin Doyle

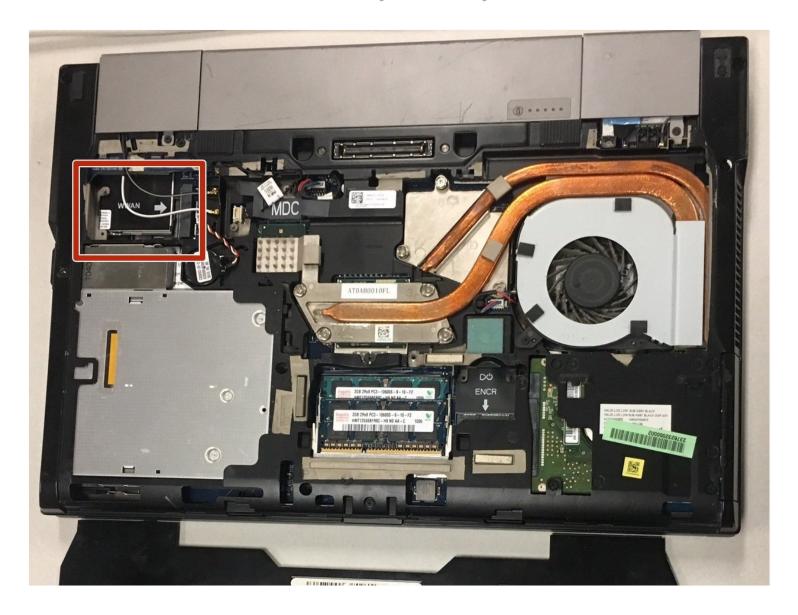

#### **INTRODUCTION**

If your laptop cannot connect to the cellular network it may be due to the WWAN card. Follow this guide to help properly replace the WWAN card.

### TOOLS:

Spudger (1) JIS #1 (1)

## Step 1 — WWAN Card



- Remove the 8mm screw in the middle from the laptop with the J1 screwdriver.
- Then slide the back plate off.

## Step 2



- Remove the antenna wires from the WWAN card using a plastic opening tool.
- Use the same Phillips screwdriver to remove the screw holding the WWAN card in place.
- *i* The WWAN card is missing in this model.

To reassemble your device, follow these instructions in reverse order.