




LG G Vista Battery Replacement

Replace the dying battery in your LG G Vista to improve device performance.

Written By: Key Baker

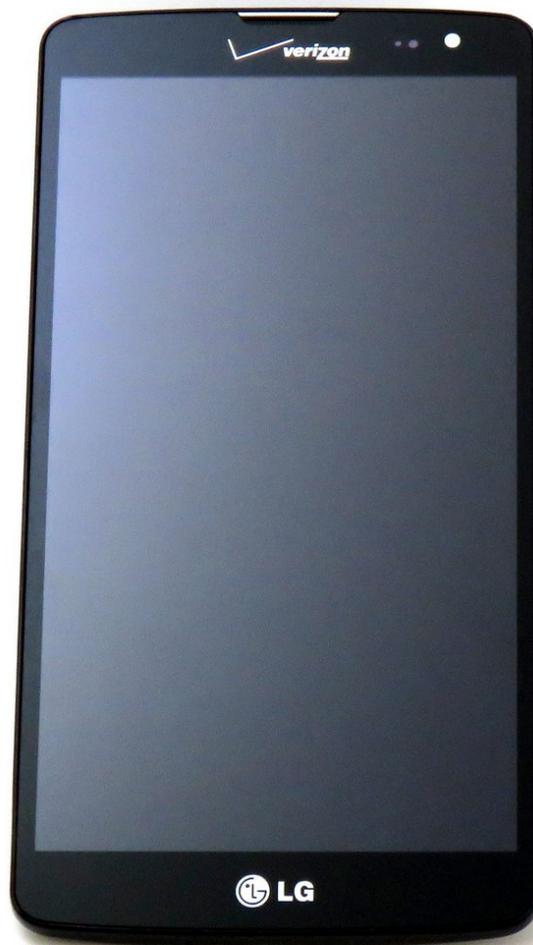

INTRODUCTION

Replacing the battery on your LG G Vista is an easy process. No tools are needed. You will just need to use your thumb nail.

Step 1 — Battery




- Make sure the device is powered off.

Step 2



- Remove the back cover by gently prying open the case of the device from the charging port.

Step 3

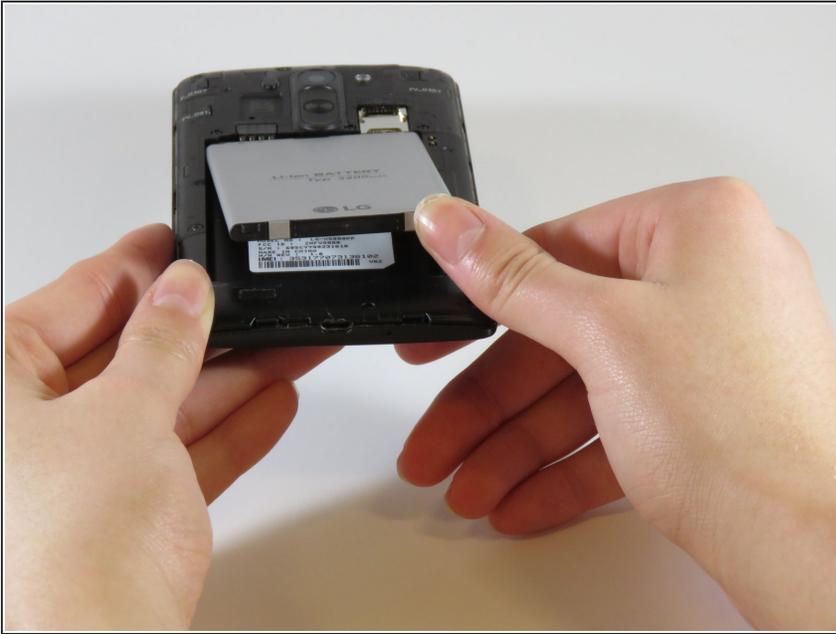

- Lift the battery out of its place by prying up from the small notch at the base of the battery.

Make sure battery is perfectly fitted into it's spot before replacing the back cover. Power phone on to ensure the new battery is working properly.