




Dell Vostro 15 3562 Optical-Disk Drive Replacement


Written By: Johnathan Hammond

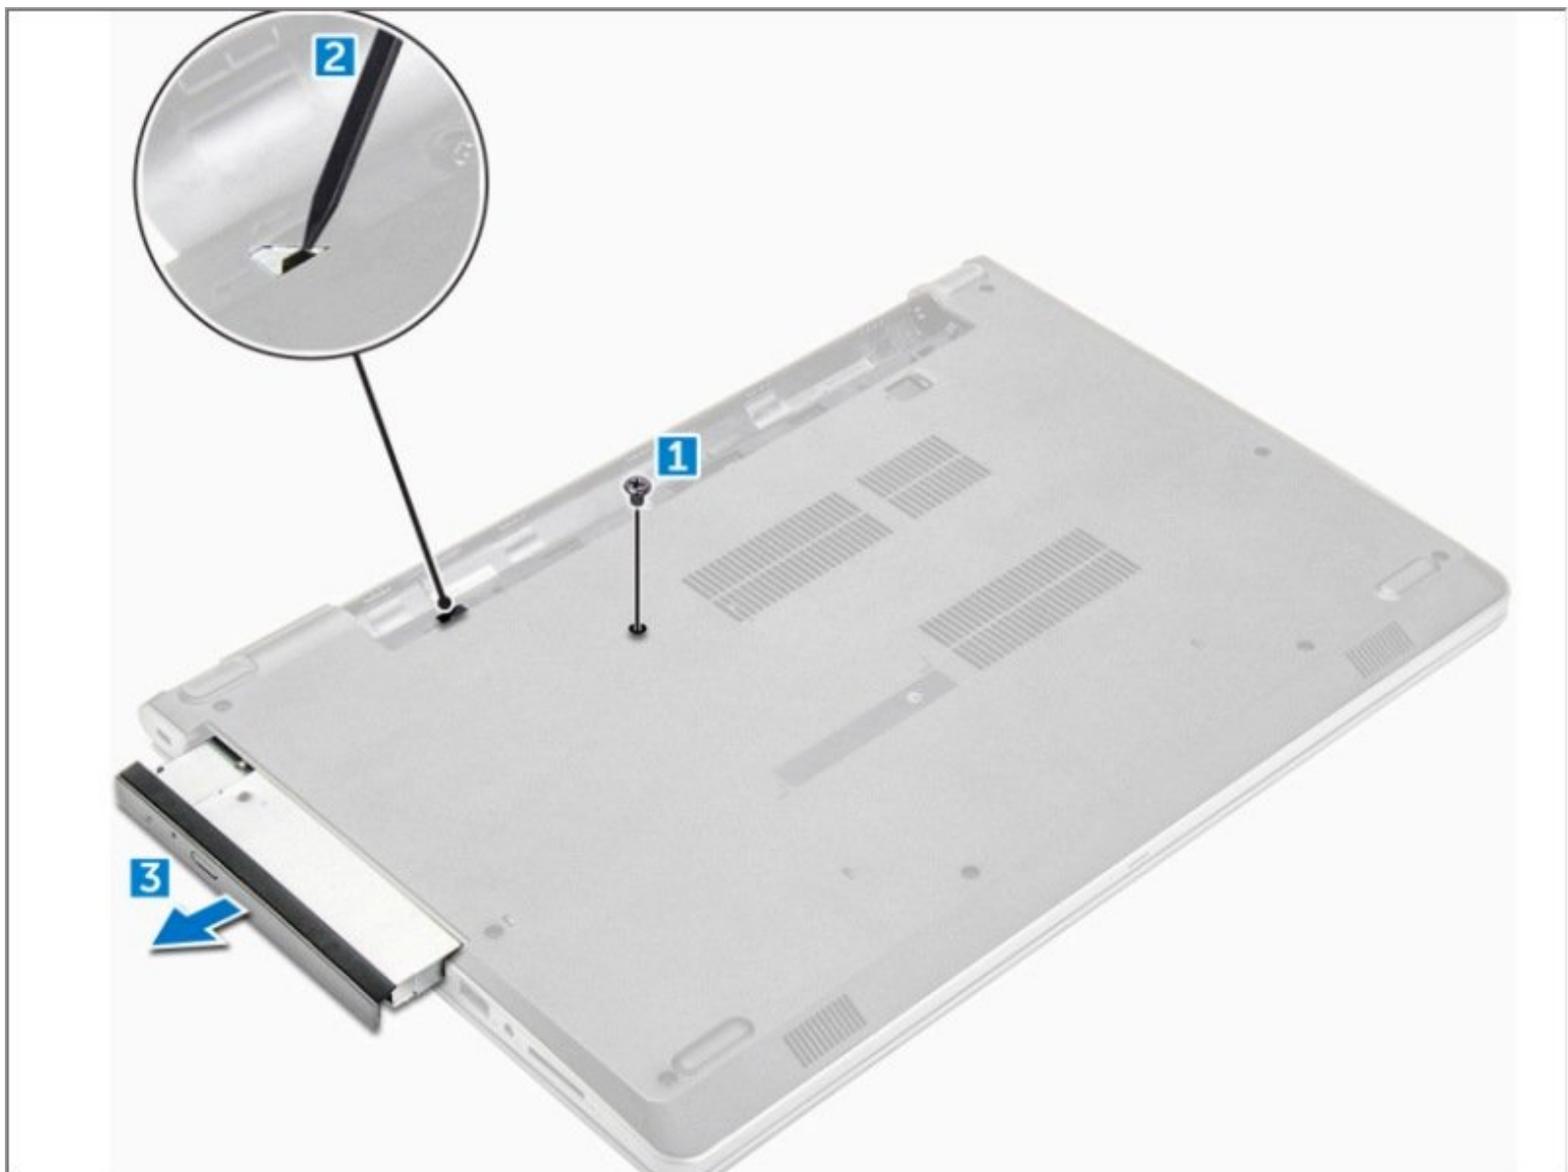

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)
-

Step 1 — Battery

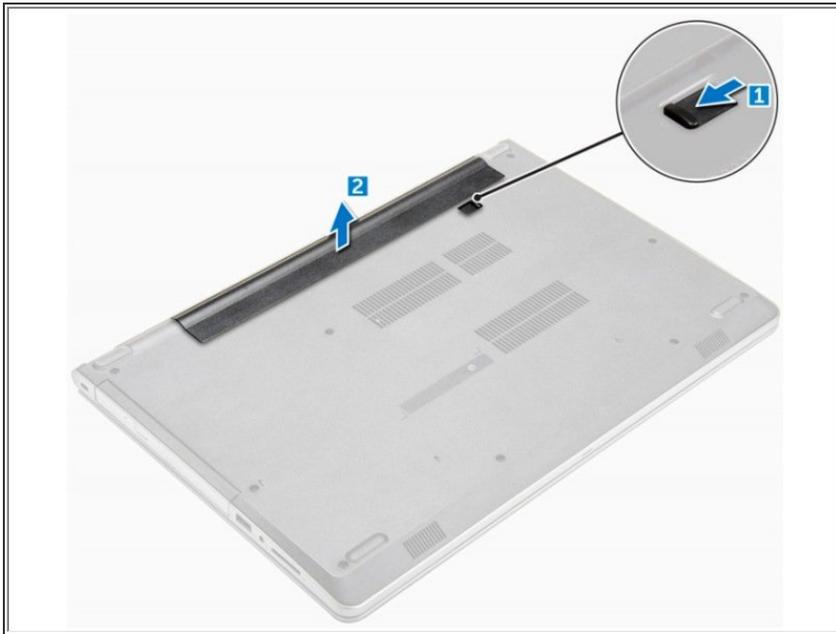

- Slide the release latch to release the battery [1].
- Remove the battery from the computer [2].

Step 2 — Optical-Disk Drive

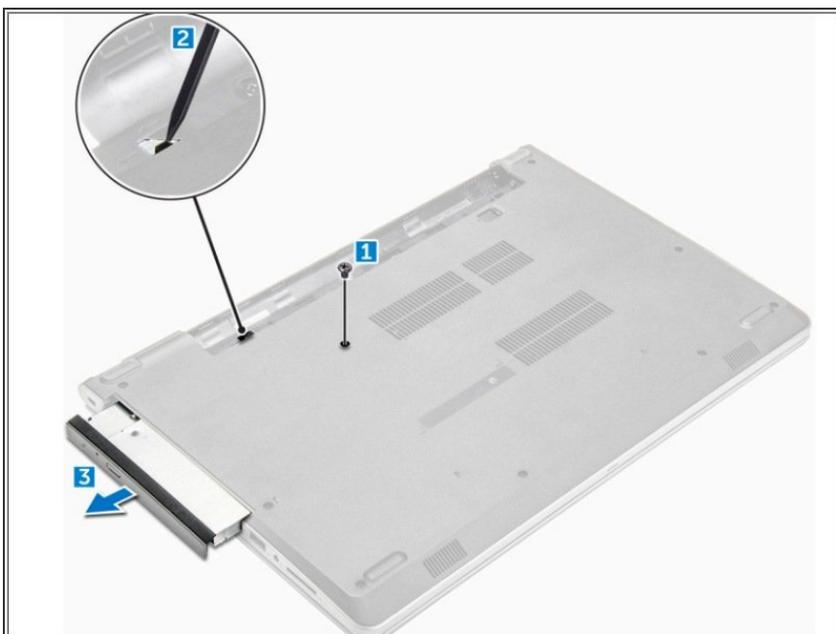

- Remove the M2L3 screw that secures the optical drive to the computer [1].
- Using a plastic scribe, push the tab in the direction of the arrow indicated on the chassis. [2].
- Slide the optical drive out of the computer [3].

To reassemble your device, follow these instructions in reverse order.