




Dell Vostro 15 KeyBoard Replacement


Written By: Johnathan Hammond

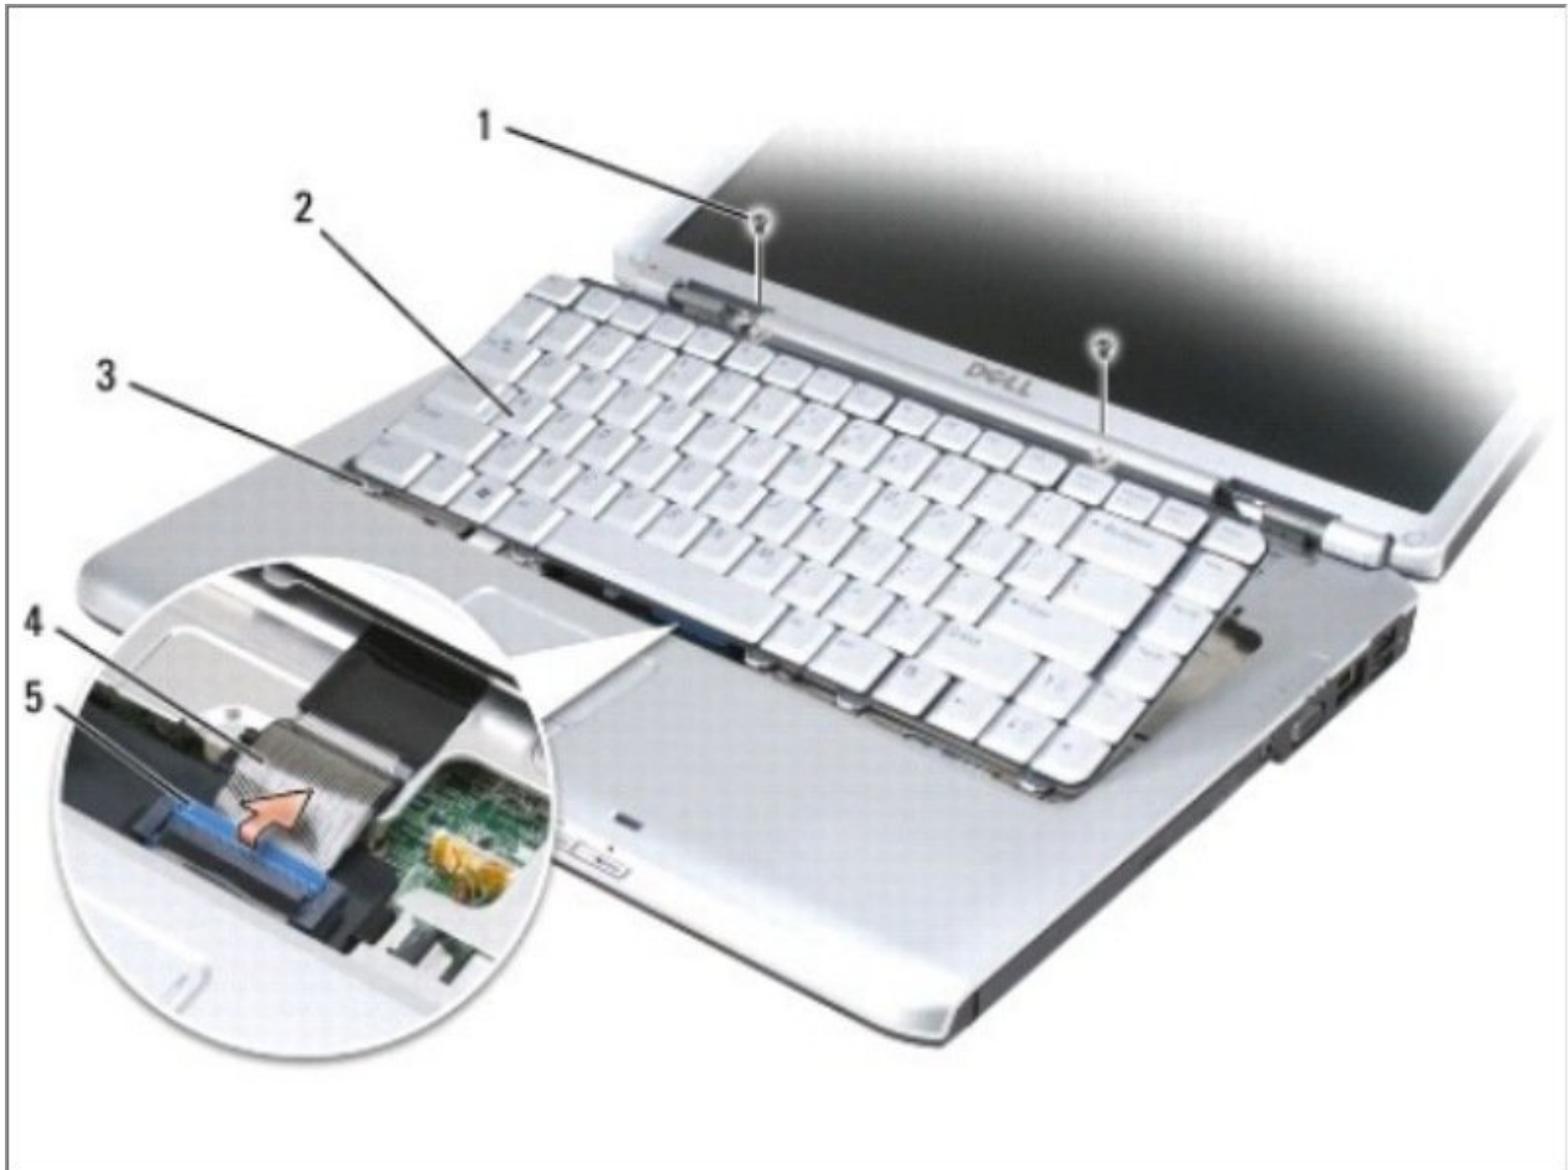

 **TOOLS:**


- Spudger (1)
 - Phillips #0 Screwdriver (1)
-

Step 1 — Battery

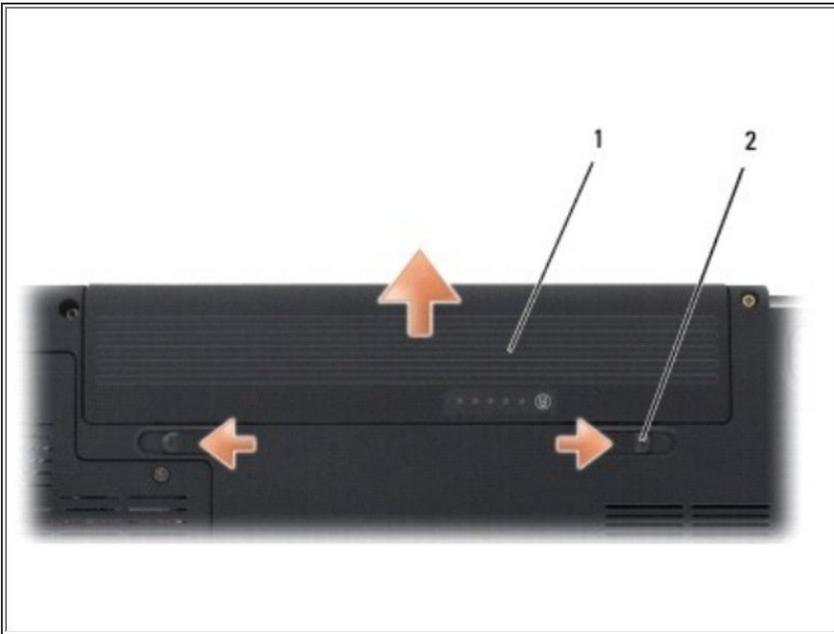


- Slide the battery release latches until they click into place.
- Slide the battery out of the battery bay.

Step 2 — Hinge Cover

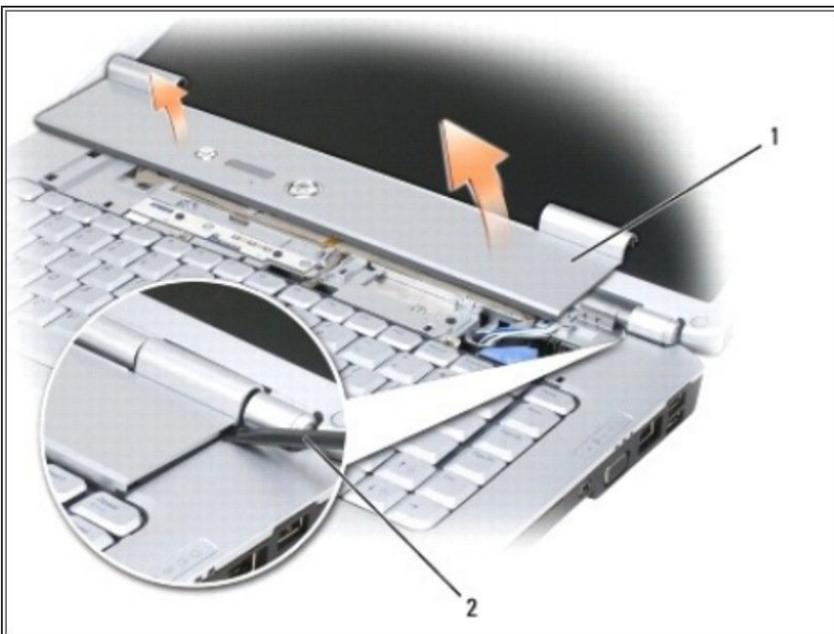

- Open the display all the way so that it rests flat on your work surface.
- ⓘ NOTICE: To avoid damage to the hinge cover, do not lift the cover on both sides simultaneously.
- Insert a plastic scribe into the indent to lift the hinge cover on the right side.
- Moving from right to left, ease the hinge cover up, then remove it and set it aside.

Step 3 — KeyBoard

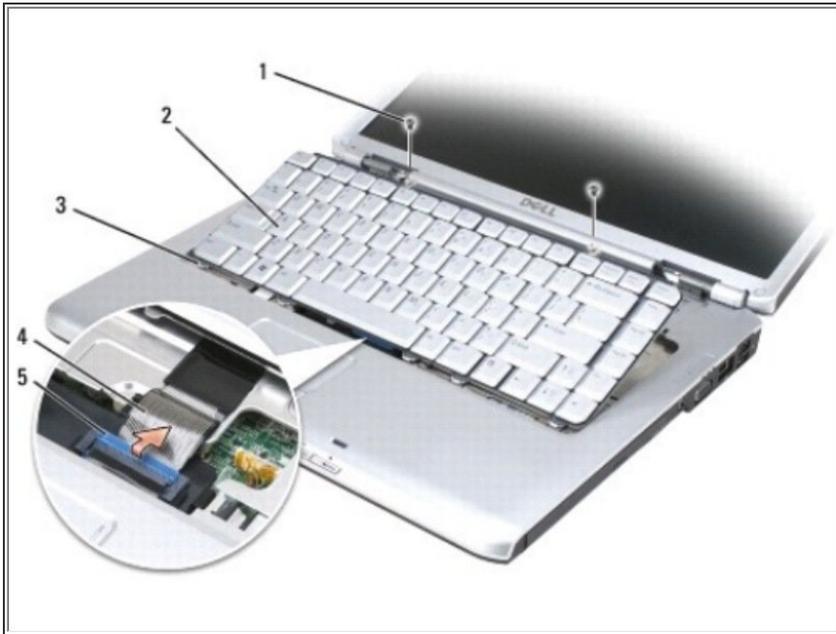

- Remove the two M2.5 x 5-mm screws at the top of the keyboard.
- ⓘ NOTICE: The key caps on the keyboard are fragile, easily dislodged, and time-consuming to replace. Exercise care when removing and handling the keyboard.
- Lift the keyboard and hold it up and slightly forward to access to the keyboard connector.
 - Rotate the keyboard connector latch upward to release the keyboard cable.
 - Slide the keyboard cable out of the keyboard connector.

To reassemble your device, follow these instructions in reverse order.