



## **Dell Vostro 14 3468 Battery Replacement**

Written By: Johnathan Hammond

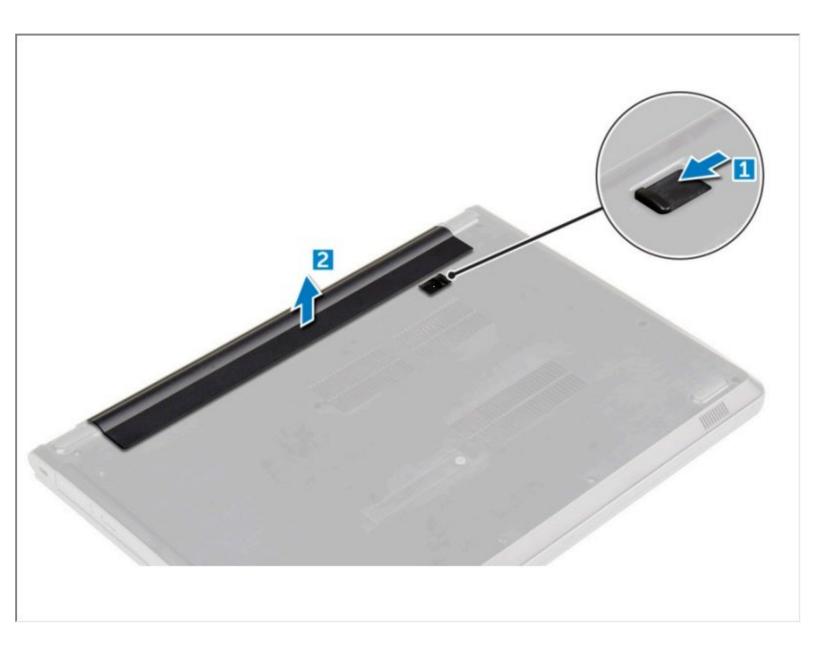

## Step 1 — Battery

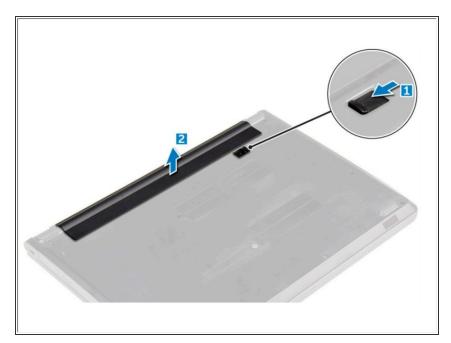

- Slide the release latch to unlock the battery [1].
  - Remove the battery from the computer [2].

To reassemble your device, follow these instructions in reverse order.