




Dell Inspiron 13 7368 Memory Modules Replacement

Written By: Terrence15

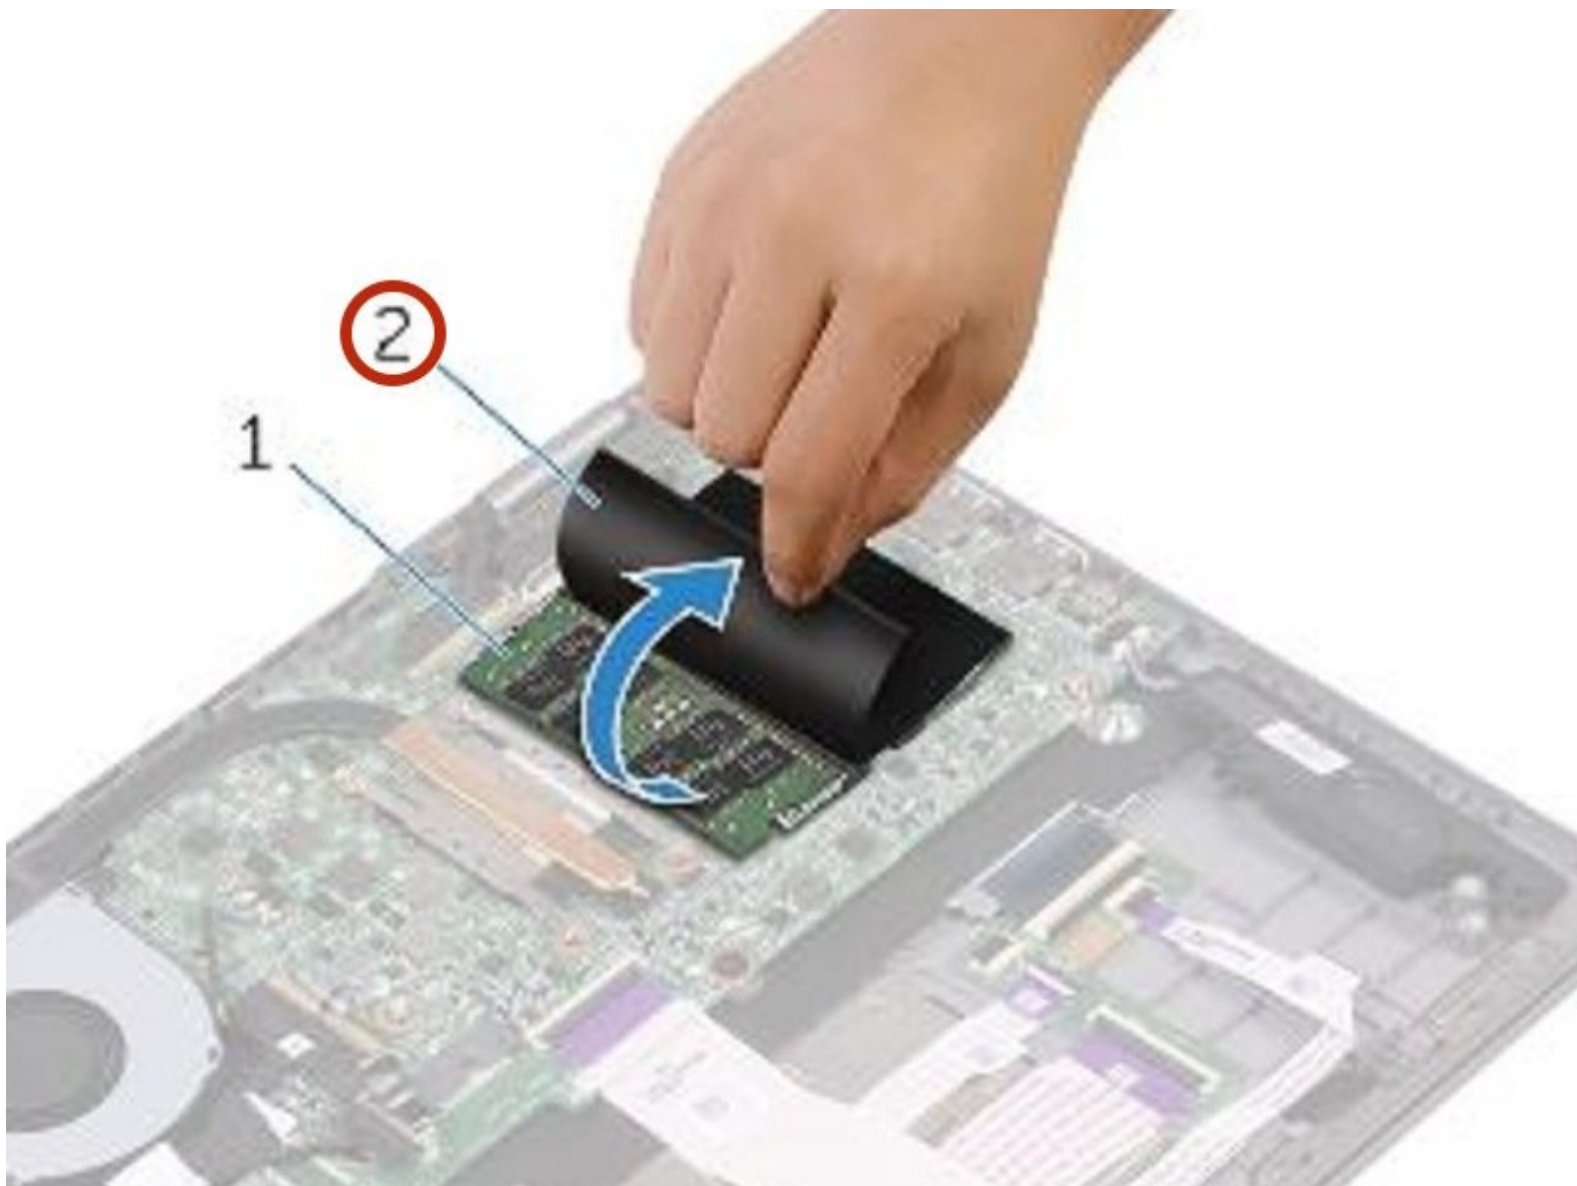

INTRODUCTION


In this guide, we will show you how to remove and replace the Memory Modules.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Disconnecting the Battery Cable

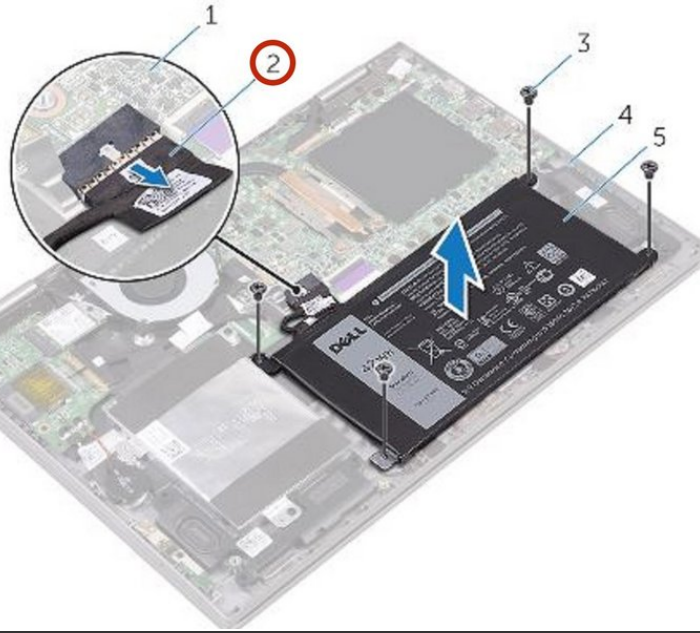

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Disconnect the battery cable from the system board.

Step 2 — Remove the Screws

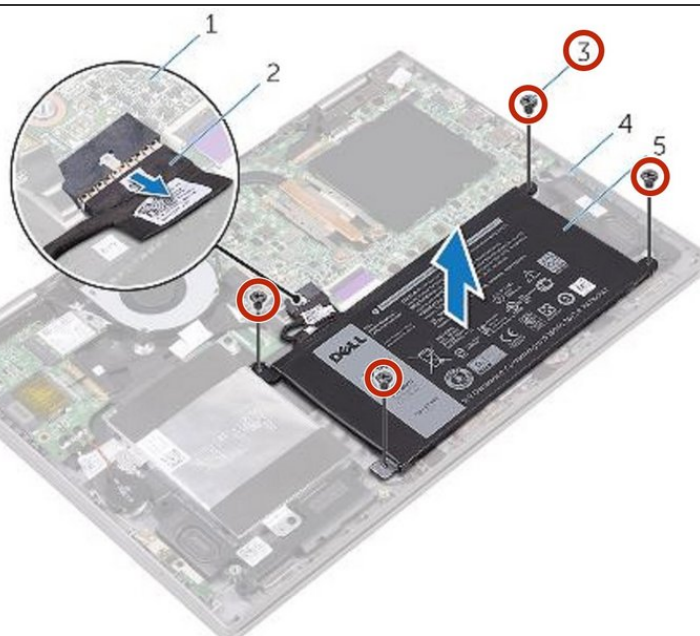

- Remove the screws that secure the battery to the palm-rest assembly.

Step 3 — Lifting the Battery

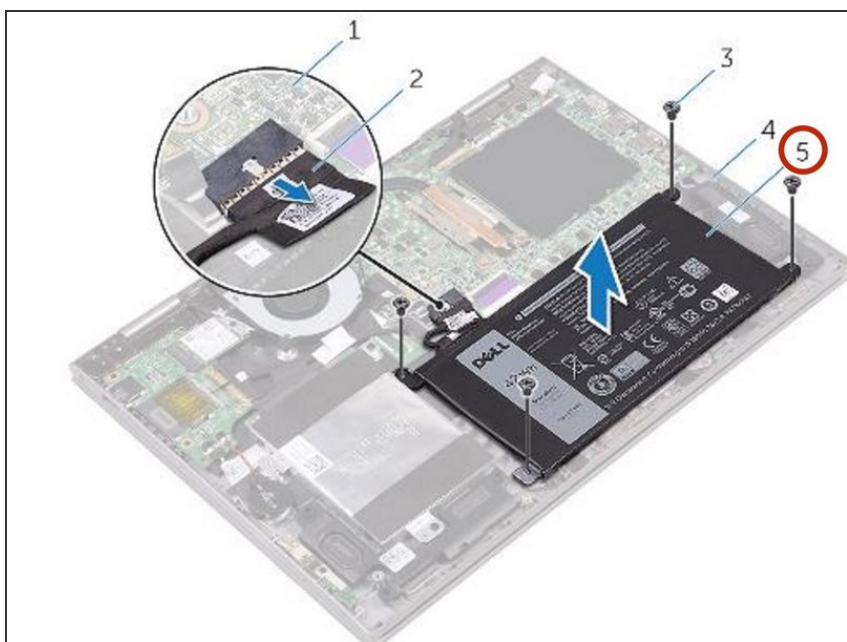


- Lift the battery off the palm-rest assembly.

Step 4 — Grounding the System Board




- Press and hold the power button for five seconds to ground the system board.

Step 5 — Align the Screw Holes

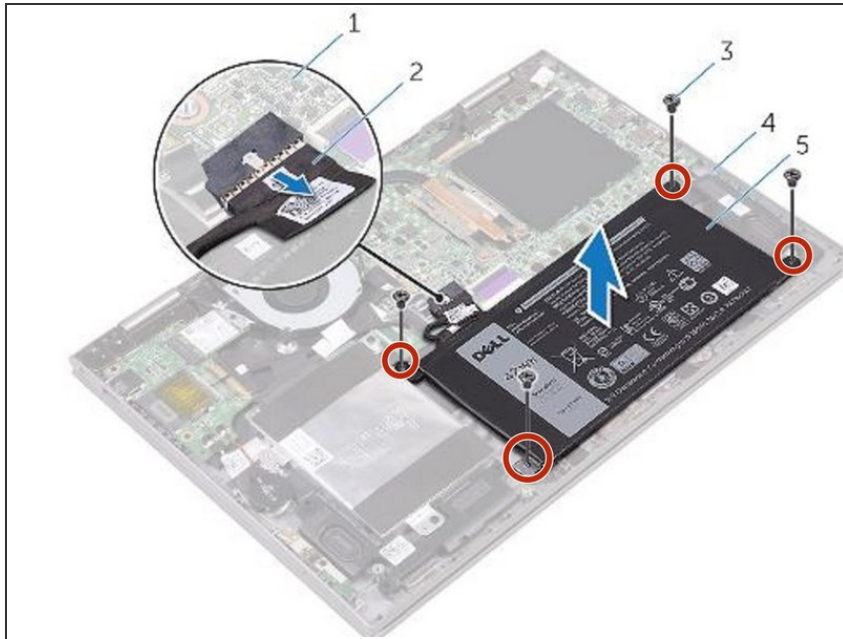


- Align the screw holes on the battery with the screw holes on the palm-rest assembly.

Step 6 — Replace the Screws

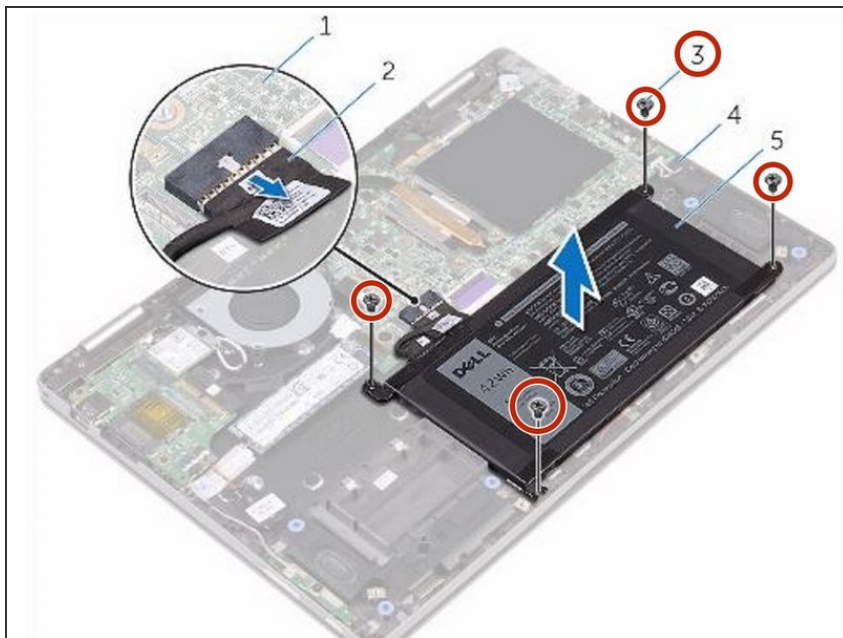


- Replace the screws that secure the battery to the palm-rest assembly.

Step 7 — Connecting the Battery Cable

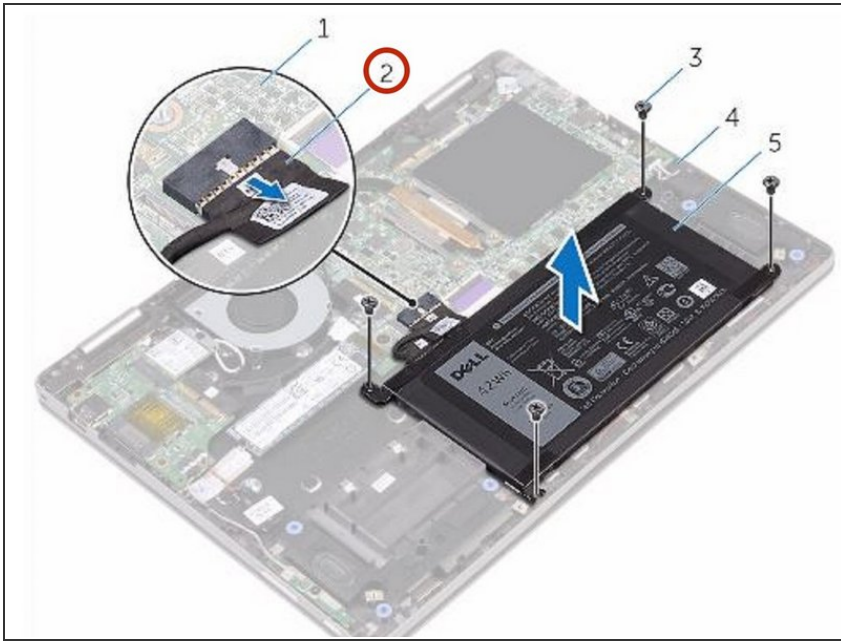

- Connect the battery cable to the system board.


Step 8 — Lifting the Mylar

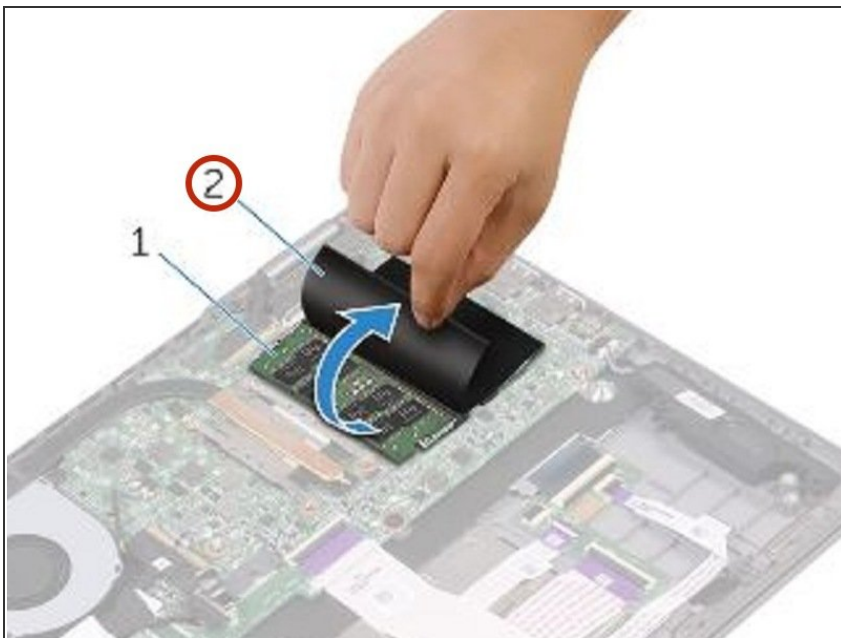

- ⚠ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Lift the Mylar to access the memory module.

Step 9 — Popping up the Memory Module

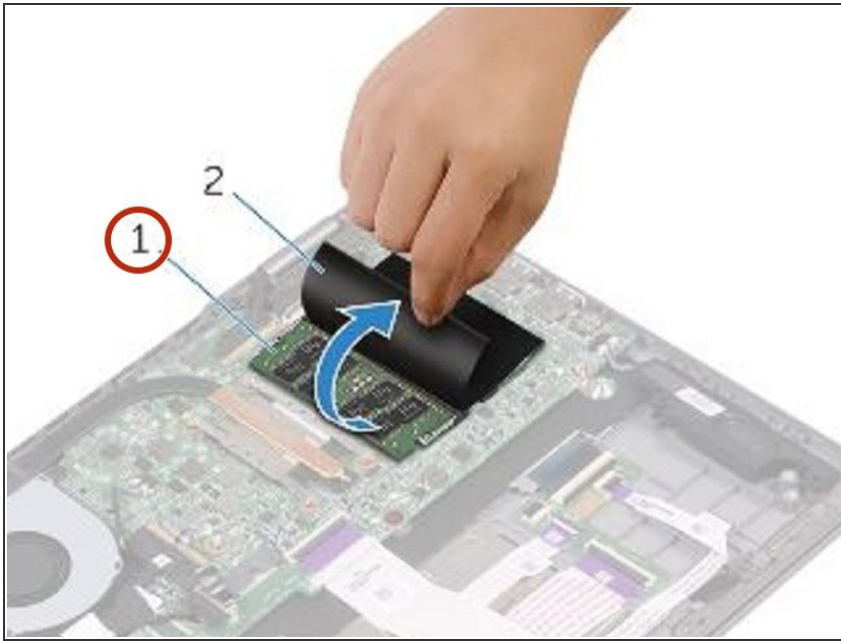


- Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.

Step 10 — Removing the Memory Module

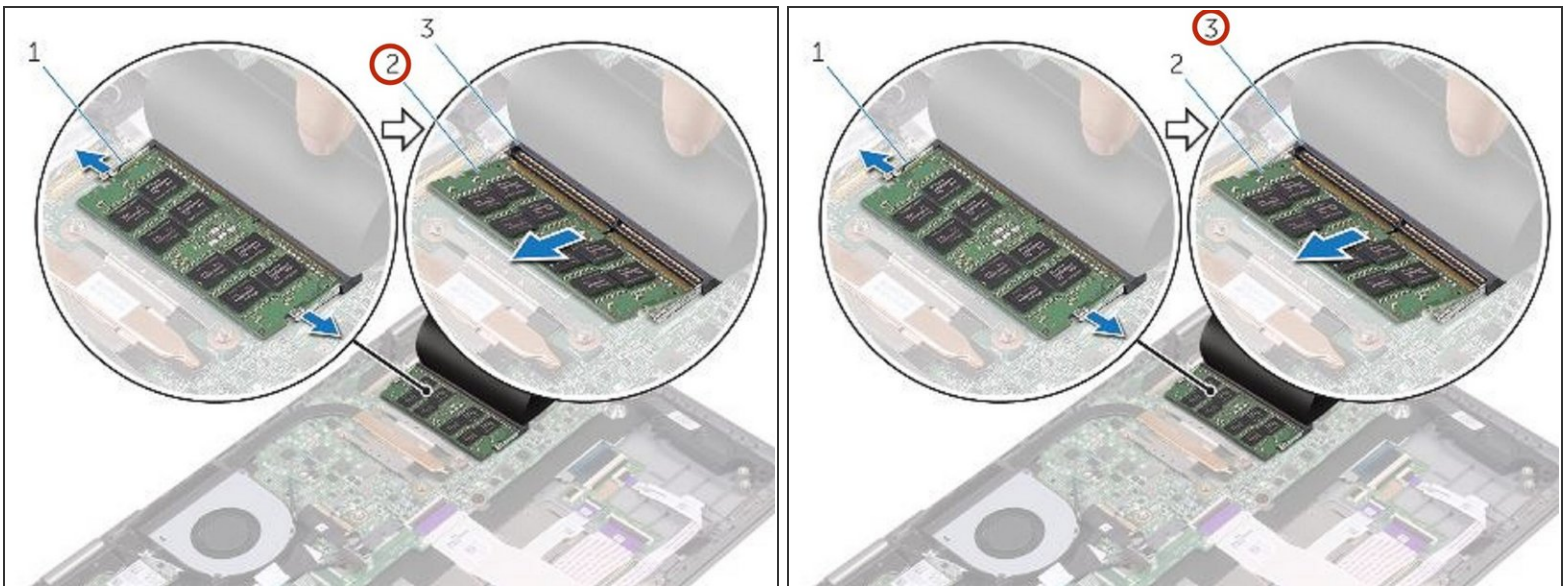


- Remove the memory module from the memory-module slot.

Step 11 — Lifting the Mylar

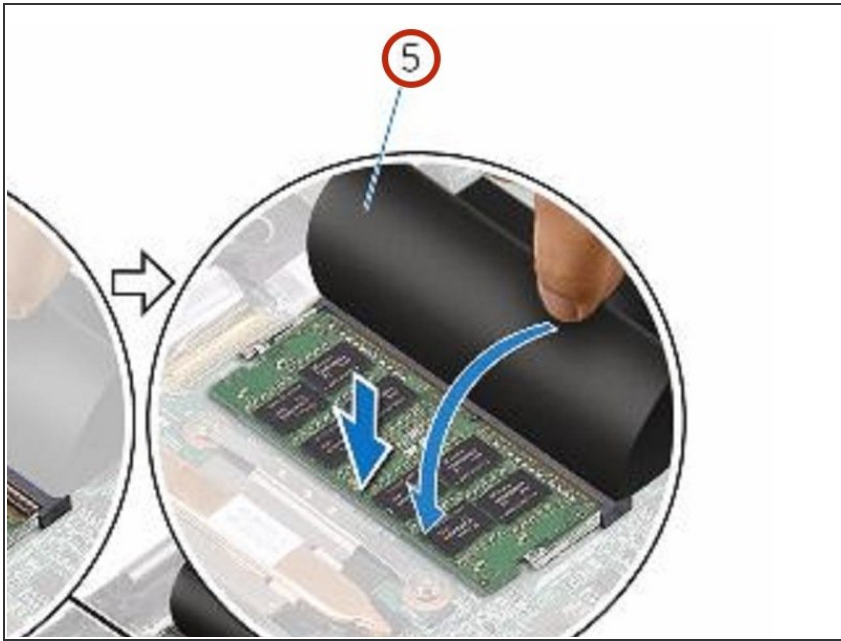


- Lift the Mylar to access the memory-module slot.

Step 12 — Align the Notch

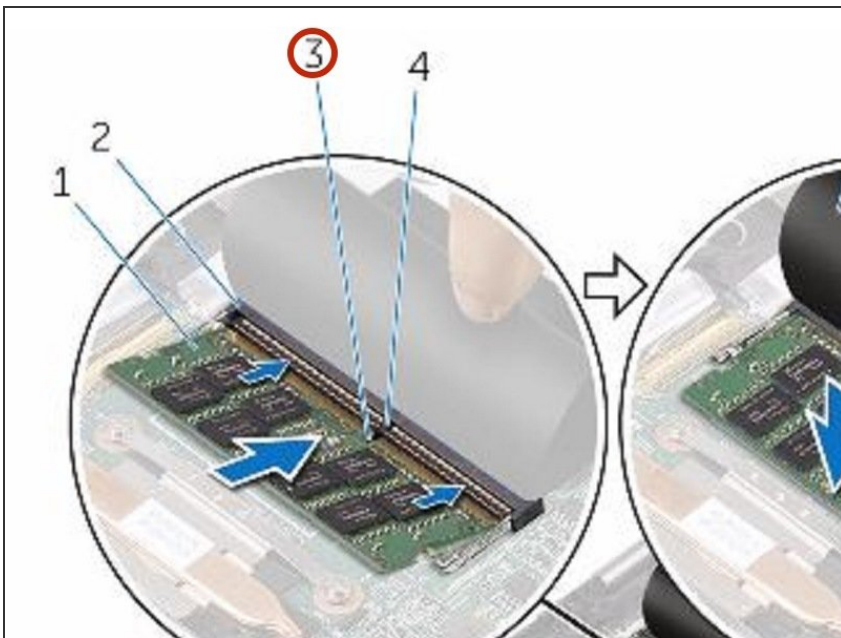

- Align the notch on the memory module with the tab on the memory-module slot.

Step 13 — Sliding the Memory Module

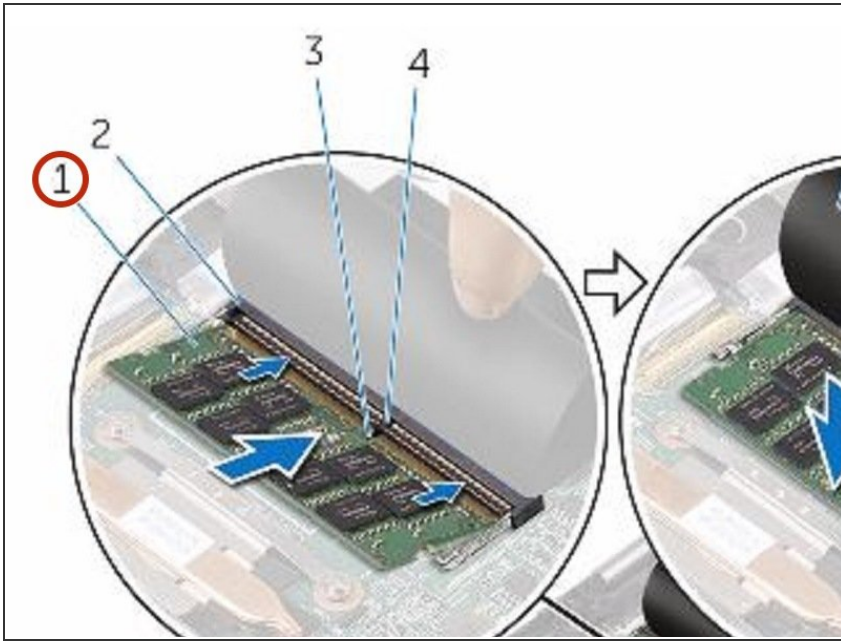

- Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.
- NOTE: If you do not hear the click, remove the memory module and reinstall it.