



# HP Pavilion G60-247CL RAM Replacement

Written By: Zachary Herrera



---

## TOOLS:

Phillips #1 Screwdriver (1)

Spudger (1)


---

### Step 1 — Battery



- Press down and to the right on the battery lock slide.
- Once slid over to the right the battery will pop up and out.



### Step 2 — RAM

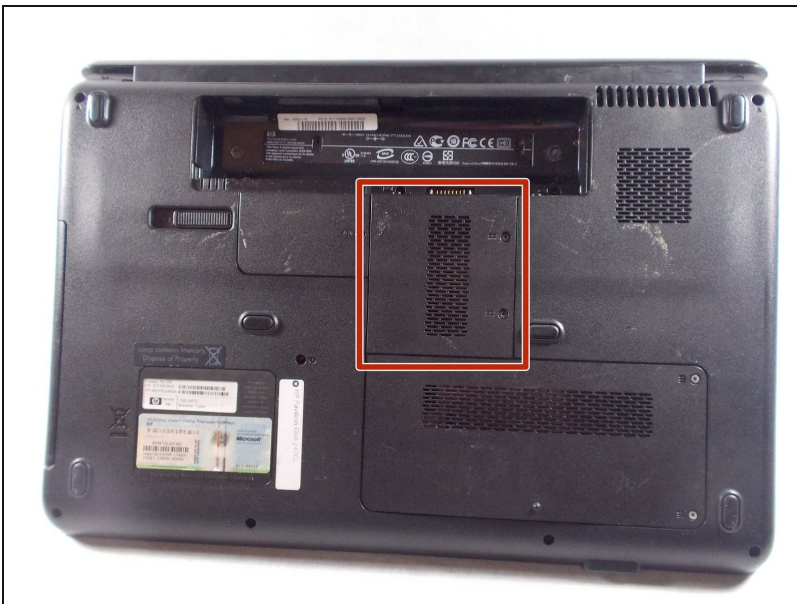

- Locate RAM access door on the bottom side of the laptop.




### Step 3

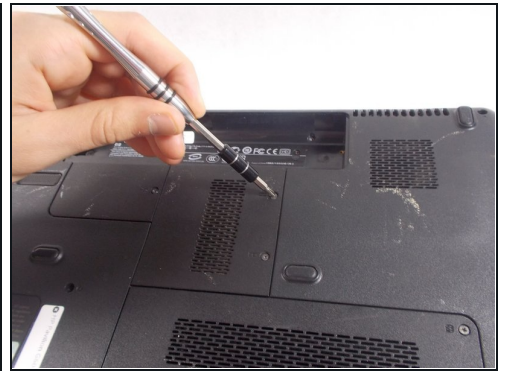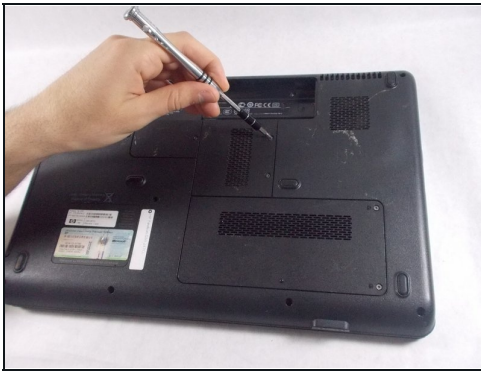


- Remove the two screws holding down the RAM access door with a Phillips #1 screwdriver.

### Step 4

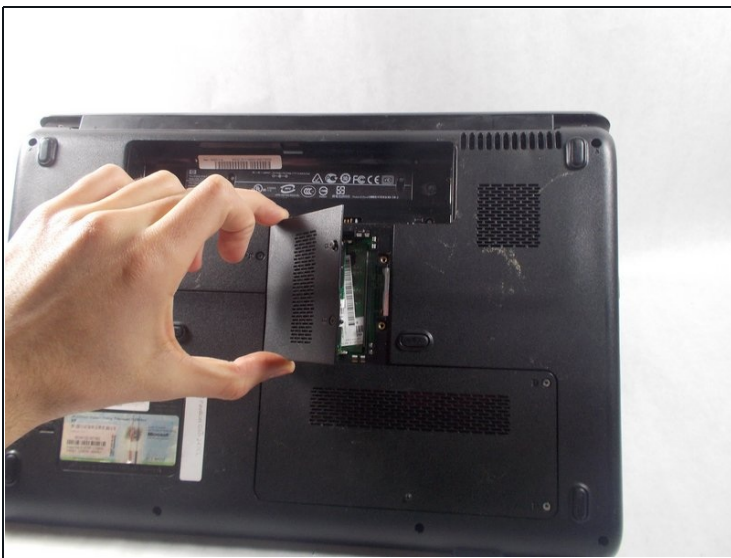

- Lift up on the RAM cover and remove it to reveal RAM sticks.

## Step 5

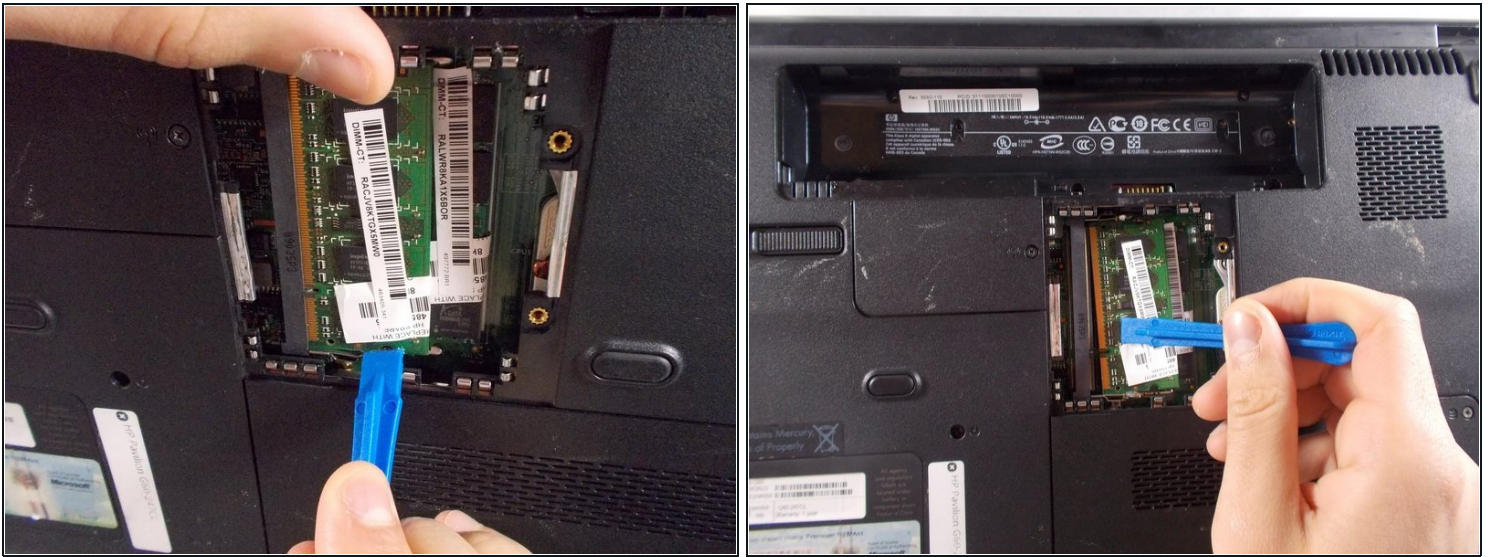


- Gently pull apart the two metal tabs located on both sides of the stick of RAM.

## Step 6



- Gently lift the RAM stick up and out of its seat.

## Step 7

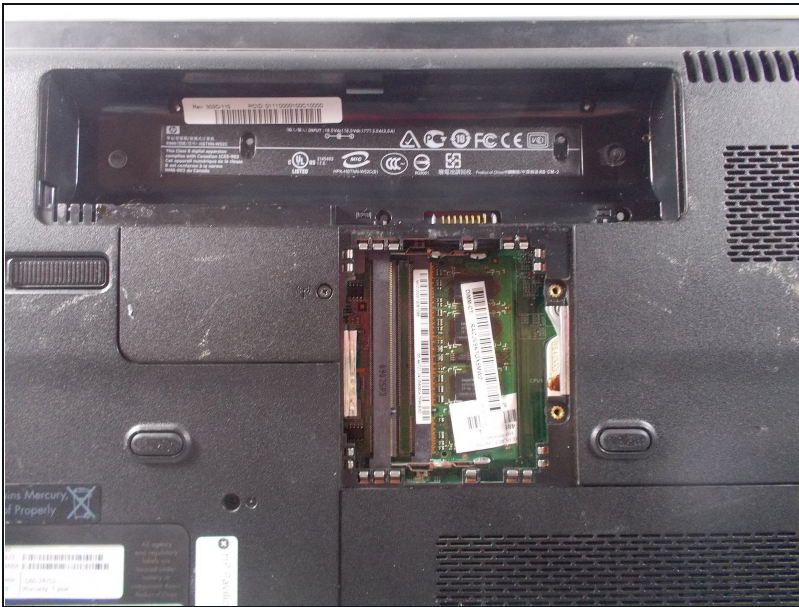

- Repeat the previous two steps for the remaining stick of RAM.

---

To reassemble your device, follow these instructions in reverse order.