




HP Compaq 6510b RAM Replacement

How to replace RAM in the HP Compaq 6510b.

Written By: Joseph Noudom

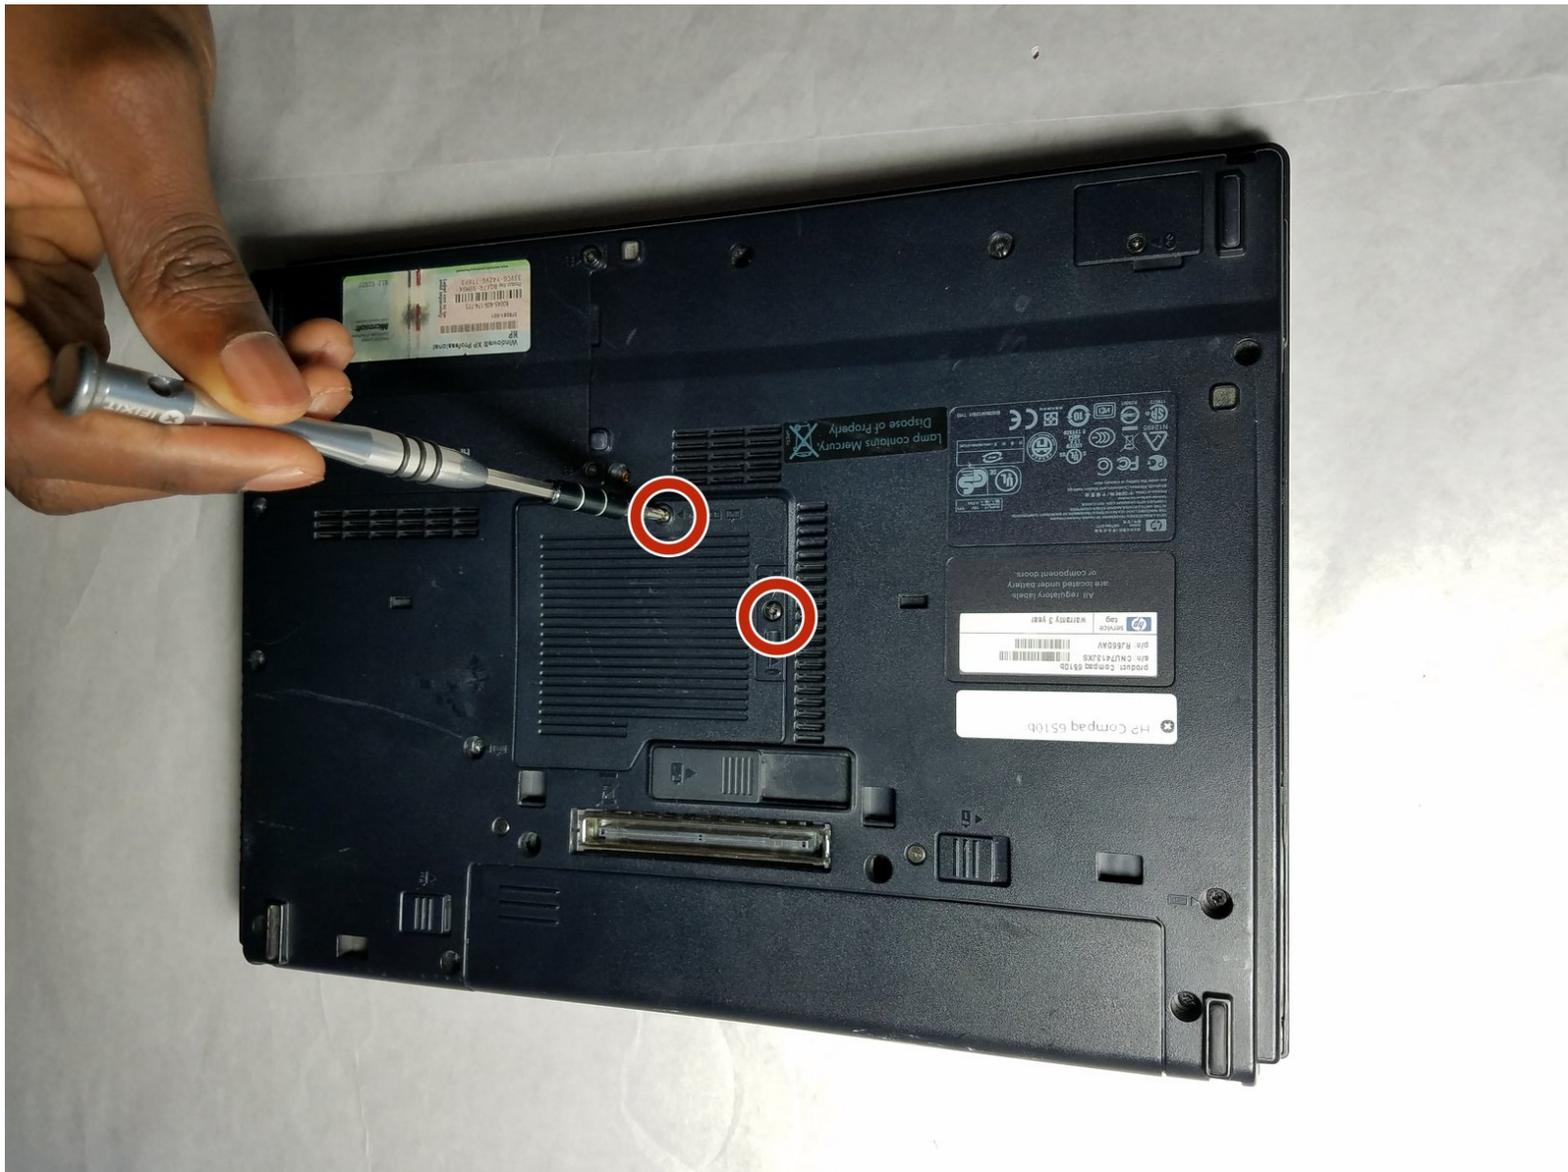

INTRODUCTION

We are going to teach you how to replace bad RAM and how to insert the new one in.

TOOLS:

- [JIS #1](#) (1)
-

Step 1 — RAM



- Flip your device over.
- In the center of the bottom of the laptop, there is a panel with two screws. Using the JIS #1 screw head unscrew both.
- Lift the panel.

Step 2



- The RAM is held down by two prongs. Gently pull them until the RAM pops out of place.
- Lift the RAM out of place.

To reassemble your device, follow these instructions in reverse order.