


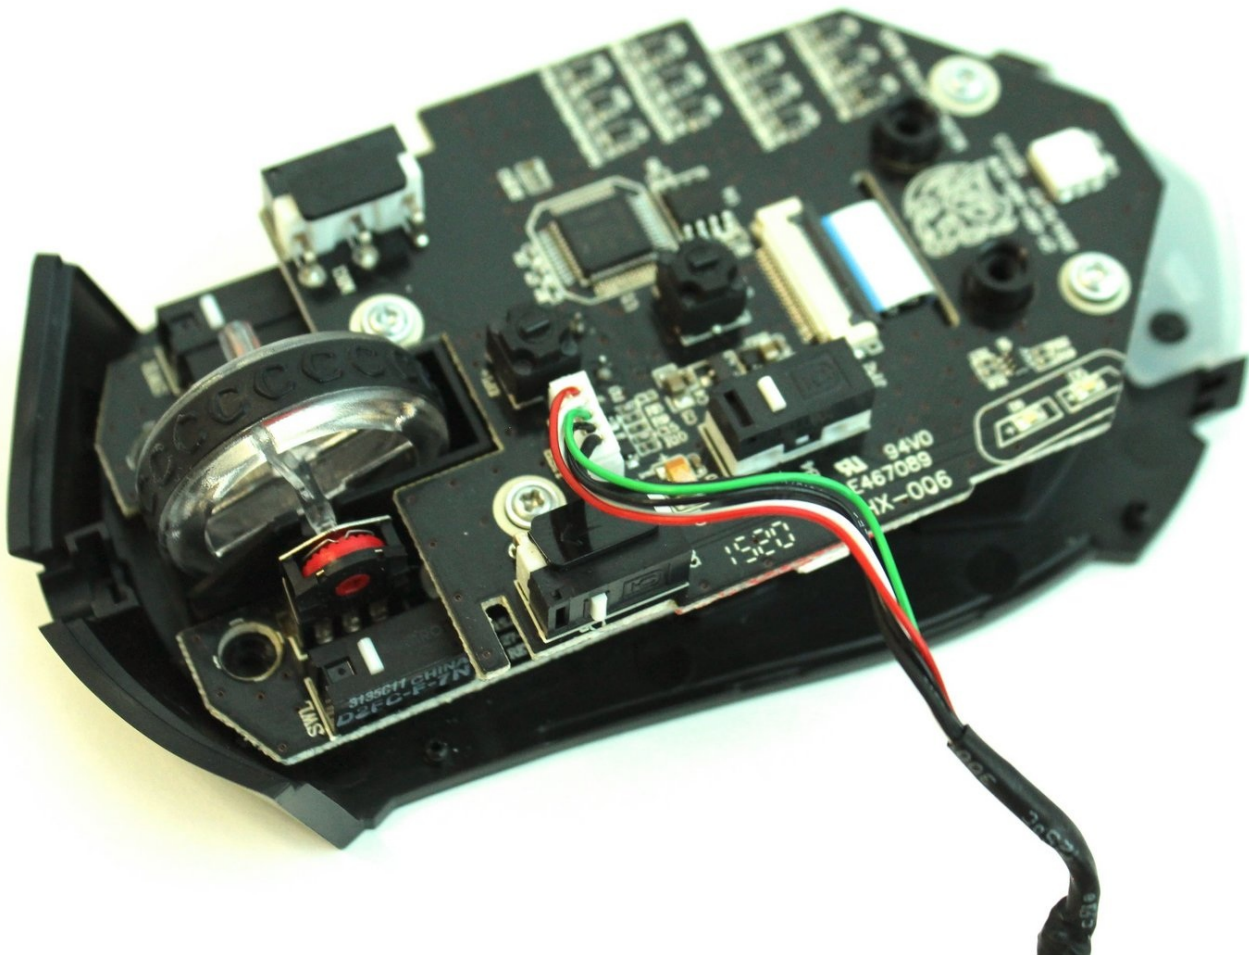

Thermaltake Theron Plus 5-pin USB Cord Replacement

If by troubleshooting you have determined that...

Written By: Grace Neville



INTRODUCTION

If by troubleshooting you have determined that your USB cord is defective, you will need to replace it. This guide will demonstrate how to replace a faulty USB cord.

TOOLS:

[Tweezers](#) (1)

PARTS:


[Replacement cable 5 pins \(MagSafe\)](#) (1)

Step 1 — Top cover






- Remove the plastic cover and pack of weights.
- Remove the two 1.0 mm foam covers with [tweezers](#).
- Peel away the plastic screw cover with tweezers.

Step 2

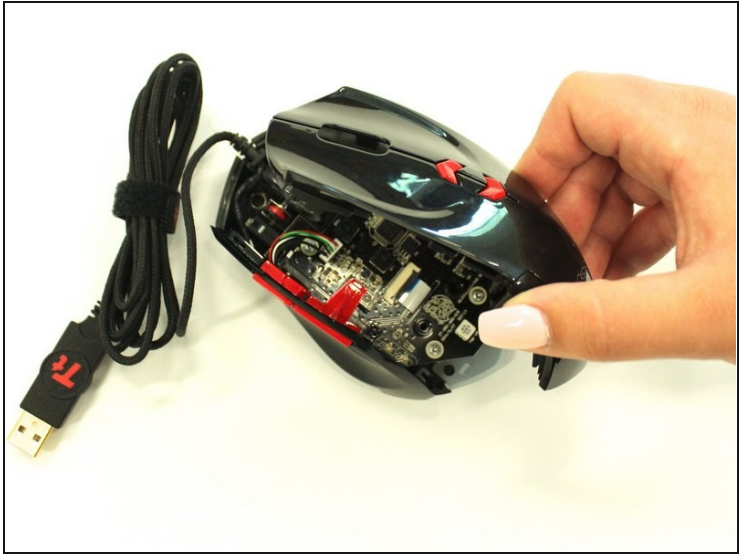

- Remove the four 1.0 mm screws with a Ph #1 screwdriver.
- Gently remove the top of the mouse.

Step 3 — 5-pin USB Cord

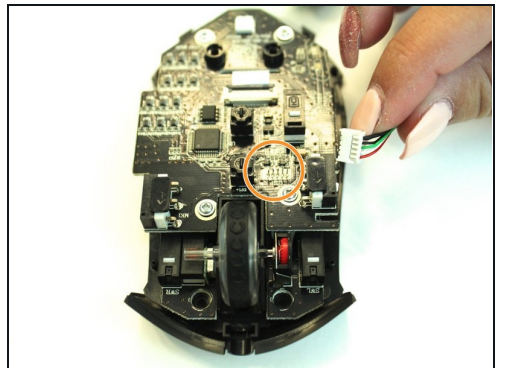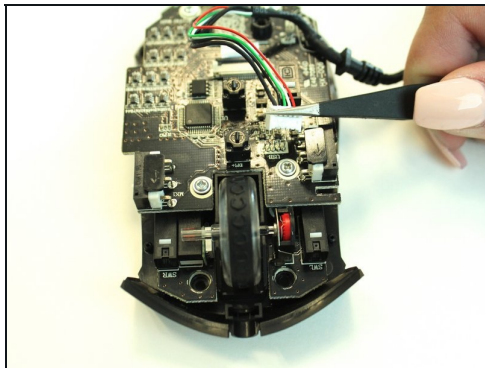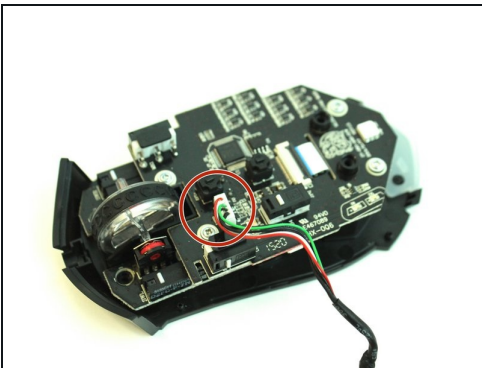

- Locate the 5-pin connector on the mouse's motherboard.
- Use the [tweezers](#) to carefully pull the 5-pin connector off. Do this by grasping the connector and wiggling it back and forth until it is off.
- Once removed, place new 5-pin connector on in the same way.

To reassemble your device, follow these instructions in reverse order.