



MSI PR600 MS-16372 Key Replacement

Remove stuck key from keyboard to clean out any debris from underneath it.

Written By: Lauren Mewes



INTRODUCTION

This guide will help you fix a key that is not working when you push down on it. Instead of pushing down harder or repeatedly pushing down on the key, this guide will serve as a step-by-step guide to clean underneath the key.




TOOLS:

- [Flathead Screwdriver](#) (1)
-

Step 1 — Key



 Before you begin this replacement, make sure to turn the computer off to prevent future problems from occurring.

- Start by flipping the laptop upside down and shake it gently to release excess debris.

Step 2




- Place flathead screwdriver underneath the faulty key.
- Lift the flathead screwdriver upwards until you hear a click and it releases off the keyboard.

Step 3



- Gently brush off any loose particles that could be found underneath the key.

Step 4

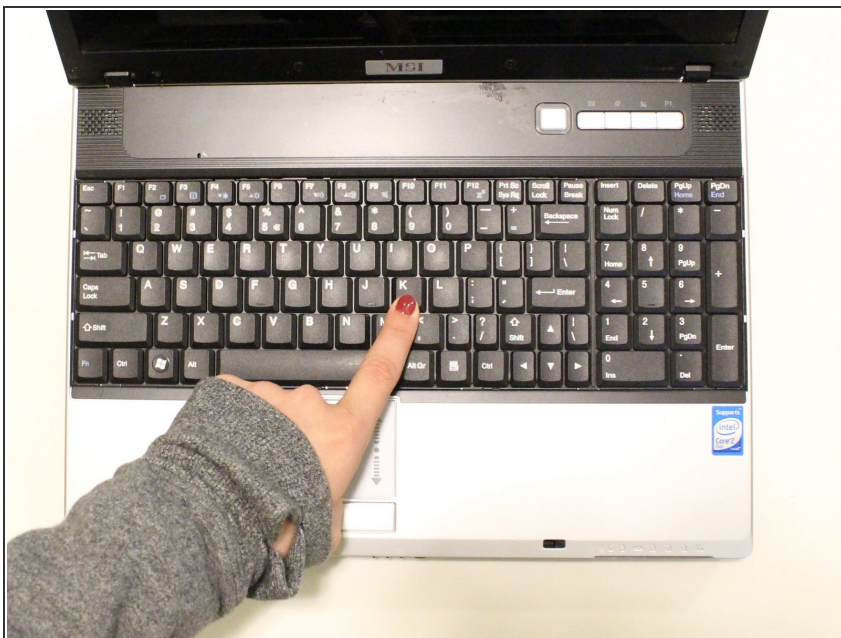

- Align key to the center of the button and press down until you hear it click.
- If you do not apply enough pressure the key will not fully reattach, so make sure you press hard enough.

To reassemble your device, follow these instructions in reverse order.