



Nokia 6200 Classic Vibrator Replacement

This guide shows how to remove the vibration device from the phone.

Written By: Reid Polstra



INTRODUCTION

This guide requires that the front plate, keypad, circuit board, back cover, and battery all be removed.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Front Plate




- Pull up on both of the clips near the bottom of the phone as shown.
- Lift off the front plate.

Step 2




- The keypad and LCD screen are revealed.

Step 3 — Vibrator

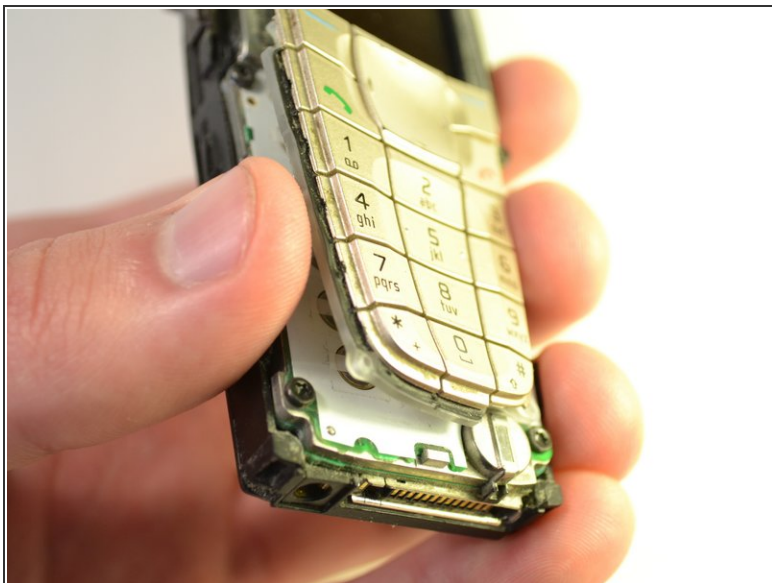


- Separate the keypad from the phone and place aside.
- Wipe off any excess dust from where the keypad was attached to the phone.

Step 4

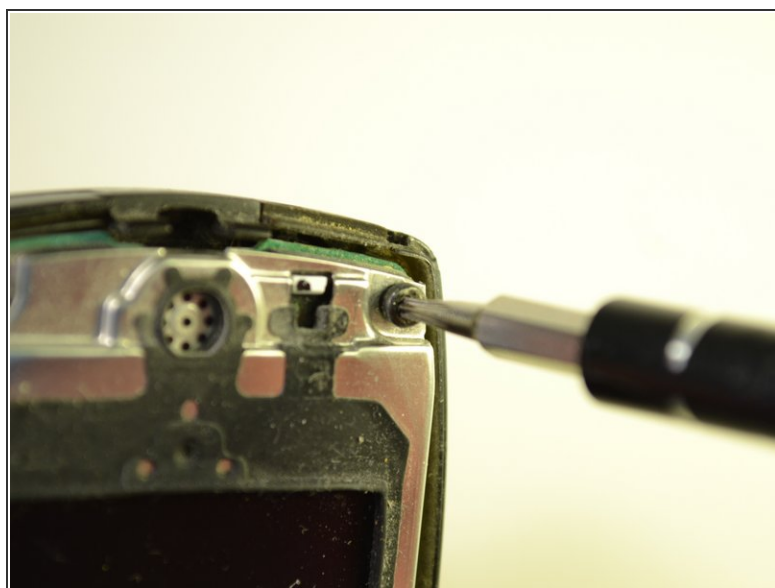


- Remove the six screws highlighted by the markers using the screwdriver.

Step 5

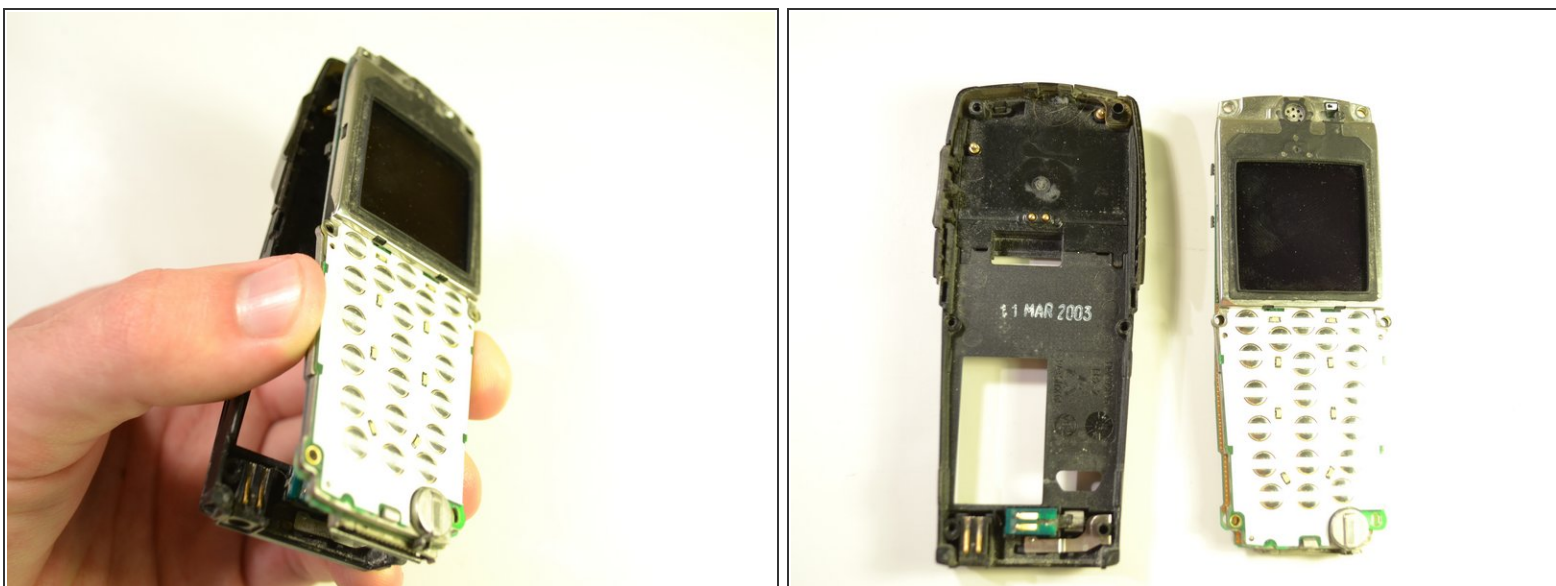

- Separate the inside of the phone from the back of the phone.

Step 6

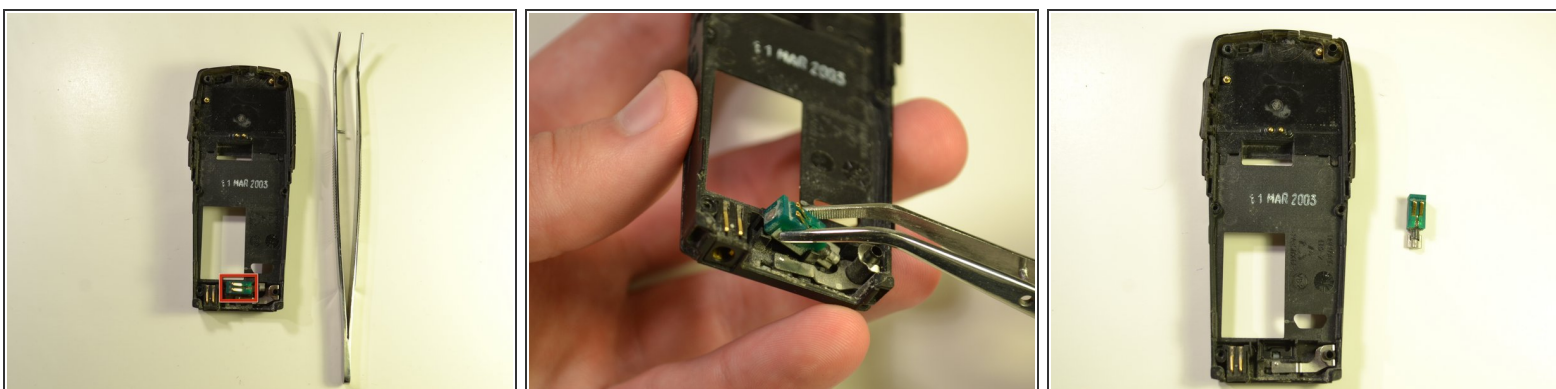

- Locate vibration device on the bottom of the back cover.
- Pull up on the vibration device using tweezers.
- Remove the vibration device and place it aside.

To reassemble your device, follow these instructions in reverse order.