


# **Hover-1 XLS Battery Replacement**

How to replace the battery in a Hover-1 XLS.

Written By: Jonathan Hidalgo

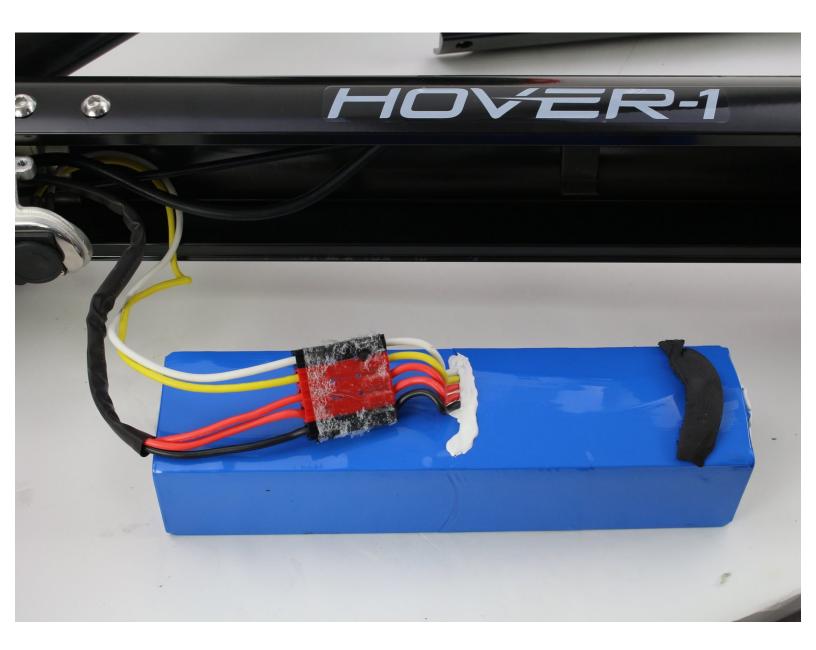

This document was generated on 2020-11-28 07:15:24 AM (MST).

## INTRODUCTION

If the bike is not performing at its maximum capability, its battery may be corroded, and you should replace it as soon as possible. Before beginning this guide, you will need power tools or a chemical remover to deal with Teflon tape on the screws.

## **TOOLS:**

• 3mm Hex Key, T-grip (1)

This document was generated on 2020-11-28 07:15:24 AM (MST).

#### Step 1 — Battery



• Remove the four, 12mm Hex #3 screws located on the bottom half of the battery compartment.

(i) There are four screws that need to remove. Two on one side and the two on the opposite side.

### Step 2



- Remove the adhesive holding the wires tightly.
  - (i) You can use a sharp object to score the adhesive before pulling.
- Pull on both sides of the wire connections.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 07:15:24 AM (MST).