



HP Spectre x360 13t-4000 Bottom Cover Replacement

This guide will instruct you on how to remove...

Written By: Brandon Carvalho



INTRODUCTION

This guide will instruct you on how to remove the bottom cover. The removal of the bottom cover is necessary in order to replace any other components of the laptop.

TOOLS:

[T5 Torx Screwdriver](#) (1)


[iFixit Opening Tool](#) (1)

Step 1 — Bottom Cover



- Turn off and unplug the laptop.
- Flip over the laptop so that the bottom backplate is exposed.

Step 2

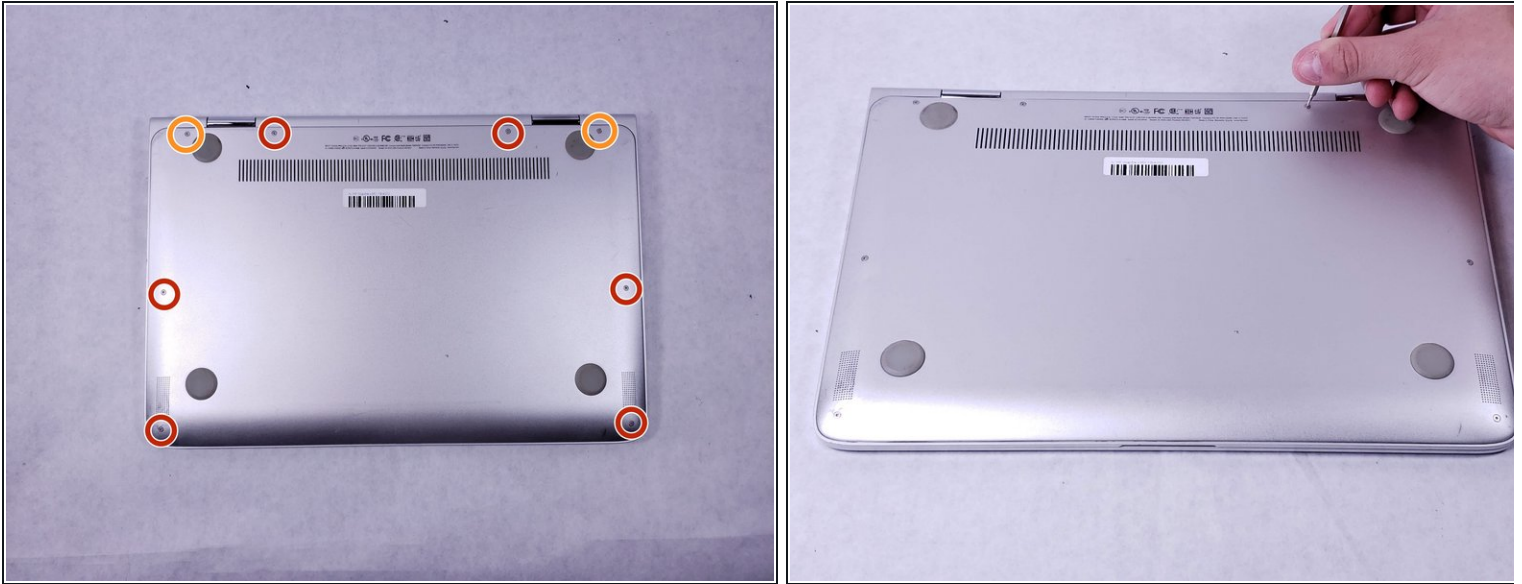

- Use a T5 screwdriver to remove the six 3 mm screws that secure the backplate.
- Use the same screwdriver to remove the two 7 mm screws.

Step 3



- Insert an opening tool under the bottom cover at the screen hinges, and gently pry the cover free.
- Carefully work your way around the cover's edges to pop it off completely.

To reassemble your device, follow these instructions in reverse order.