



HP Pavilion 15-n232nr Keyboard Replacement

This guide will help the user remove the HP Pavilion 15-n232nr keyboard.

Written By: Andrei Fendley




INTRODUCTION

This guide will enable users to repair the keyboard on the HP Pavilion 15-n232nr Laptop. The necessary tools required are the metal spudger and a screwdriver. This process is moderately difficult for the iFixit user.

TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Keyboard

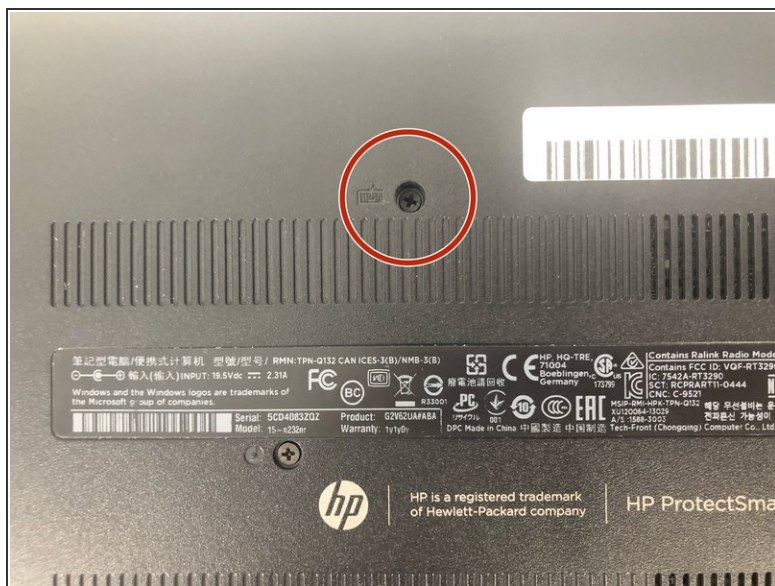


- Unscrew the 6 mm Phillips #1 screw securing the keyboard.

Step 2






- Flip the laptop to the front side and open it up.

Step 3

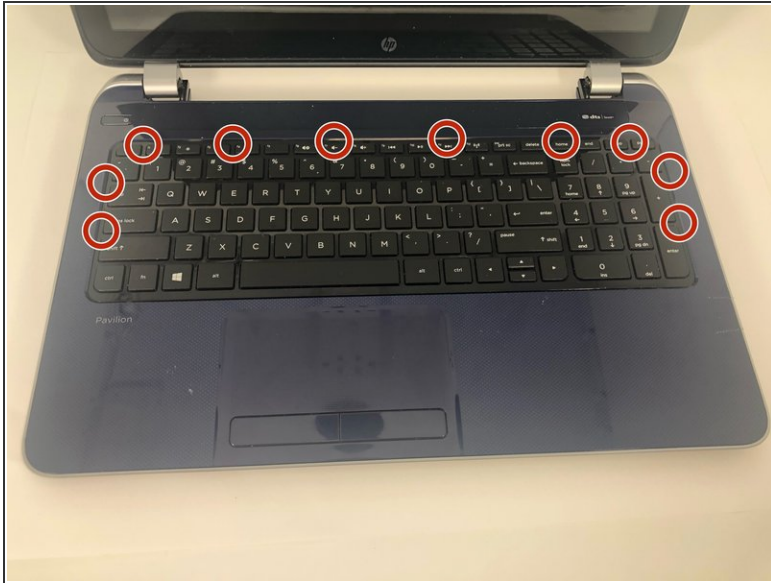

- Use the metal spudger to release the keyboard from the front panel.

Step 4

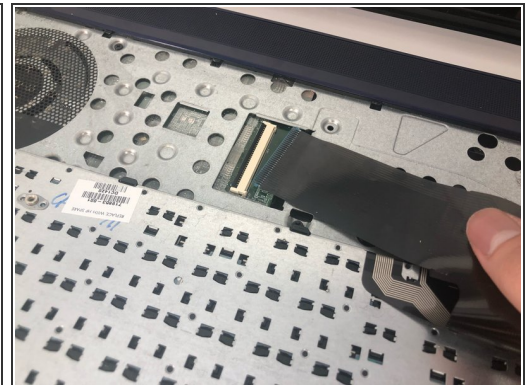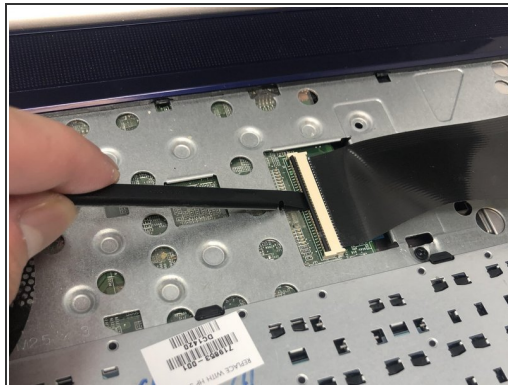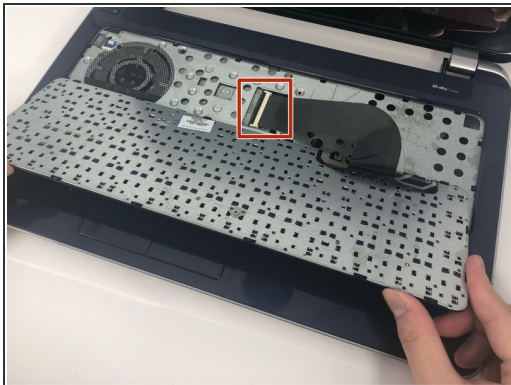

- Flip the keyboard out and locate the connector.
- Use the spudger to unhinge the the fastener and remove the connector.
- ⓘ Keyboard should be completely detached after this step.

To reassemble your device, follow these instructions in reverse order.