



# Corsair Void Pro RGB Battery Replacement

Eventually, the battery for the Corsair...

Written By: Gianna Nobili



# INTRODUCTION

Eventually, the battery for the Corsair headphones will need to be replaced. Luckily, replacing the battery is a relatively simple process that involves removing the panel covering an earmuff and unplugging the old battery.

Instructions for removing the battery all refer to the right hand earmuff.

---

## TOOLS:

[iFixit Opening Tool](#) (1)  
[Phillips #0 Screwdriver](#) (1)  
[T5 Torx Screwdriver](#) (1)

## PARTS:

[Corsair Replacement Battery](#) (1)

---

## Step 1 — Earcup



- Carefully remove earmuff from headphones by getting a grip under the earmuff cushion and peeling up over the lip that keeps it in place.


## Step 2



- Using the Phillips #0 screwdriver, unscrew the seven 6.4 mm screws holding the black speaker cover in place.

ⓘ If you are disassembling the lefthand earmuff, there will be eight 6.4 mm screws to remove.

## Step 3

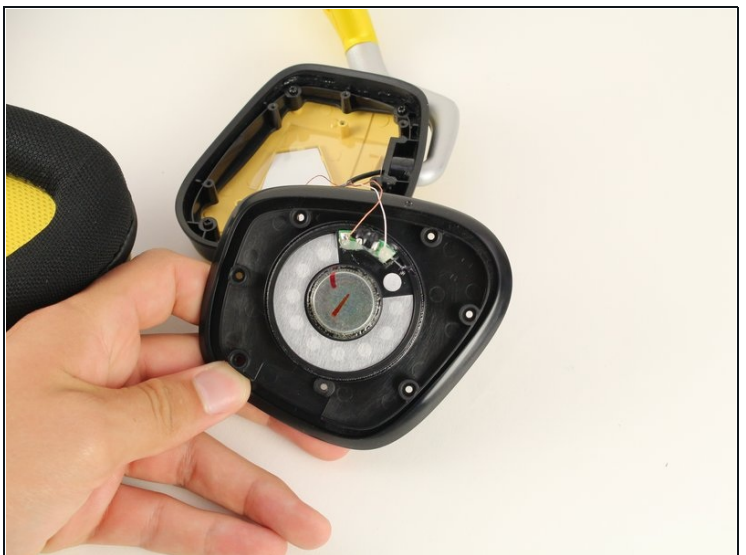

- Remove and set aside the black panel, taking care to keep the wires attached.

ⓘ The panel should lift up without much force. If the panel does not budge, carefully use the iFixit plastic opening tool to dislodge the piece.




## Step 4 — Battery



- Using the Phillips #0 screwdriver, remove the three 6.4 mm screws on the black plastic panel with the grid of holes.

## Step 5

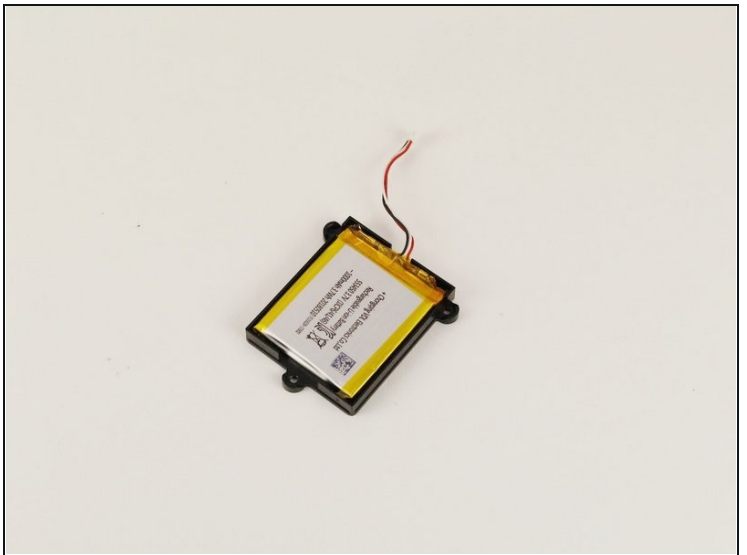

- Carefully unplug the wire that connects the battery pack to the headphones.

ⓘ This should not take too much force.

## Step 6



- Remove the clear plastic covering and set aside.

---

To reassemble your device, follow these instructions in reverse order.