



HP EliteBook x360 1030 G3 Bottom Cover Replacement

How to remove the bottom cover on the underside of a HP EliteBook x360 1030 G3.

Written By: Shea Charkowsky



INTRODUCTION


This guide explains how to remove the bottom cover on the underside of the laptop.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
-

Step 1 — Bottom Cover

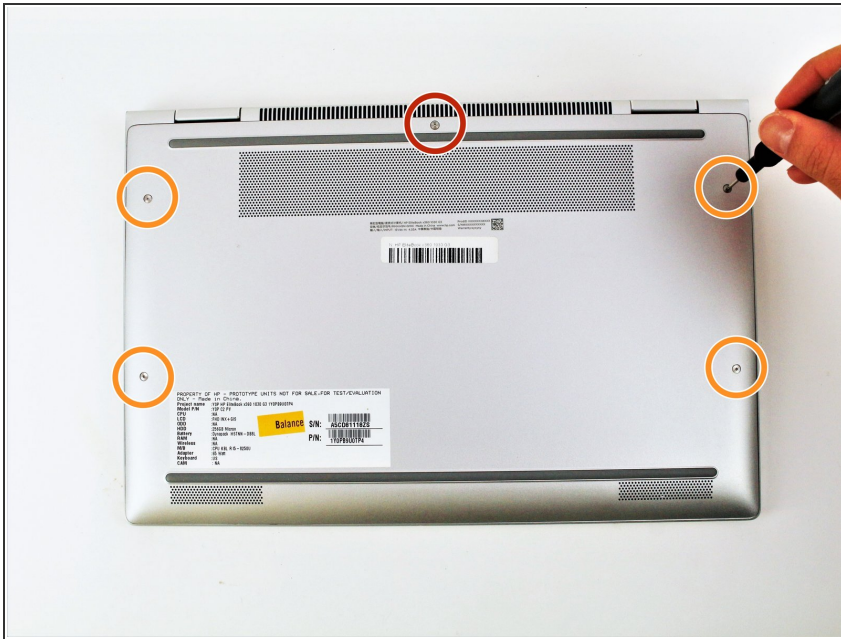

- i Be sure to power off and unplug your device before you begin your repair.
- Close the laptop and flip it so that the screen is on the surface of the table and the back plate is facing you.
- Remove the 3.3 mm screw near the top of the hinge using a T5 Torx screwdriver.
- Remove the remaining four 7.3 mm screws using the same screwdriver.

Step 2



- Separate the bottom cover from the laptop, starting from the upper corner and working your way around the edge.
- i *The plastic fastening may make cracking sounds when separating, but this is normal.*

To reassemble your device, follow these instructions in reverse order.