




Midland X-tra Talk Radio LXT118 Circuit Board Replacement

It will be necessary to solder the wire...

Written By: James Tucker Dunn

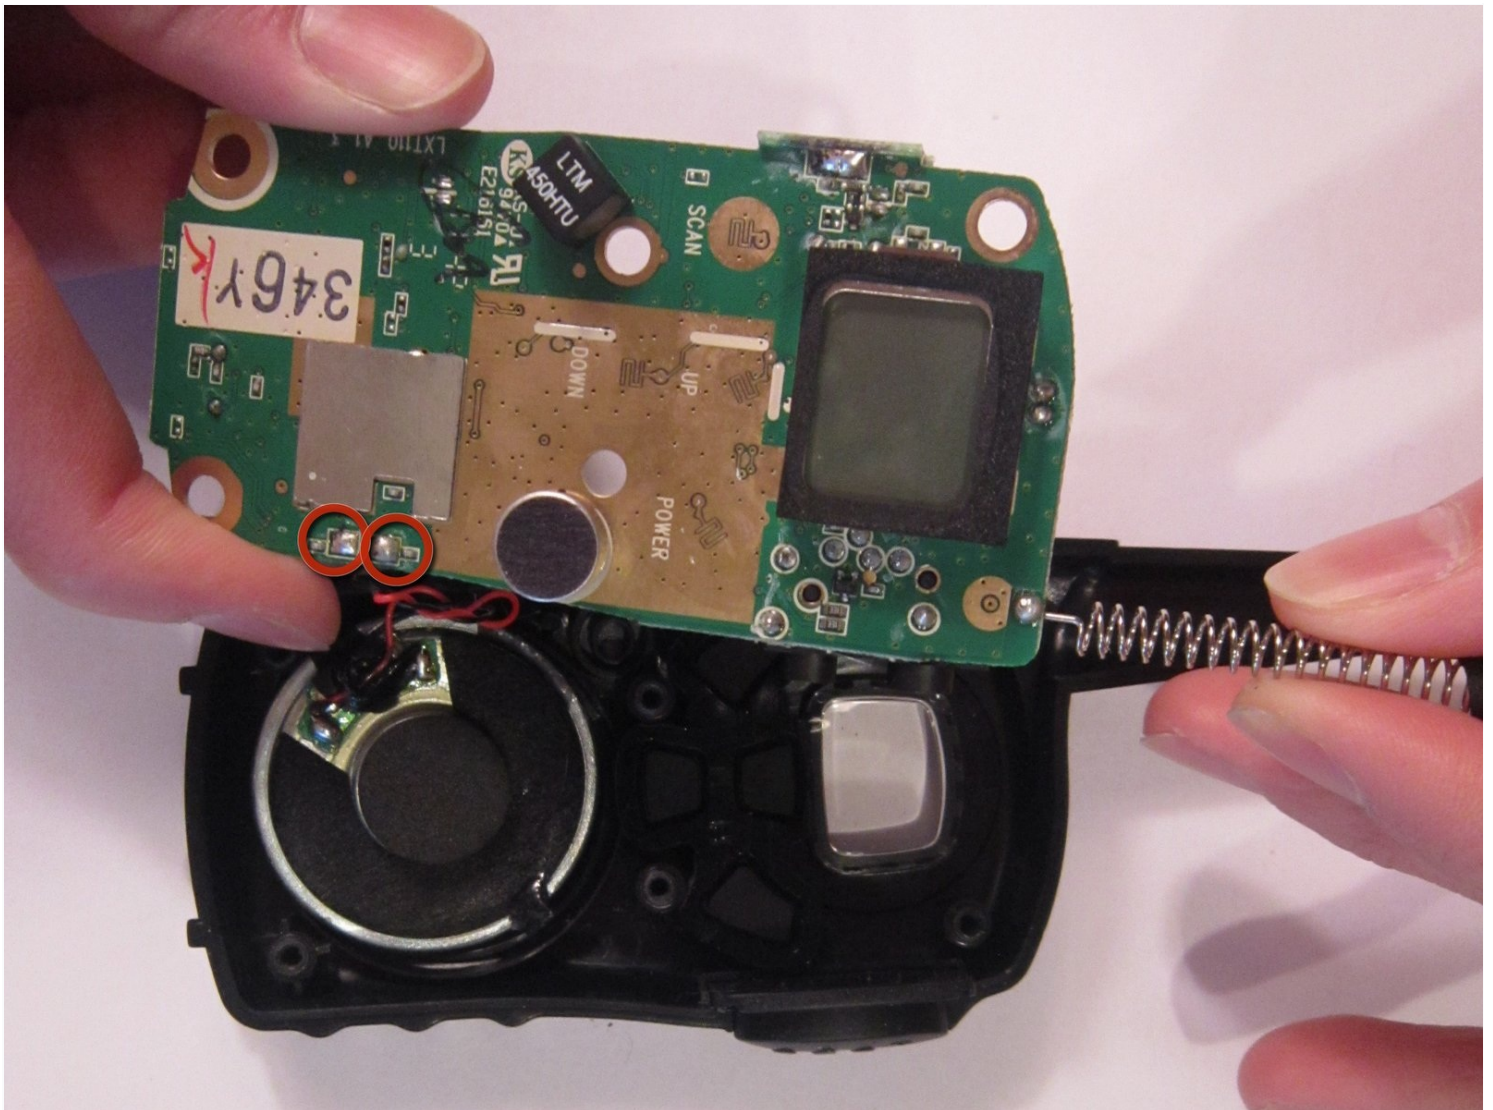

INTRODUCTION

It will be necessary to solder the wire connection in order to properly complete this installation.

TOOLS:

Phillips #0 Screwdriver (1)
Soldering Iron 60w Hakko 503F (1)
Spudger (1)
Flush Cutter (1)

PARTS:


Midland X-tra Talk Radio LXT118
Circuit Board (1)

Step 1 — Midland X-tra Talk Radio LXT118



- Remove the old or broken circuit board from the front case by carefully separating it from the back.
- Clip the red and black wires at the base of the motherboard to completely separate it from the radio case. You should have 2 separate pieces.

Step 2 — Circuit Board

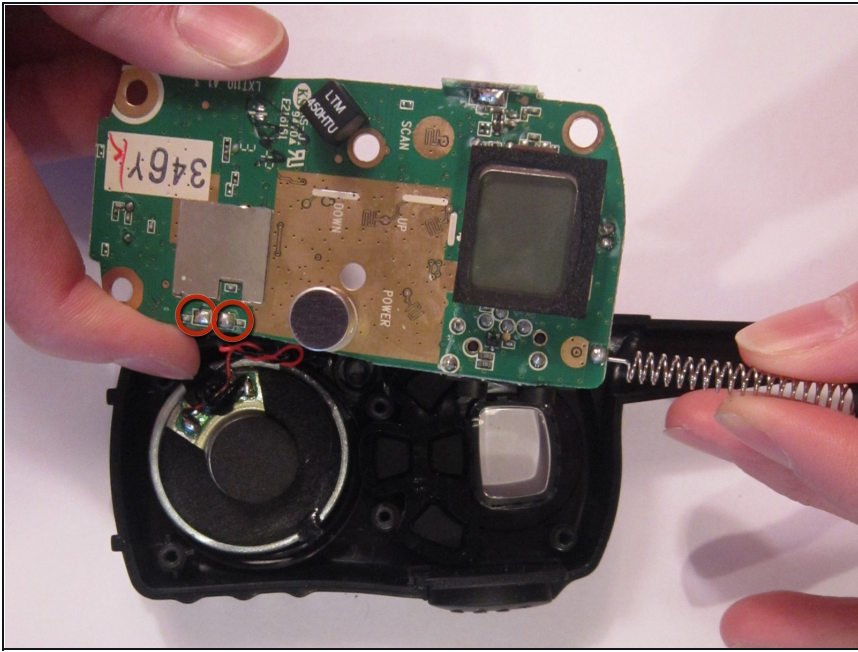

- Reattach the speaker wires and antenna to the new circuit board using a soldering iron. Take caution when using the *hot* soldering tool!

To reassemble your device, follow these instructions in reverse order.