



Razer Blade Stealth 2016 Battery Replacement

This guide is for a battery replacement on 2016...

Written By: Lindsay Grant



INTRODUCTION

This guide is for a battery replacement on 2016 Razer Blade Stealth Laptops. If your laptop isn't holding a charge (dies quickly) or needs to be plugged in to function, follow this guide to replace the battery of your Razer Blade Stealth 2016. You may find that the battery has leaked or expanded. Take care and use rubber gloves and/or eye protection when handling laptop batteries.

Please be mindful about recycling old batteries. We advise you to follow state/local recycling procedures when disposing old batteries.

PLEASE MAKE SURE TO TURN OFF POWER TO DEVICE PRIOR TO STEP 1.


TOOLS:

[T5 Torx Screwdriver](#) (1)
[iFixit Opening Tool](#) (1)

PARTS:

[Razer Blade RC30-0196 Battery](#) (1)

Step 1 — Battery

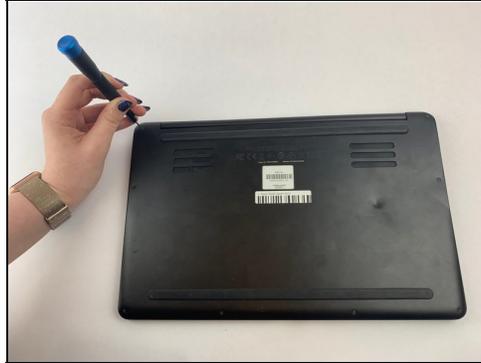


- Use a Torx screwdriver to remove the eight 3 mm screws on the back case.
- Remove the rear cover by prying up lightly starting in one of the corners.

Step 2



- Use a Phillips screwdriver to remove the six screws securing the battery.

Step 3

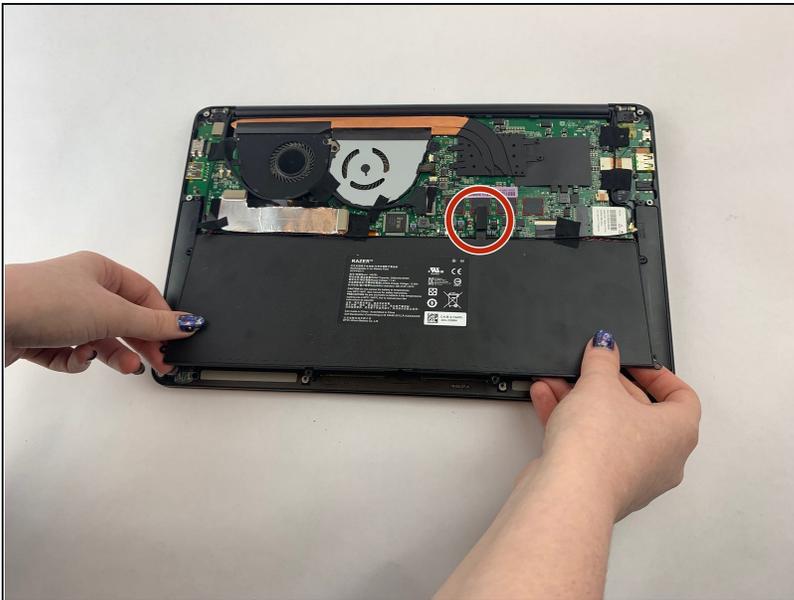

- Unplug the battery connector from the motherboard.
- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order, starting with the installation of your NEW battery.