



# OnePlus 5T Back Cover Replacement

Use this guide to remove the back cover on your...

Written By: Dominik Schnabelrauch



# INTRODUCTION


Use this guide to remove the back cover on your OnePlus 5T.

---

## TOOLS:

- [SIM Card Eject Tool](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Tool](#) (1)
  - [iFixit Opening Picks \(Set of 6\)](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [T2 Torx Screwdriver](#) (1)
-

## Step 1 — Back Cover

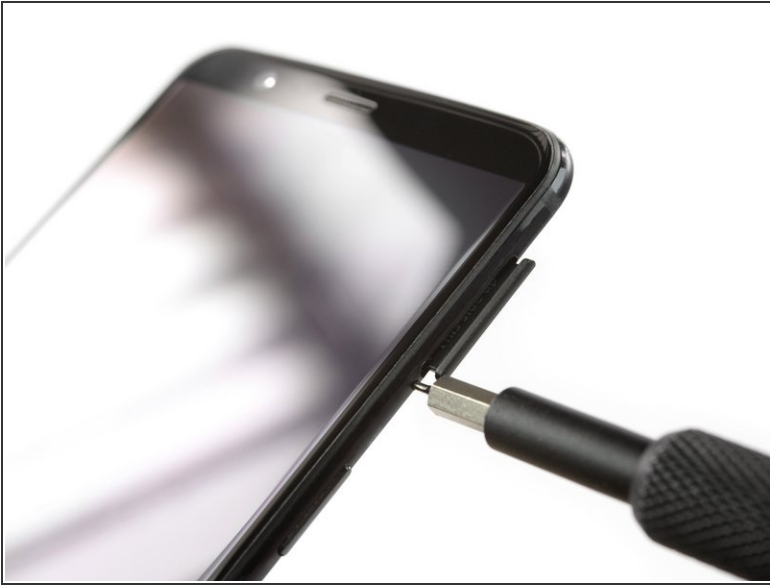

- Before you begin, switch off your phone.
- Remove the SIM card tray.

## Step 2



- Remove the two Torx T2 screws (2.5 mm length).
- The OnePlus 5T doesn't use a lot of adhesive to secure the backcover, however the clamps are very strong and require some force during the opening procedure.

### Step 3



- Insert an opening tool between the display and the backcover at the bottom end of the phone.
- Use the opening tool to create a gap between back cover and display.
- Insert an opening pick in the gap you created with the opening tool.

### Step 4



- Slide the opening pick to the bottom right corner of the phone.
- Insert a second opening pick and slide it to the bottom left corner of the phone.

## Step 5



- Slide the opening pick around the bottom left corner and then up along the left edge of the phone to open the plastic clamps that secure the backcover.

## Step 6



- Slide the opening pick around the bottom right corner and then up along the right edge of the phone to open the plastic clamps that secure the backcover.




## Step 7




- Try not to remove the backcover all the way yet. The fingerprint and the charging port and headphone flex cables are still connected to the motherboard.
- Flip your phone and carefully lift the bottom end of the backcover away from the phone assembly. Fold it to left and hold it at an 80° angle.

## Step 8

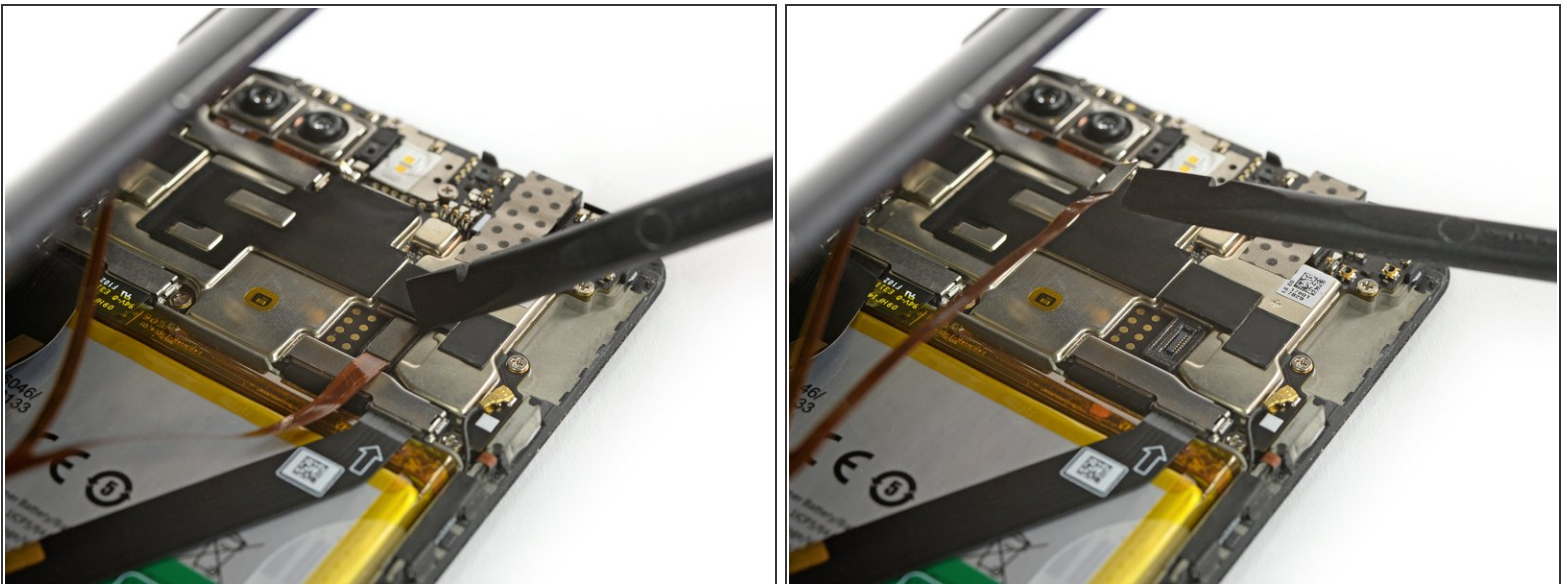




- Use a spudger to pry up and disconnect the fingerprint flex cable.

## Step 9

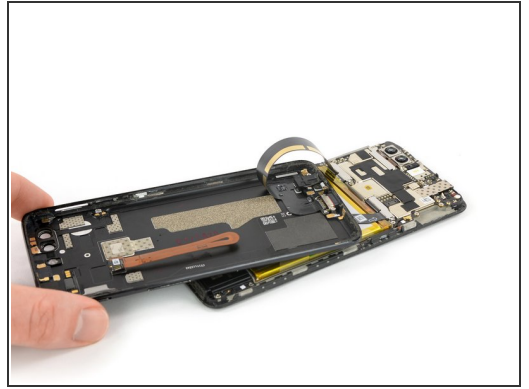


- Twist the backcover around 180° and lay it down to align the bottom end of the backcover the top edge of the battery.

## Step 10

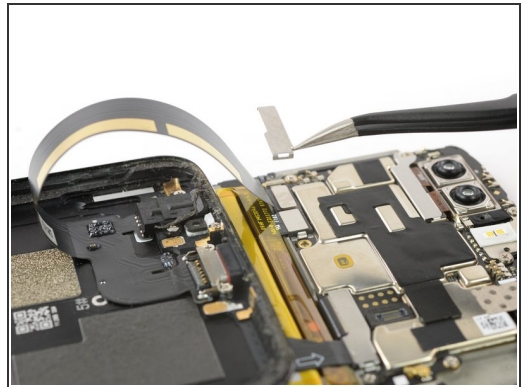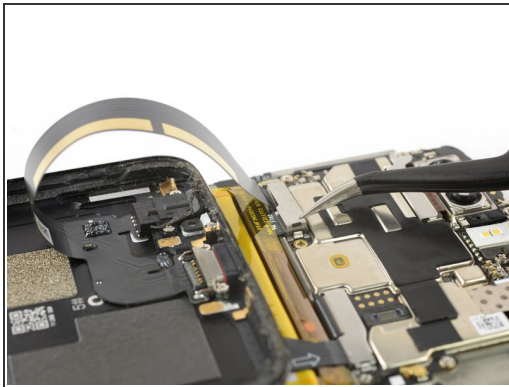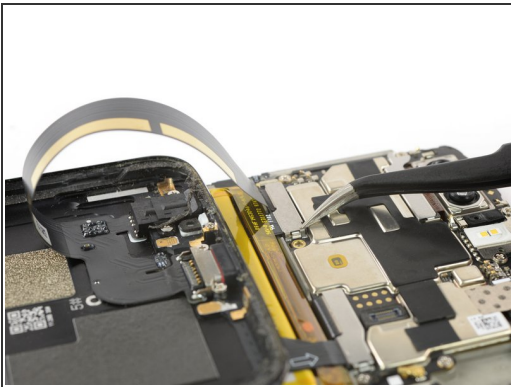


- Use a pair of tweezers to remove the small metal shield which covers the battery and the charging port and headphone jack flex cable connectors.

## Step 11

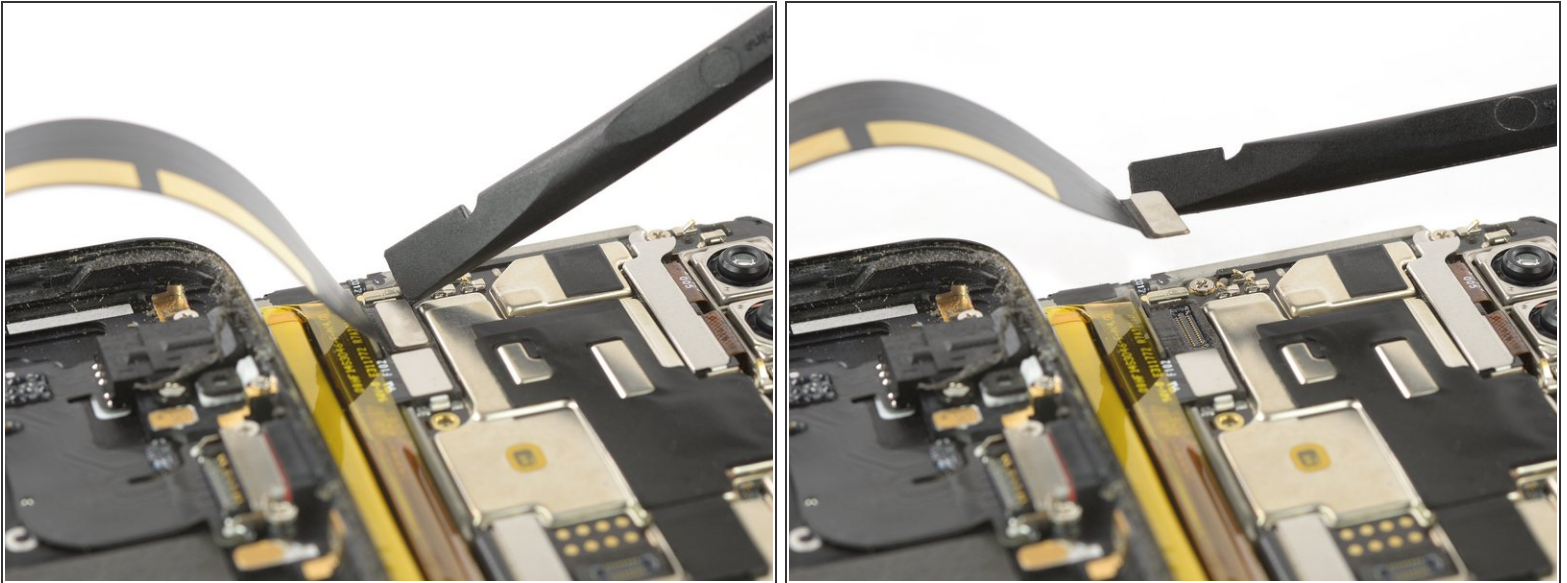

- Use a spudger to pry up and disconnect the charging port and headphone jack flex cable.

## Step 12

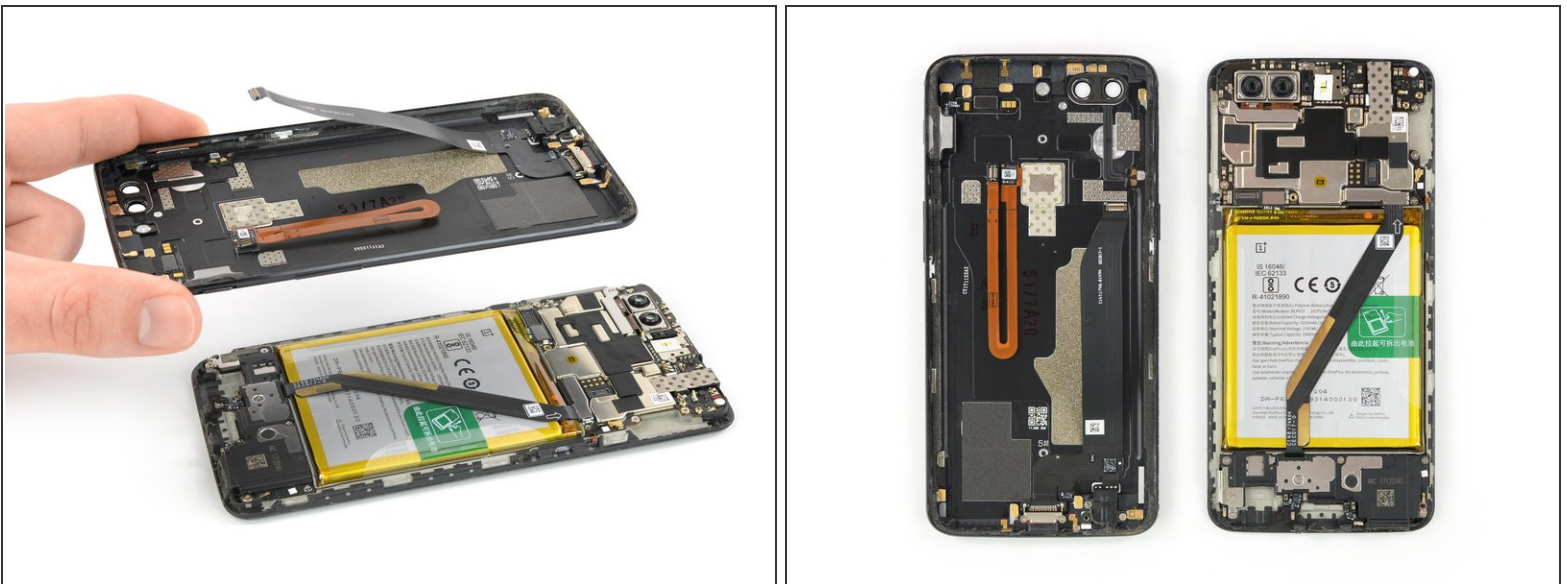

- Remove the backcover.



To reassemble your device, follow these instructions in reverse order. Apply new adhesive where necessary after cleaning the relevant areas with isopropyl alcohol (>90%).

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Check out our [Answers Community](#) for troubleshooting help.