




MacBook Pro 13“一体式2009硬盘更换

更换MacBook Pro 13“一体式2009上的硬盘

撰写者: Walter Galan

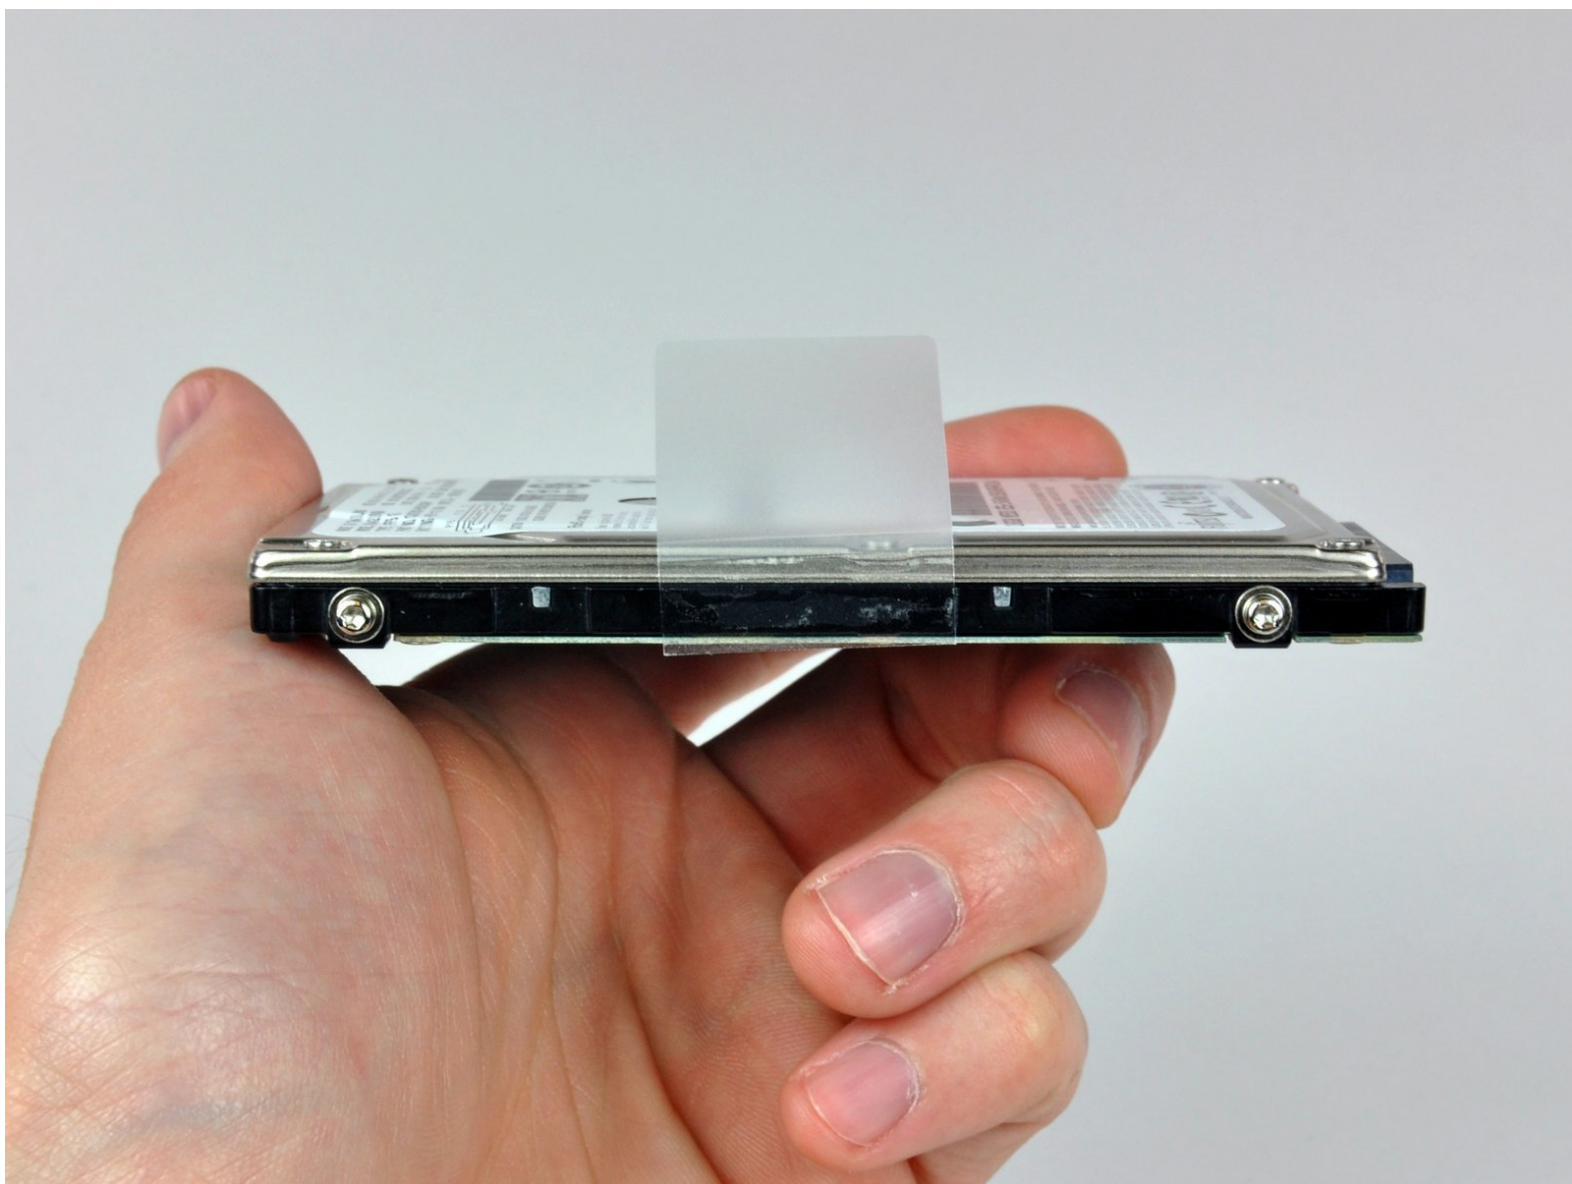

介绍

更换硬盘时，必须将四个定位销（用T6螺丝刀拆下）从旧硬盘换到新的。



工具：

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)



章节：

- [MacBook and MacBook Pro \(Non-Retina\) SSD Upgrade Bundle](#) (1)
- [1 TB SSD Hybrid 2.5" Hard Drive Upgrade Kit](#) (1)
This kit contains the drive and all tools needed.
- [500 GB SSD Hybrid 2.5" Hard Drive Upgrade Kit](#) (1)
This kit contains the part and tools needed.
- [250 GB SSD](#) (1)
- [500 GB SSD](#) (1)
- [1 TB SSD](#) (1)
- [500 GB 5400 RPM 2.5" Hard Drive](#) (1)
- [1 TB 5400 RPM 2.5" Hard Drive](#) (1)
- [320 GB 5400 RPM 2.5" Hard Drive](#) (1)
- [MacBook Pro 13" Unibody Hard Drive Bracket](#) (1)
- [Universal Drive Adapter](#) (1)

步骤 1 — 后壳




- 移除下列将 MacBook Pro 13" Unibody后壳固定的 10个 螺丝:
 - 7个3 mm Phillips螺丝
 - 3个13.5 mm Phillips 螺丝

步骤 2



- 轻轻提起后壳然后推向电脑的后方来松开卡舌。

步骤 3 — 电池

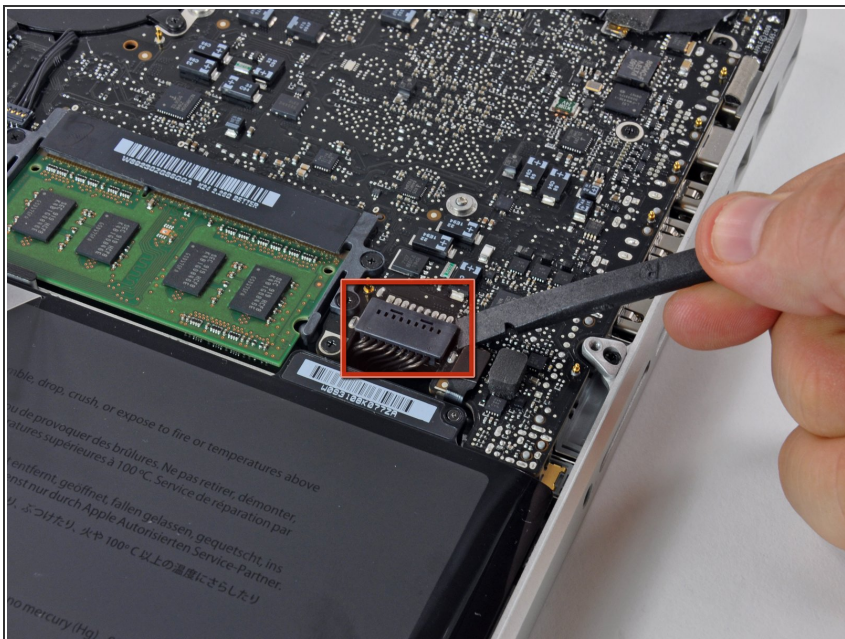

⚠ 为了预防意外发生，我们建议您从逻辑板上断开电池连接器，以避免任何放电。

- 使用一个平端撬棒将电池连接器分离逻辑板插座。

步骤 4 — 硬盘



- 拆下将硬盘固定到支架上盖上的两个十字螺丝。

i 这些螺丝固定在硬盘支架上。

步骤 5



- 将固定支架从上盖上提起。

步骤 6




- 通过其拉片提起硬盘，并将其从外壳中拉出，将电线连接到电脑上。

步骤 7



- 将硬盘的电线从硬盘上拔下即可。

步骤 8 — 硬盘

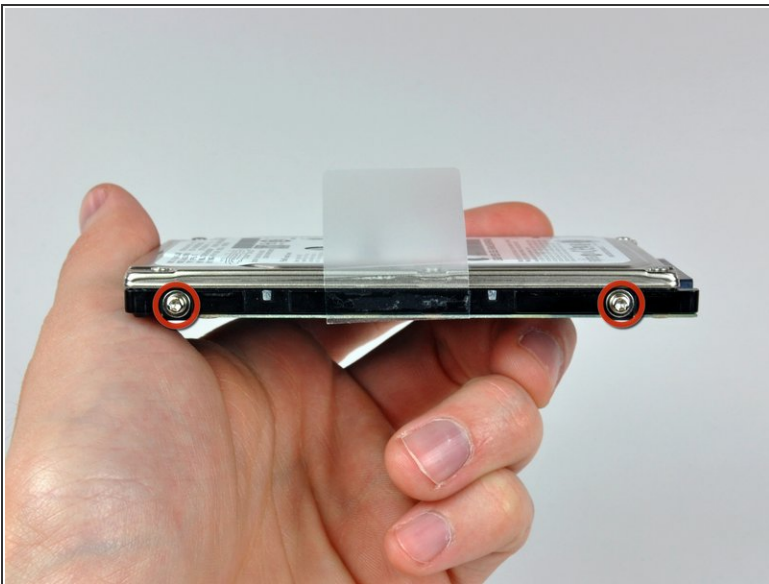

- 从硬盘的每一侧（总共四个螺丝）拆下两个T6梅花螺丝。
- ✦ 如果您正在更换硬盘，则需要将这些螺丝装到新的硬盘上。
- ℹ 如果您正在安装新的硬盘，我们有一个OS X安装指南，让您开始运行。

要重新组装您的设备，请按照该指南并按照相反的顺序重新组装。