



# Lenovo Yoga 910-13IKB Trackpad Replacement

If your device isn't properly registering...

Written By: Isaiah M Allgeyer



# INTRODUCTION

If your device isn't properly registering clicks or if the cursor isn't properly tracking your finger movements, it may be time to replace the trackpad. Follow these instructions to replace the trackpad in the Lenovo Yoga 910-13IKB.



## TOOLS:

T5 Torx Screwdriver (1)  
Phillips #0 Screwdriver (1)  
iFixit Opening Tool (1)

## PARTS:


Lenovo IdeaPad Yoga 910-13 Upper Case (1)

### Step 1 — Back Panel

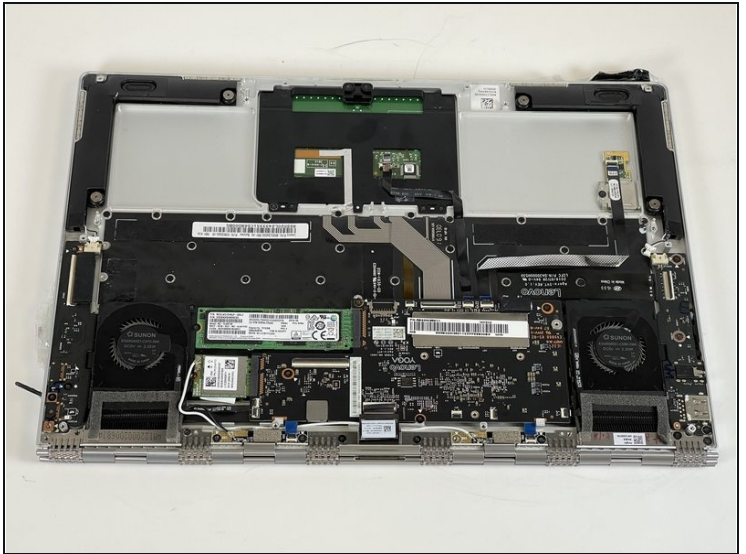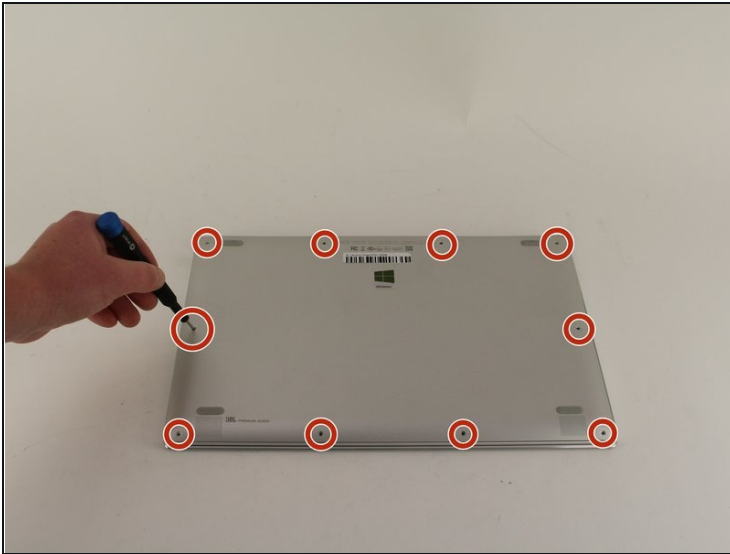



- Turn the laptop over and remove the ten Torx T5 screws along the perimeter of the bottom panel using the T5 Torx Screwdriver.
- Remove the back panel from the device exposing the components.

## Step 2 — Battery

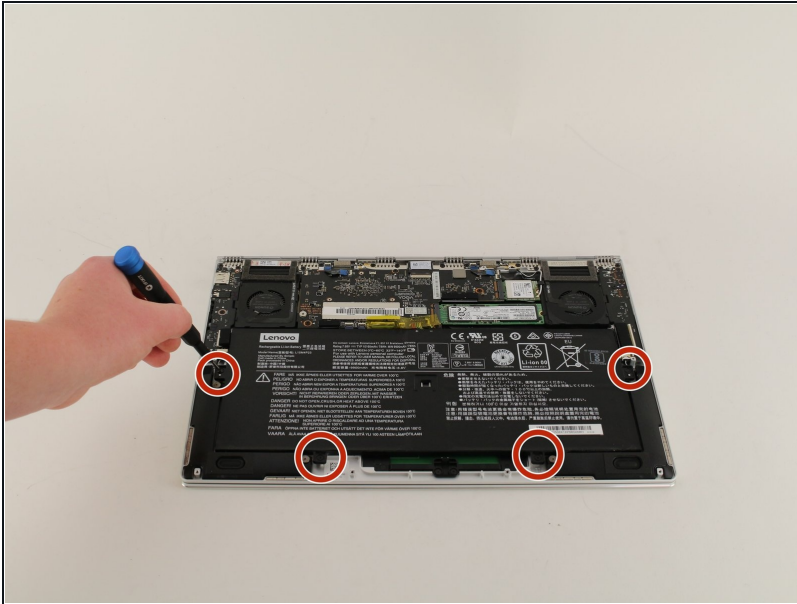

- Remove the four 3 mm Phillips #0 screws holding the battery in place.

## Step 3

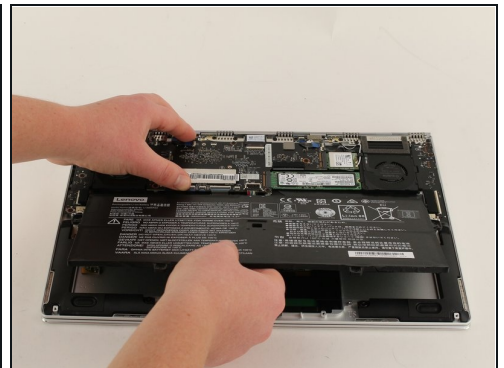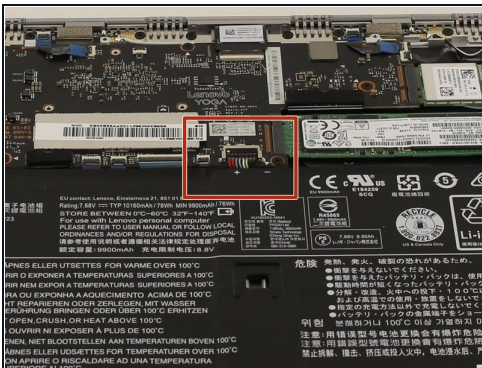


- Disconnect the battery cable from its motherboard socket by gently pulling it towards the battery. The spudger tool may be needed to lift the flap seal.

⚠ Pull parallel to the battery, not straight up.

ⓘ Pull evenly on the width of the cable so that no individual wire is overly strained.

- Lift the battery out.

## Step 4 — Trackpad

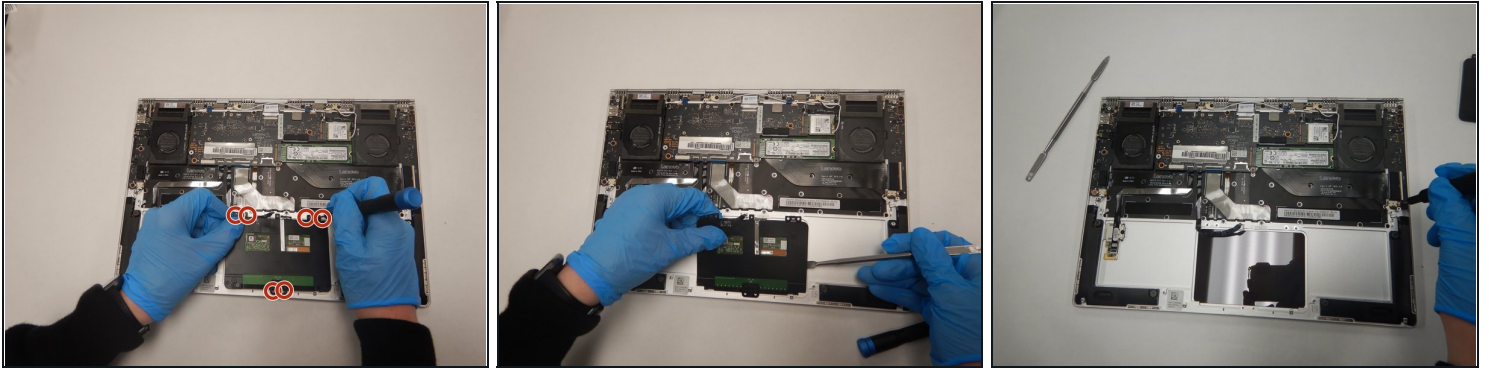

- Using the Phillips #0 screwdriver, remove all six screws holding the trackpad to the device.
- Find the ribbon cable, the black bundle of wires attached to the trackpad, and lift the head of the ribbon cable towards you.
- Carefully lift up the trackpad and remove it from the device.

---

To reassemble your device, follow these instructions in reverse order.