



# why! W650SZ Keyboard Replacement

Written By: Felice Suglia





## TOOLS:


- [Phillips #0 Screwdriver](#) (1)



## PARTS:

- [Pièces détachées pour W650SZ CH](#) (1)
- [Pièces détachées pour W650SZ EU](#) (1)

## Step 1 — Battery

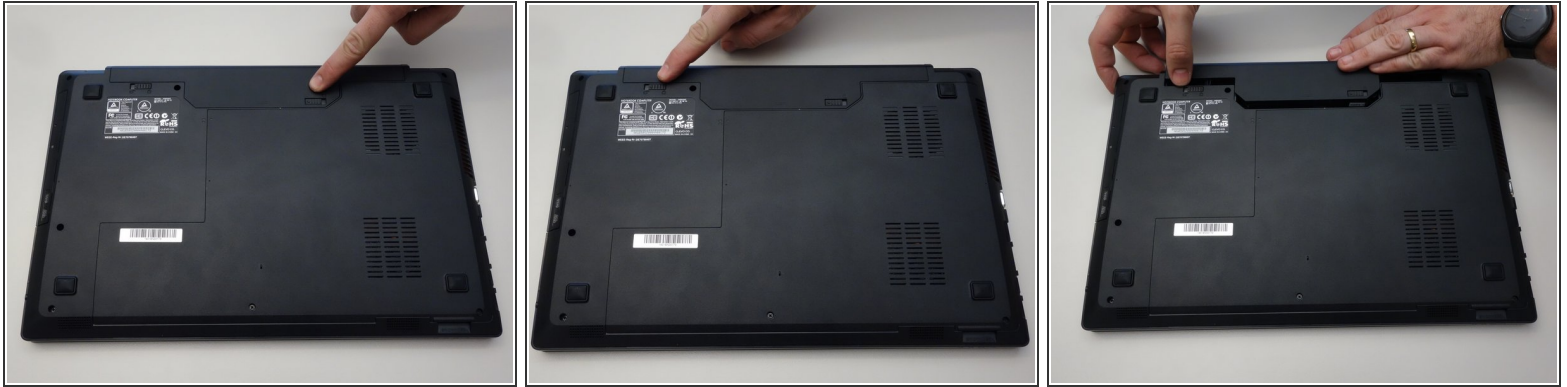


- Slide the latch on the right to the unlocked position.
- Slide the latch on the left to the unlocked position.
- Remove the battery pack from the slot.

## Step 2 — why! W650SZ Bottom Cover Replacement




- With your #0 Philips screwdriver remove the 2 screws from the bottom panel.
- Now you can remove the bottom cover.

## Step 3 — Keyboard

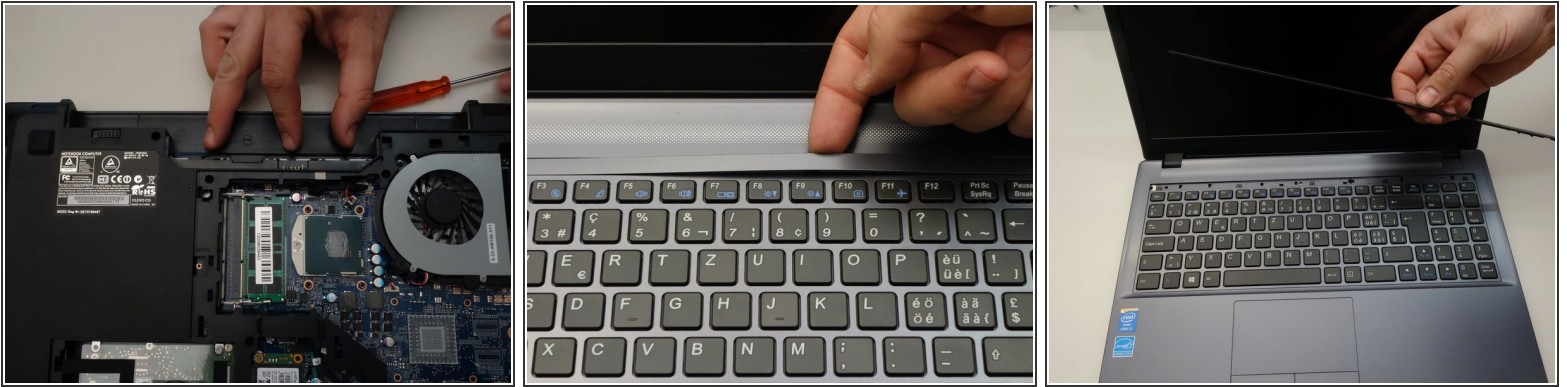

- Press gently at the points indicated to release the LED cover strip.
- Turn the laptop over, then lift the LED cover.
- Remove the LED cover.


## Step 4

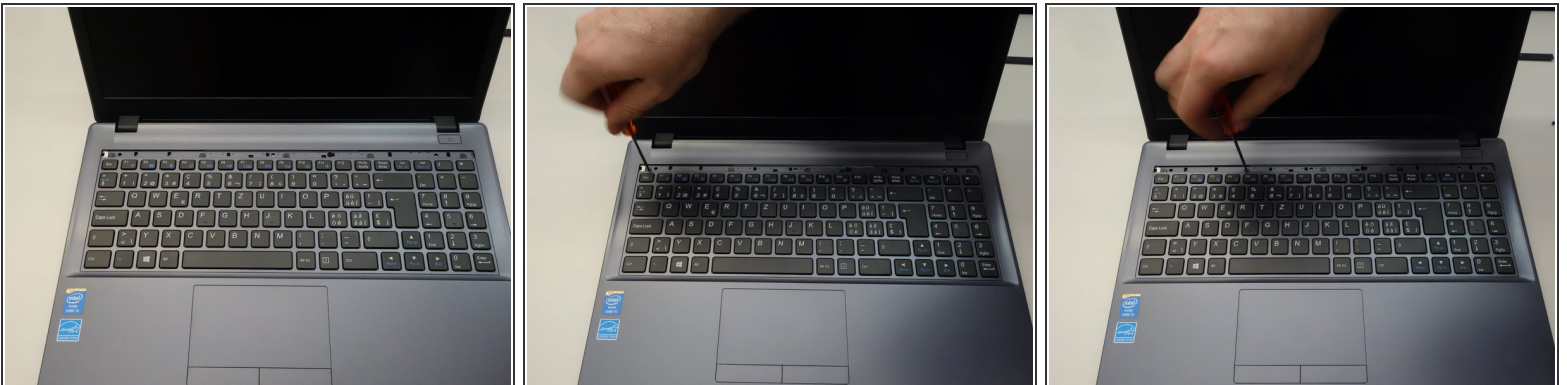

- The five screws that anchor the keyboard are now visible.
- Start by removing the first screw.
- Remove the remaining screws (2-5).




## Step 5

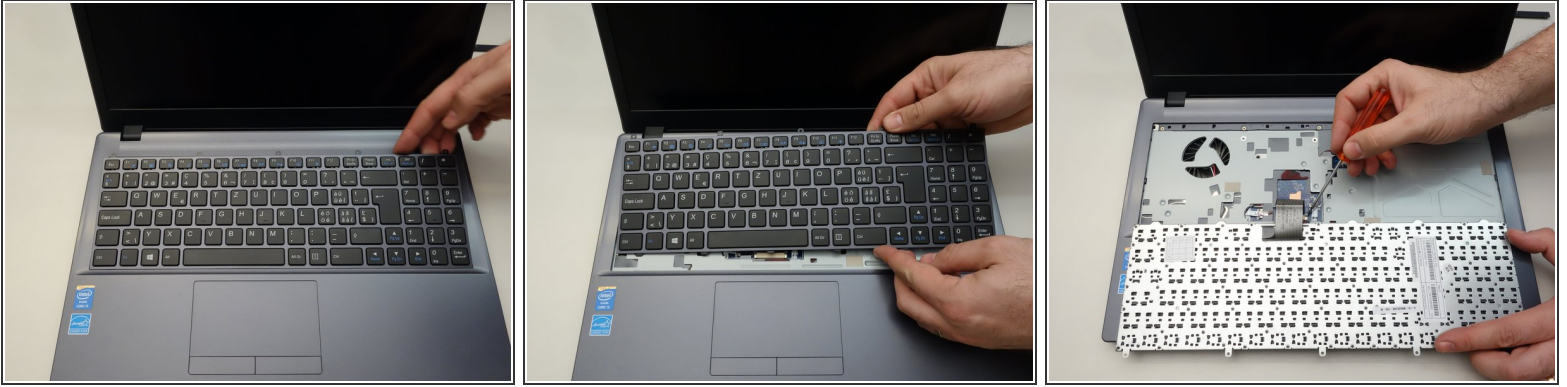

- Dismount the keyboard from the chassis.
- Flip the keyboard forward, taking care as it is still connected by a cable to the motherboard.
- Release the cable latch on the right side of the motherboard connector with a small flat blade screwdriver.

## Step 6

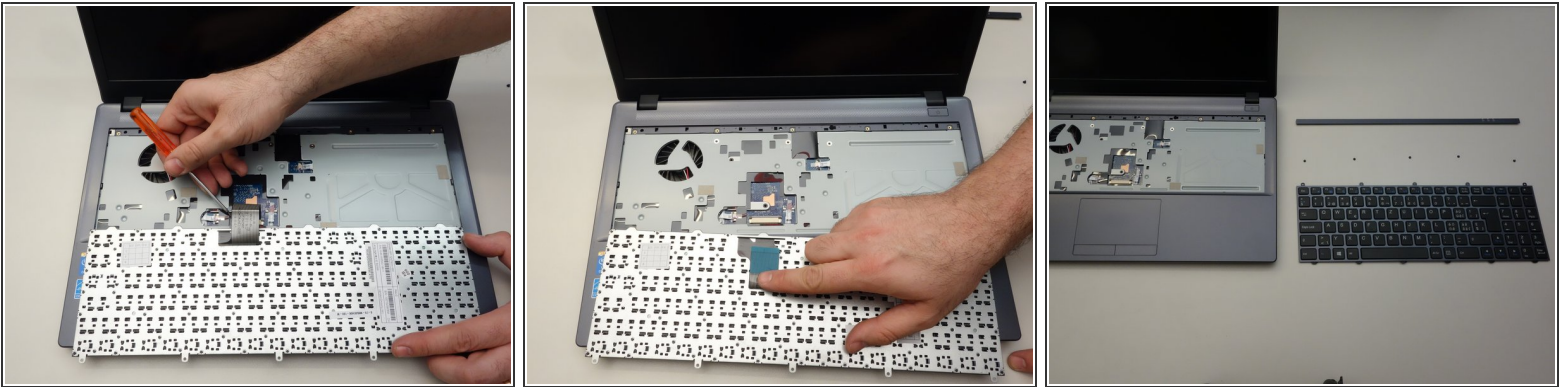

- Release the cable latch on the left side of the motherboard connector.
- Slide the cable straight out from its connector.
- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.