



why! W650SZ CPU Fan Replacement

Written By: Felice Suglia



INTRODUCTION

Fan disassembly for cleaning or replacement.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Pièces détachées pour W650SZ CH](#) (1)
- [Pièces détachées pour W650SZ EU](#) (1)

Step 1 — Battery

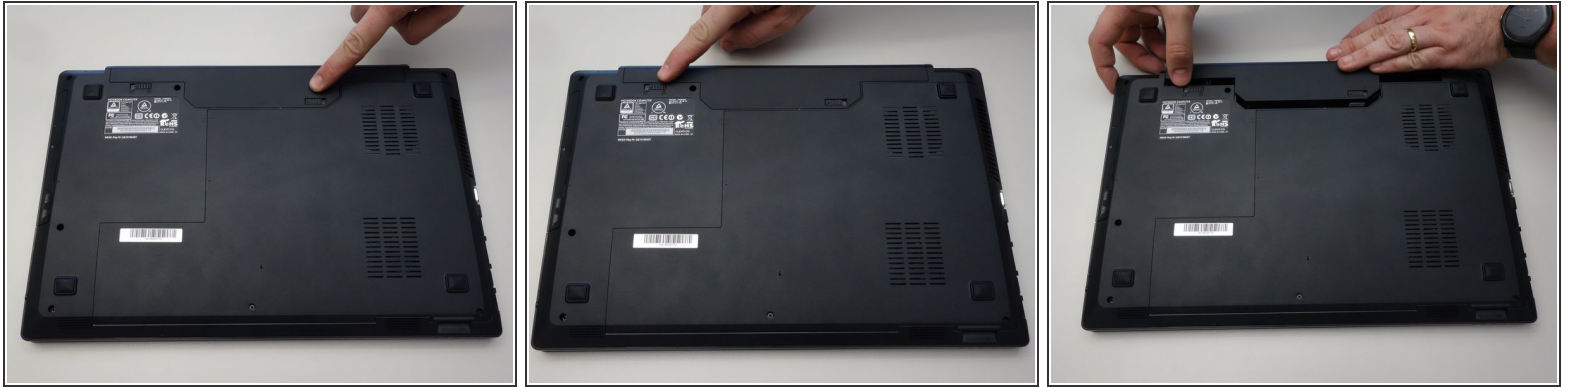


- Slide the latch on the right to the unlocked position.
- Slide the latch on the left to the unlocked position.
- Remove the battery pack from the slot.

Step 2 — why! W650SZ Bottom Cover Replacement




- With your #0 Philips screwdriver remove the 2 screws from the bottom panel.
- Now you can remove the bottom cover.

Step 3 — CPU Fan

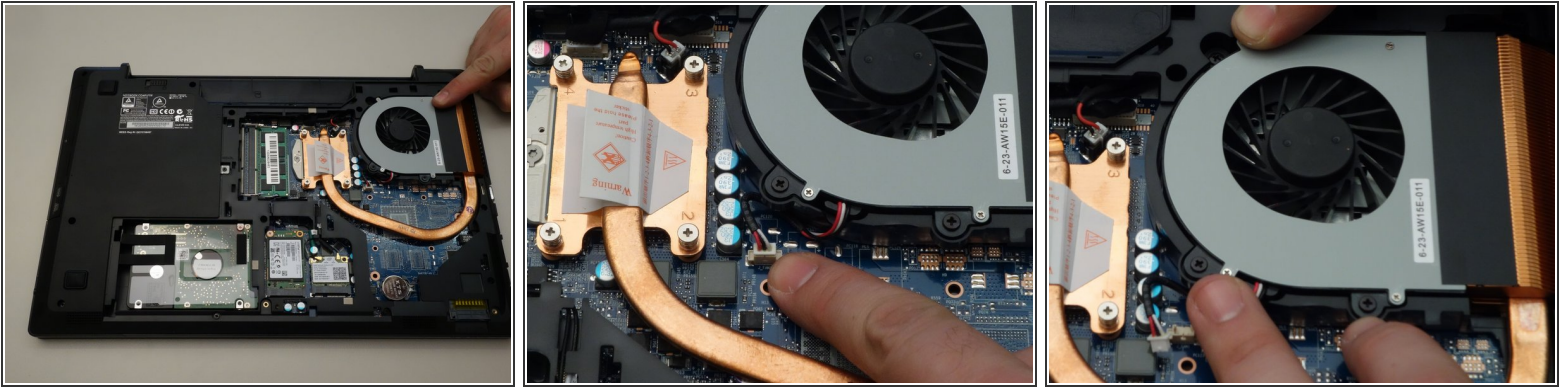

- Start by locating the fan.
- Unplug the power cable from the motherboard.
- Remove the three screws that secure the fan.

Step 4

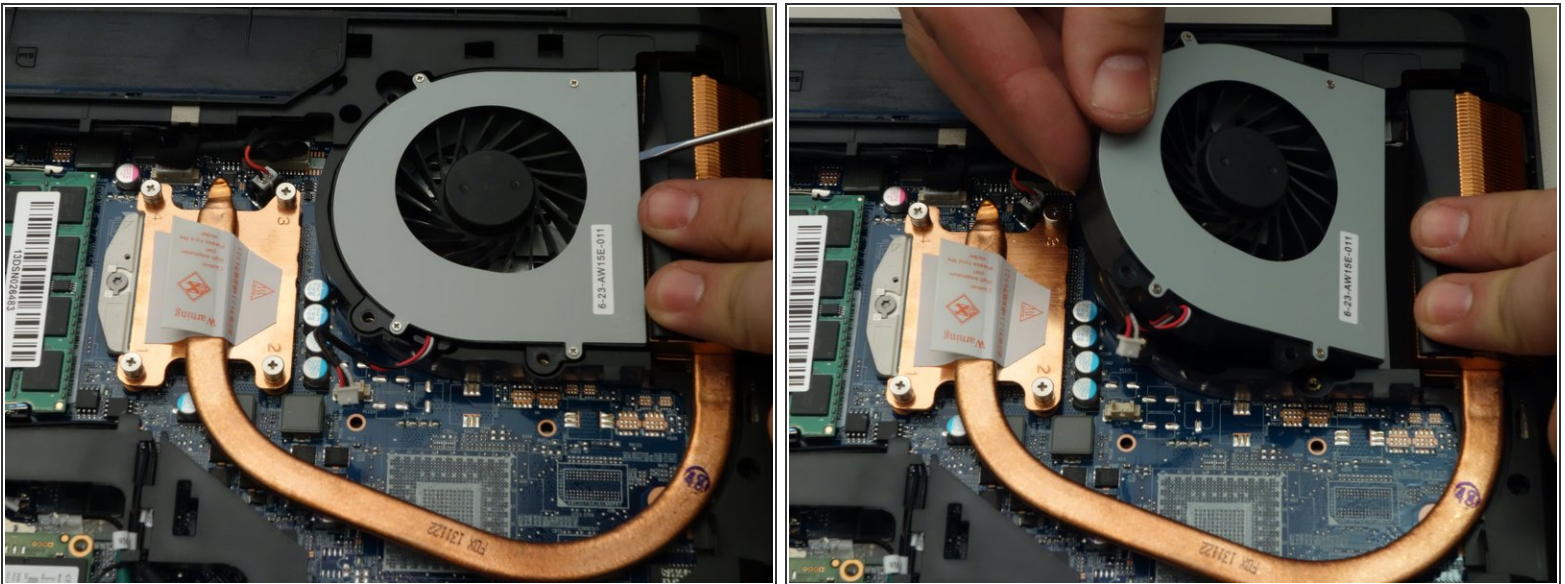

- Pry the fan up slightly with a flat blade screwdriver.
- Lift the fan up to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2022-08-27 08:24:09 PM (MST).

