

Asus VivoBook X540N HDD to SSD Replacement

Written By: Simeon Brankov





- Phillips #00 Screwdriver (1)
- Spudger (1)




- 1 TB SSD (1)
- 250 GB SSD (1)
- 500 GB SSD (1)
- 2 TB SSD (1)

Step 1 — Opening the laptop





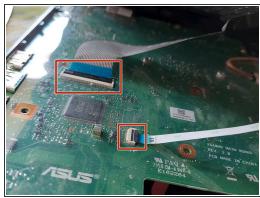

- First of all you need to remove the 10 screws holding the laptop together.
- Then use plastic or metal spudger to separate the bottom cover from the keyboard and touchpad assembly.
- Once you open it, carefully unplug the keyboard and touchpad connectors. Be very careful not to damage them!

Step 2







- Once you open it, it should look like this.
- You need to unscrew the only screw (marked in red) to be able to remove the HDD.
- When you do that, just unscrew the 4 screws attatching the HDD to the bracket and replace it with the new one.

To reassemble your device, follow these instructions in reverse order.