




Razer Blade Stealth 2016 Speakers Replacement

The speakers in your Razer Blade Stealth 2016...

Written By: SadieGomez

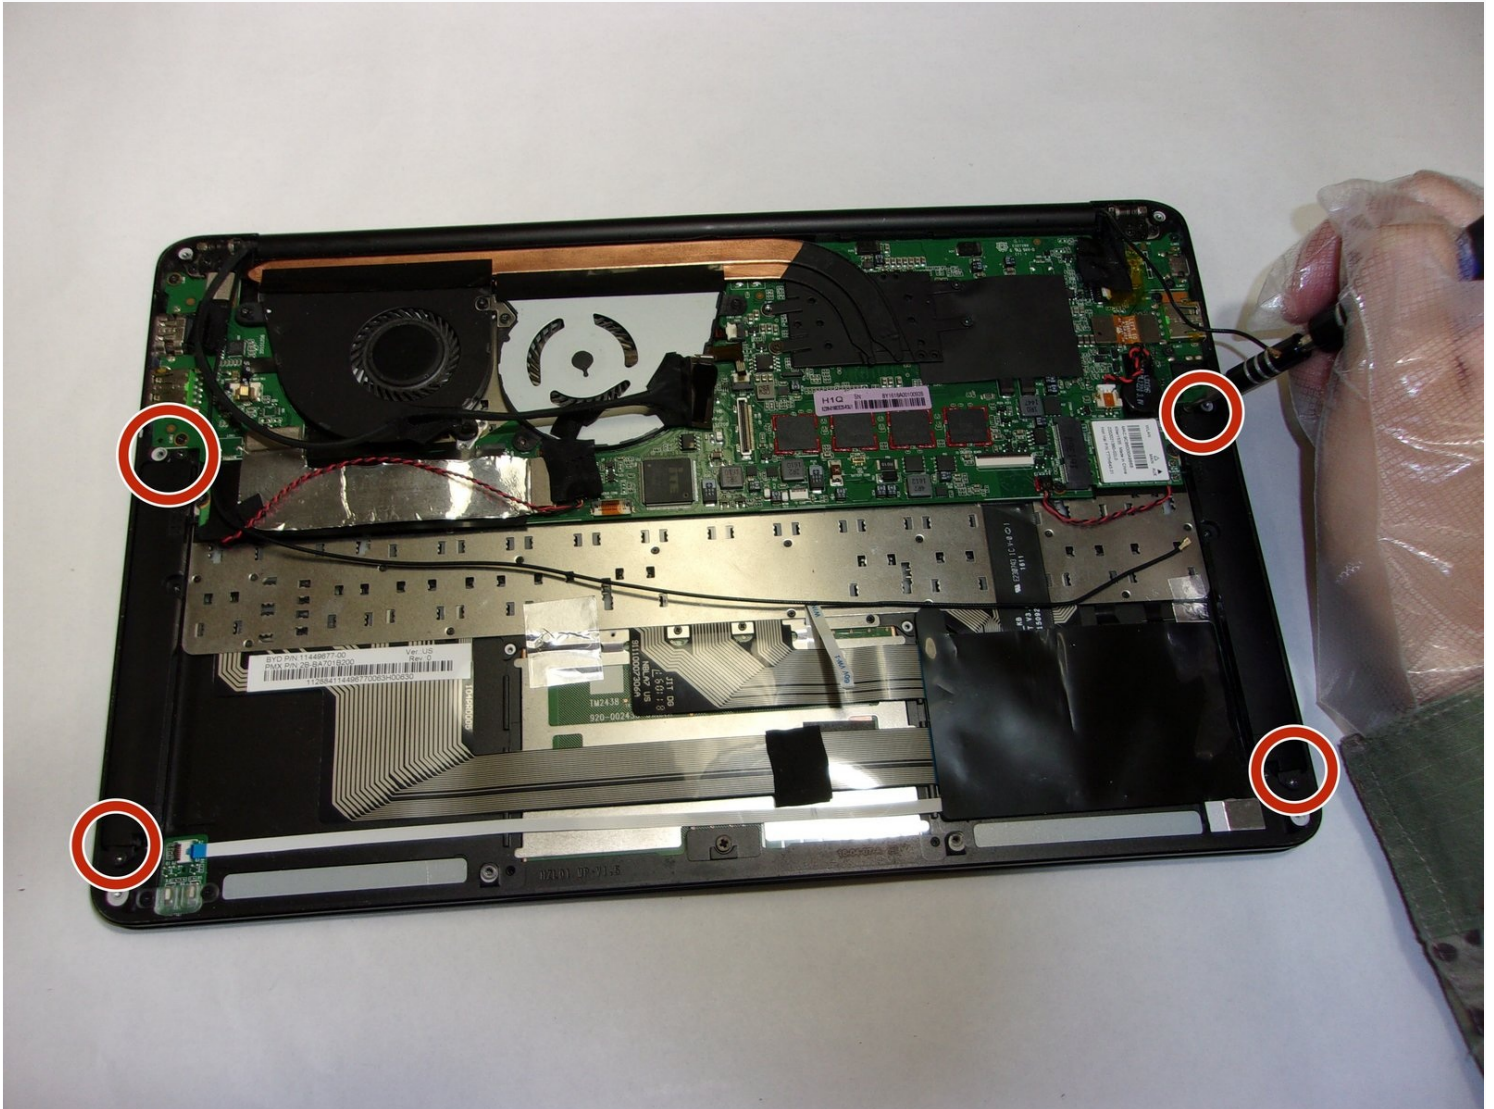

INTRODUCTION

The speakers in your Razer Blade Stealth 2016 (Model # RZ09-01682E20) are the only source of sound in your laptop besides Bluetooth and the headphone jack. So if your speakers fail, you might want to replace them. This guide will show you how to remove and replace the speakers in your Razer Blade Stealth 2016.

TOOLS:

[iFixit Opening Tool](#) (1)

[T5 Torx Screwdriver](#) (1)

[T4 Torx Screwdriver](#) (1)

Step 1 — Battery



- Use a Torx screwdriver to remove the eight 3 mm screws on the back case.
- Remove the rear cover by prying up lightly starting in one of the corners.

Step 2




- Use a Phillips screwdriver to remove the six screws securing the battery.

Step 3



- Unplug the battery connector from the motherboard.
- Remove the battery from the device.

Step 4 — Speakers

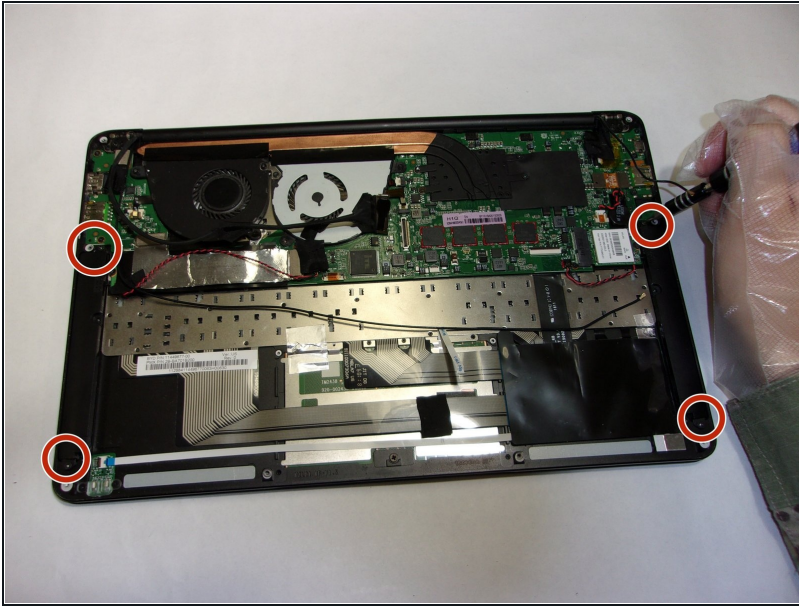

- Remove two 3.4 mm screws from each speaker using a T4 Torx screwdriver.
- Remove the speakers from the laptop.

To reassemble your device, follow these instructions in reverse order.